




Oil-Filled Radiators
User Instruction Manual

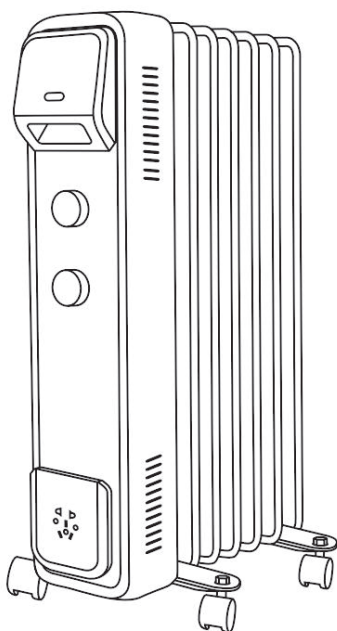

NSC-150-7B2
MADE IN CHINA

- Thank you very much for buying our products.
- Please read the instructions carefully before using it.
- Please keep the instructions properly.

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

- 1) Read all instructions before using this heater.
- 2) This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least a 3ft (0.9 m) from the front of the heater and keep them away from the sides and rear.
- 3) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 4) Always unplug heater when not in use.
- 5) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Consult a qualified technician for examination and/or repair.
- 6) Do not use outdoors.
- 7) This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container.
- 8) Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 9) To disconnect heater, turn controls to off, then remove plug from outlet.
- 10) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 11) To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 12) A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 13) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 14) Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- 15) Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
- 16) To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants or individuals with reduced physical, sensory, or mental capabilities.
- 17) Keep this heater at least 12 inch (31cm) from the wall.
- 18) This heater is filled with a precise quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak.
- 19) DO NOT COVER: to avoid overheating, do not cover the heater.

Technical parameters

Model	Specification	Rated Voltage	Rated Frequency	Rated Power
NSC-150-7B2	7 fins	120V~	60Hz	1500W

Method of use

1. Open the packing box, take out the body and confirm whether the
2. Before use, please make sure that the rated voltage of the power socket is 120V AC, and there is a reliable and safe grounding device.
3. The electrical oil heater can only be used after the casters are properly installed. Refer to *Caster Installation Method*.
4. Method of using the type:(1) Rotate the thermostat clockwise to the top
(2) Turn on the power switch to start heating. If you need to heat up quickly, adjust the power switch to the highest power.
(3) When the room temperature meets your needs, you can adjust the thermostat back until hear "click".
At this time, the electrical oil heater will enter a constant temperature state and the thermostat will operate as the temperature rises and falls.

Installation method

*Installation method of casters:



1. Invert the electrical oil heater with bottom up.
2. Fix the caster board on the electrical oil heater body ..
3. Install the casters on the baseboard.
4. After installation, turn the electrical oil heater over with casters on the ground and rest it for 3 to 5 minutes before use.

(The technology is under continuous improvement, no further notice will be given if there are any changes.)

Maintenance

1. External cleaning must be done after the switch is turned off, the power plug is unplugged and the machine is cooled.
2. Do not use it in a high temperature environment or in an open flame to avoid discoloration or deformation of the machine.
3. Clean and maintain as shown.
4. After cleaning and maintenance, put the parts into the packing box in the original packaging order.
5. When the machine is not in use, store it in a place with good dry and ventilated conditions and avoid crushing and collision.
6. This machine only needs the general external cleaning and maintenance, namely, use a soft cloth with a neutral detergent to remove dirt from the surface of the machine, and then dry it with a dry cloth.
7. Do not rinse it directly with water.
8. Do not use thinner, toluene, acid lotion, lamp oil or chemical rag to avoid discoloration or deterioration.

Cleaning and maintenance

1. When the machine is not used for a long time, please clean it. After it is dry,put the machine body and components into the packaging box according to the original packaging sequence, and then place it in a dry place for safekeeping.2. Before cleaning, please cut off the power supply and wait until the machine is completely cooled.3. Do not wash the machine with water. Wipe it with a clean soft cloth containing a little neutral detergent.4. After cleaning, the machine can be powered on for use only after it is fully dried.

Troubleshooting

PROBLEM	PROBABLE CAUSE	SOLUTION
Unit does not start	The power cord is not plugged or poorly connected.	Plug Power Cord into electrical outlet.
Unit unable to run	Overheat temperature is reached.	Unplug the heater and wait 10 minutes for the heater to cool down and power it on again when the ambient temperature drops below 122°F.
	Desired temperature setting is reached.	Check your thermostat setting. The heater may be off because it has reached the desired temperature setting.
	Tip-Over protection.	Place the heater back on a flat, level and stable surface.

Disposal Environmental Protection



Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.