

 
1. Brief Introduction

This candy floss machine take sugar as main material, it can produce more taste, more colors candy floss if you add some special flavors. Then the output will not be only white, more colors such as red, yellow, blue, green, orange and so on. More taste such as apple, strawberry, juicy-peach, watermelon, lichi, mango etc., It won't not only healthy, but also delicious.

2. Main parameter

Model	ET-MF-IJ-720	ET-ME01	ET-ME01	ET-ME05	ET-ME05
Dimensions	530*530*340mm	530*530*340mm	530*530*340mm	530*530*340mm	530*530*340mm
Heating power		980 W	980 W	980 W	980 W
Motor power		30 W	30 W	30 W	30 W
Voltage		220V/110V	220V/110V	220V/110V	220V/110V
Frequency		50Hz/60Hz	50Hz/60Hz	50Hz/60Hz	50Hz/60Hz
Yield		1/30sec	1/30sec	1/30sec	1/30sec

3. Structure of machine

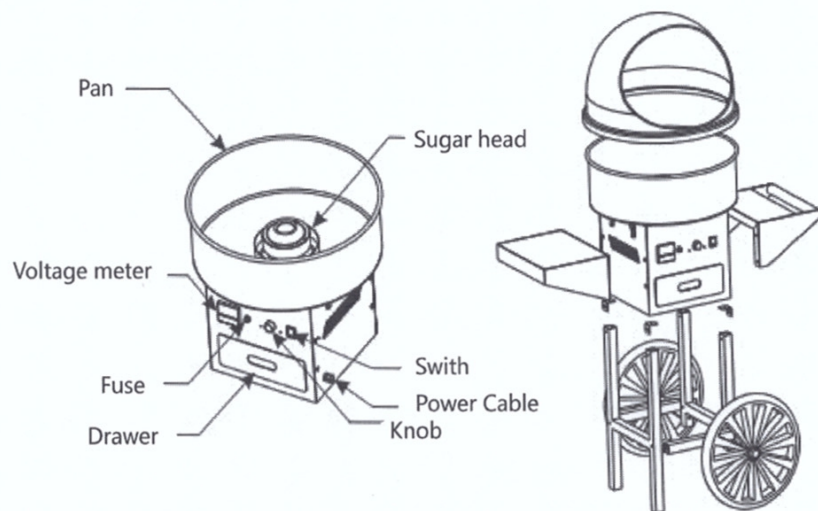

4. Preparation

1. Please read the instruction book carefully before using, know the machine structure, performance, main spare parts, and safety operation as well, then we can make good use of this machine, get a better working effect.
2. After taking the machine out of the packing carton, fit the spare parts to the right place.
3. The user should clean the heating head and the stainless steel pan firstly, the water will be thrown out when the head runs, then swept it with soft cloth.
4. This machine should be put on the strong worktable, and also should have a suitable distance with the ground.
5. Before turn on the machine, the user should check whether the electric voltage is same with the machine voltage, whether the electrical outlet meet the safety standard, whether you have installed the swith of creepage protecting.

5. Operating instructions

1. When move the machine, press down little the handle to make sure the cart front legs leave the ground.
2. Turn on the power switch to let the machine run for 1-2 minutes, pls check whether the machine runs steady or not. (It need to adjust if the machine shakes strongly, the user must make sure the machine put steady and the head runs right)
3. Turn on the booster to the biggest, then let the machine warm-up about 4-5 minutes. (the power higher, the heating speed quicker.)
4. Put one spoon clean granulated sugar into the central of running head.
5. The candy floss will get out after 3seconds, then use a bamboo stick or ther related object to stick the candy floss, revolve follow the inside of the pan. (the bamboo stick need clean with wet cloth)
6. After finishing the candy floss, pls don't stop the machine at once, clean the turning dish with water (keep the head runing then put little water into the inlet), turn off the swith, then sweep the head with soft cloth. if you want more candy floss, just repeat the above steps is ok.

6. Attention

1. Children are forbidden to use this machine.
2. Have to use electrical outlet with ground line. Keep the cable away from the heat; Don't immerse the cable, electrical plug and the machine into water or other liquids;

 
 
- 3, Install the heating head and pan correctly, then put into the plug, Turn off the power switch when stop working, move the pan and clean it with water.
- 4, Don't touch the surface of the head and heating head when working, and don't put the hand into the pan if still sugar inside, in case of being burnt, and also don't move machine when working.
- 5, Do not touch with plug, electric cable when they are moistened by water, in case of being shocked by electricity.
- 6, The temporary piece rate of electric motor is 80%, pls avoid the long time continuous working as to prolong the service life of the electric motor, it should pause for 20 minutes after working continuously for an hour.
- 7, No matter clean the machine, or maintain it, it should close power supply, and pull out electrical plug firstly; Disallow this machine empty running for long hours.
- 8, Don't use detergent when sweeping, in case of the detergent left on the machine result in a pollution, It also can't be washed with water directly, for this may moisten the electric spare parts and damage the machine.
- 9, If the heating head doesn't run, pls turn off the power switch, clean the burnt sugar inside with soft cloth.

Candy Floss Machine

Instruction Book

7. Electrical data

- L----- 3x0.75/1.5 Cu wire
- K----- 15A/220V/110V Switch
- Fu----- 5A/10A fuse
- D----- 80W/220V/110V Ac motor
- W----- 20V-220V linearity booster
- V----- 220V/110V Ac voltage meter
- R----- 950W/220V/110V heating piece

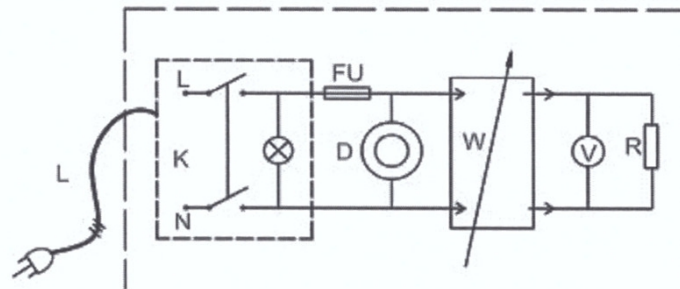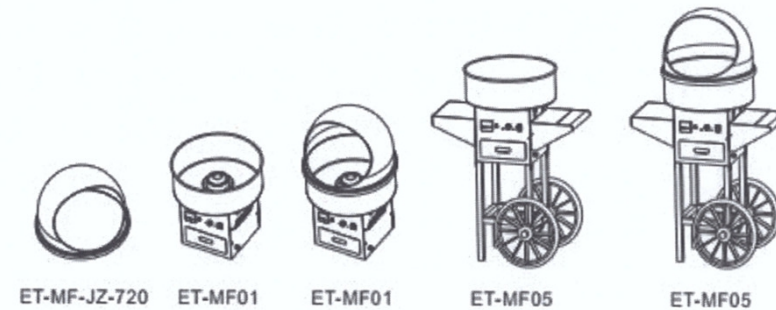

Please read the introduction before using it