 
 


TWIN-TUB WASHING MACHINE

INSTRUCTION MANUAL

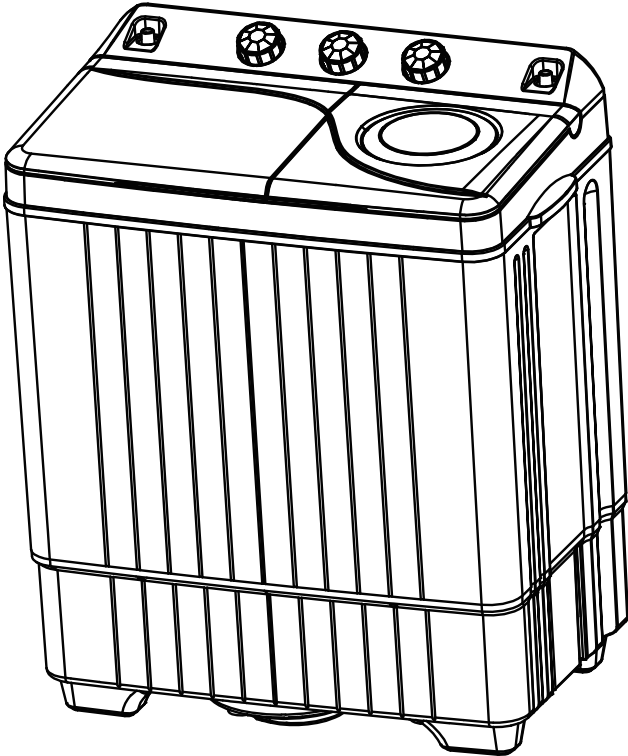

 
PARTS

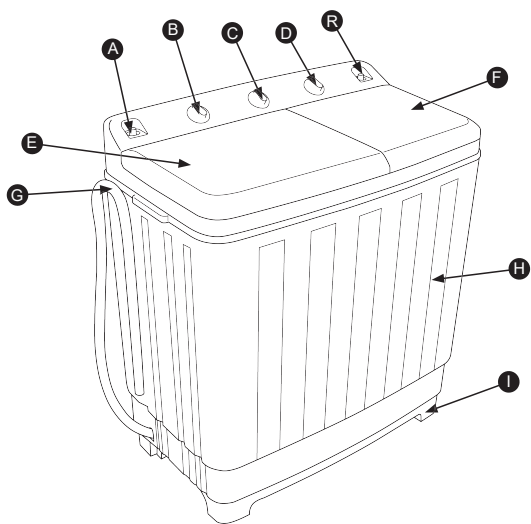

- A. Wash Inlet Port
- B. Wash Timer Knob
- C. Wash Selector Knob
- D. Spin Timer Knob
- E. Washer cover
- F. Spin Dryer Cover
- G. Drain Hose
- H. Machine Cabinet
- I. Base

- J. Filter
- K. Washer tub
- L. Pulsator
- M. Spin Dryer lid

- N. Spin Dryer Tub
- O. Spin Dryer Safety Cover
- P. Water Inlet Hose
- Q. Inlet pipe collet
- R. Spin Inlet Port

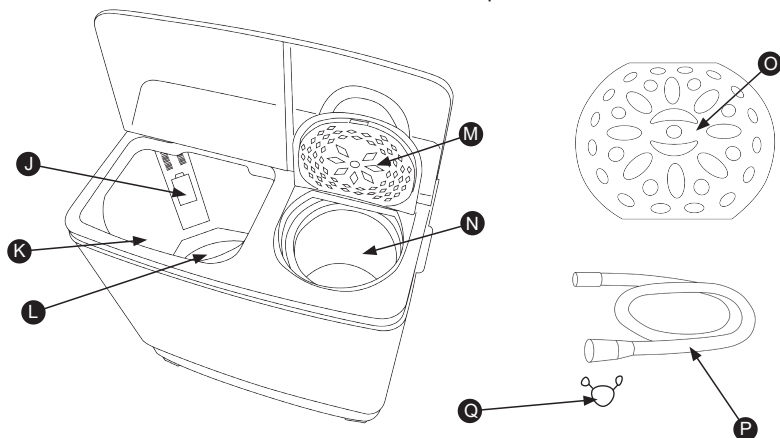

INSTALL

 
INSTALL IT IN THE FIRMLY AND SMOOTH PLACE

- ★ Washing machine should be installed in the firmly and smooth ground, 2° bevel is allowed.
- ★ Put the washing machine deviate from the wall for more over 5cm, so that have no noise.





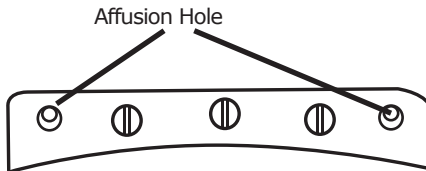

CONNECT THE INTAKE PIPE METHOD





- ★ Put the water inlet hose correctly.
- ★ Put the water inlet hose into the affusion hole.

 


BEFORE WASHING

 
	1. Take out the coin, nails or other things from the garments		2. Never put the garments which with the chemical reagent together with the cloths
	3. Turn out the inside cloth during washing the garments with the floss.		4. Put the good garments into the pocket during washing

WASHING OPERATION METHOD

 <p>Connect the intake pipe with the water spigot</p>	<p>Nut the wire into the plug</p> 
<p>Put down the drain pipe</p> 	<p>Put the garments into the washing tube then put into the wash powder</p> 

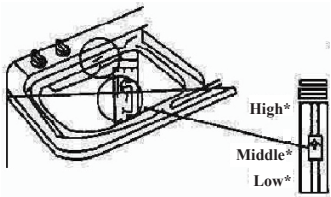

★ Choose the water level according to the quantity of the garments, high, middle and low.
 ★ For the water level of the double water stream, it's the best position of the middle and high.

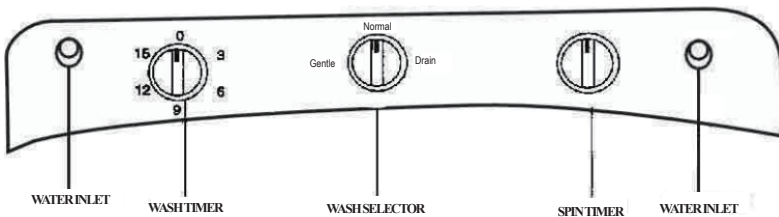



● Choose the washing method  (Turn "current transform" switch")

Turn the current transform switch according to the quantity and the material of the garments, then choose the washing current in "normal, gently"

● Choose the washing time 

Turn the washing timer in sequence when the water reach the level, then the washing machine begin to work.

Choose the wash method	Gently	Normal
Material of the garments	Silk or floss clothing	Linen or very dirty garments
Washing time	3-5min	5-9min 9-15min
Water level		Quantities of the wash powder
High		40-57g
Middle		30-48g
Low		25-40g
<p>● Drain </p> <p>When finish washing turn the current transform to the drain position and then begin to drain.</p> <p>● Choose the drying time </p> <p>★ When finish drain, move the garments into the drying tube then cover the lid on the garments</p> <p>★ Cover the drying inside lid and the drying cover.</p> <p>★ Turn the drying timer in sequence and the washing machine begin to work</p>		
Sort of the garments		Drying time
Shirt (synthetic fibre)		1-2min
Underwear		3-5min
Work clothes		5min

SECOND WASHING

- ★ Perform the washing procedure for two times, wash, drying and then wash and drying
- ★ After drain then begin to the second washing meanwhile save the electric and the water

SECOND WASHING WHILE AFFUSION

Perform the washing procedure for two times, open the water spigot and then affusion the water into the washing tube.

DRAIN NOTICE



- ★ Press well the plastic cover on the garments strike the machine while drying.
- ★ Never drying while drain, should finish drain and then move the garments into the drying tube to avoid to damage the machine

- ★ Press well the plastic cover of the spin drier to avoid the garments fly out of the tube.
- ★ Never put the hands into the drying tube while working especially for the children.



Correct Incorrect

AFTER FINISH WASHING

Pull down the plug, close the water spigot and then hang up the drain pipe.
Clean the drying tube and open the plastic cover to make tube dry.

CLEAN THE LINT FILTER

Please clean the lint filter after finish working every time



★ Clean the lint filter into the water



★ First put the bottom into the hole and then press it

NOTICE



Don't install it in the bath-room
and other inclined ground



Don't pour the water on
the switch.



When you use warm water,
the temperature should not
exceed 122°F



Never brush the machine
use gasoline, alcohol and
other organic solvent.

- ★ PLEASE PULL DOWN THE PLUG AFTER FINISH WASHING.
- ★ DRAIN PIPE'S LENGTH ALWAYS LOW THAN 2M,IT'S HEIGHT MUST MORE THAN 15CM.
- ★ DON'T PRESS THE DRAIN OUTLET INTO THE SEWER.
- ★ IF YOU WANT TO CHANGE THE WIRE,PLEASE CHANGE IT IN THE LOCAL COMPANY.
- ★ IF THE BOTTON WITH THE INTAKE,THE FOOTCLOTH SHOULDN'T BACKUP THE INTAKE.
- ★ THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES,UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- ★ CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.
- ★ IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.
- ★ THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- ★ CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.

MADE IN CHINA

