

SHARP CORPORATION

PRINTED IN CHINA / IMPRESO EN CHINA
18ASC (TINSZA277EHVT)

ENGLISH

INTRODUCTION

This calculator shows calculations on a sub-display rather than printing on roll paper.
You can view the calculation history by pressing Δ or ∇ .
Press $[ON/C]$ to return to calculations.

OPERATIONAL NOTES

To insure trouble-free operation of your SHARP calculator, we recommend the following:
1.The calculator should be kept in areas free from extreme temperature changes, moisture, and dust.
2.A soft, dry cloth should be used to clean the calculator. Do not use solvents or a wet cloth.
3.Since this product is not waterproof, do not use it or store it where fluids, for example water, can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunction.
4.If service should be required, use only a SHARP servicing dealer, a SHARP approved service facility or SHARP repair service.
5.This product, including accessories, may change due to upgrading without prior notice.

SHARP will not be liable nor responsible for any incidental or consequential economic or property damage caused by misuse and/or malfunctions of this product and its peripherals, unless such liability is acknowledged by law.

LCD DISPLAY AND SYMBOLS (MAIN AND SUB-DISPLAYS) /
PANTALLA LCD Y SÍMBOLOS (PANTALLA PRINCIPAL Y PANTALLA SECUNDARIA)

Main display



- Shows calculation results and entered numeric values.


Muestra los resultados de los cálculos y los valores numéricos introducidos.

Symbols in the main display

MGN	: Appears when the margin is entered or calculated.
COST	: Appears when the cost is entered or calculated.
SELL	: Appears when the selling price is entered or calculated.
TAX RATE	: Appears when a TAX RATE is set.
TAX+	: Appears when tax is included in the calculation result.
TAX-	: Appears when tax is not included in the calculation result.
8	: Shows the decimal setting.
↑↓	: Shows the round setting. (↑) An answer is rounded up. (↑↓) An answer is rounded off. (↓) An answer is rounded down.
GT	: Appears when GT mode is selected.
E	: Appears when an overflow or other error is detected.
2nd	: Appears when [2nd] is pressed.
G	: Appears when a number is in the grand total memory.
M	: Appears when a number is in the memory.

* The main display will remain on as long as you continue to press keys. To conserve battery power, the main display is dimmed when you have not pressed any key for 15 seconds.

Sub display

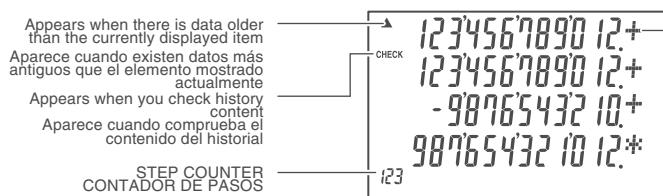

- Use to display the calculation history.
- You can show up to 5 history lines.
- You can save up to 300 steps in the history.
- When 300 steps are exceeded, the oldest block of steps is deleted. The summary of deleted block and "----[300]---" appear on the first line.

* Sirve para visualizar el historial de cálculos.
• Se pueden mostrar hasta 5 líneas de historial.
• Se pueden guardar hasta 300 pasos en el historial.
Cuando se superan los 300 pasos, se borra el bloque de pasos más antiguo.
El resumen del bloque borrado y "----[300]---" aparecen en la primera línea.

Viewing the sub-display
Press Δ or ∇ to check the history in the sub-display.
Press $[ON/C]$ to resume calculations after checking the history.

- During actual use, not all symbols are displayed at the same time.
- Only the symbols required for the usage under instruction are shown in the display and calculation examples of this manual.

Sub-display symbols
 Δ : Appears when scrolling upwards is possible.
 ∇ : Appears when scrolling downwards is possible.
CHECK : Appears when Δ or ∇ is pressed to check history content.

STEP COUNTER : Shows the number of line that is displayed at the bottom of the sub-display.

Operators/marks : Shows operators such as +, marks such as #.

Visualización en pantalla
Pulse Δ o ∇ para comprobar el historial en la pantalla secundaria. Pulse $[ON/C]$ para reanudar los cálculos tras comprobar el historial.

- Durante el uso actual, no se muestran todos los símbolos al mismo tiempo.
- En pantalla solo se muestran los símbolos necesarios para el uso bajo instrucciones y los ejemplos de cálculo de este manual.

Símbolos de la pantalla secundaria
 Δ : Aparece cuando es posible desplazarse hacia arriba.
 ∇ : Aparece cuando es posible desplazarse hacia abajo.
CHECK : Aparece cuando se pulsa Δ o ∇ para comprobar el contenido del historial.

CONTADOR DE PASOS : Muestra el número de líneas visualizadas en la parte inferior de la pantalla secundaria.

Operadores/marcas : Muestra los operadores como +, las marcas como #.

OPERATING CONTROLS

[ON/C] POWER ON / CLEAR / CLEAR ENTRY KEY:

Clear – This key also serves as a clear key for the calculation register and resets an error condition.

Clear entry – When pressed after a number and before a function, clear the number.

• Press $[ON/C]$ to return to calculations.

• Press this key twice, followed by $[2nd]$, $[TAX]$ to display the set tax rate.

2nd $[ON/C]$ POWER OFF:

2nd **2nd KEY:**
Press to specify the function indicated above or to the right of the key.

2nd $[COST]$ (↑)
2nd $[SELL]$ (5/4)
2nd $[MGN]$ (↓)

ROUND SELECT:
Press to set the rounding method for decimal place numbers that can be displayed.

Example: Set Decimal Selector to 2.

$4 \div 9 = 0.444 \dots$, $5 \div 9 = 0.555 \dots$

4	\div	9	=	5	\div	9	=
↑				↓			

Note: The decimal point floats during successive calculation by the use of \times or \div . If the decimal selector is set to "F" then the answer is always rounded down (↓).

2nd $[TAX]$ (F)
2nd $*M$ (3)
2nd ΩM (2)
2nd $M-$ (0)
2nd $M+$ (A)

DECIMAL/ADD MODE SELECT:
Sets the display of decimal places.

"3 2 0": Presets the number of decimal places in the answer.
"F": The answer is displayed in the floating decimal system.
"A": The decimal point in addition and subtraction entries is automatically positioned to the 2nd digit from the lowest digit of entry number. Use of the add mode permits addition and subtraction of numbers without entry of the decimal point. Use of \cdot , \times and \div will automatically override the add mode and decimal correctly answers will be displayed.

COST **COST ENTRY KEY:**
Press this key to enter the cost.

MGN **MARGIN ENTRY KEY:**
Press this key to enter the margin percentage.

TAX **CHANGE SIGN KEY:**
Changes the algebraic sign of a number (i.e., positive to negative or negative to positive).

÷ **DIVISION KEY**

× **MULTIPLICATION KEY**

- **SUBTRACTION KEY**

% **PERCENT KEY**

***M** **RECALL AND CLEAR MEMORY KEY**

M- **MEMORY MINUS KEY**

TAX+ **TAX+ KEY**

TAX- **TAX- KEY**

2nd $[TAX]$ **TAX RATE SET**

- When you press $[TAX+]$ after an entry of new number, the tax rate is set.
- A maximum of 4 digits can be stored (decimal point is not counted as a digit).
- Only one rate can be stored. If you enter a new rate, the previous rate will be cleared.

Example: Set a tax rate of 5% $2nd [TAX+] 5 [TAX+]$

GT **GRAND TOTAL KEY**

2nd **GT** (GT MODE) **GT mode ON/OFF**

GT **MARKER / SUBTOTAL KEY:**
Marker – When entering non-numeric item, "#" appears in the sub-display.

When this key is pressed right after an entry of a number, the entry is displayed on the left-hand side with the symbol "#".

Subtotal – Used to get subtotal(s) of additions and/or subtractions. When pressed following the $+$ or $-$ key, the subtotal is displayed with the symbol "◊" and the calculation may be continued.

▲ **Press to scroll backward.**

Long press to scroll quickly.

▼ **Press to scroll forward.**

Long press to scroll quickly.

2nd Δ (▲)

Jump to the first line.

2nd ∇ (▼)

Jump to the last line.

* When the COST/SELL/MGN is being entered, scrolling and jumping cannot be used.


2nd \rightarrow (CLR HIST)

Press to delete ALL steps of history content.

REPLACEMENT OF BATTERY

When the following displays are shown in turning the power on, the batteries should be replaced.

Main display
Pantalla principal

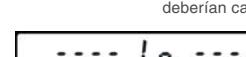

Sub display
Pantalla secundaria



* If main display remains dark after pressing keys, the batteries need to be replaced.

Battery: Manganese battery, size AA (or R6) × 4

CONTROLES DE FUNCIONAMIENTO

[ON/C] TECLA DE ENCENDIDO / BORRADO / BORRADO DE ENTRADA:

Borrado – Esta tecla también sirve de tecla de borrado para los registros de cálculos y anula un estado de error.

Borrado de entrada – Cuando se aprieta después de un número y antes de una función, borra el número.

• Pulse $[ON/C]$ para volver a los cálculos.

• Presione esta tecla dos veces, seguida por $[2nd]$, $[TAX+]$ para mostrar la tasa de impuestos establecida.

2nd $[ON/C]$ APAGADO:

2nd **2nd TECLA:**
Pulse para especificar la función indicada arriba o a la derecha de la tecla.

2nd $[ON/C]$ SELECCIÓN DE REDONDEO:

Pulse para establecer el método de redondeo con el que se mostrarán los decimales.

Ejemplo: Fije el selector decimal en 2.
 $4 \div 9 = 0.444 \dots$, $5 \div 9 = 0.555 \dots$

2nd $[ON/C]$ SELECCIÓN DEL MODO DECIMAL/AÑADIR:

Establece la visualización del número de decimales.

"3 2 0": Prefija el número de lugares decimales de la respuesta.

"F": La respuesta se visualizará en el sistema decimal flotante.

"A": El punto decimal en las introducciones de suma y resta se coloca automáticamente el segundo dígito a partir del último dígito del número introducido. Utilizando el modo de suma se pueden sumar y restar números sin introducir el punto decimal. El uso de \cdot , \times y \div anula automáticamente el modo de suma y visualiza las respuestas decimalmente correctas.

COST **TECLA DE INTRODUCCIÓN DEL PRECIO DE COSTE:**
Pulse esta tecla para introducir el precio de coste.

SELL **TECLA DE INTRODUCCIÓN DEL PRECIO DE VENTA:**
Pulse esta tecla para introducir el precio de venta.

MGN **TECLA DE INTRODUCCIÓN DEL MARGEN:**
Pulse esta tecla para introducir el porcentaje de margen.

→ **TECLA DE CORRECCIÓN DE ÚLTIMO DÍGITO**

± **TECLA DE CAMBIO DE SIGNO:**
Cambia el signo algebraico de un número (es decir, de positivo a negativo o de negativo a positivo).

÷ **TECLA DE DIVISIÓN**

× **TECLA DE MULTIPLICACIÓN**

- **TECLA DE RESTA**

% **TECLA DE PORCENTAJE**

***M** **TECLA**

ERRORS

There are several situations which will cause an overflow or an error condition. When this occurs, "E" will be displayed. The contents of the memory at the time of the error are retained. If an error occurs, press **CCE** to clear the error.

Error conditions:

- When the answer is greater than 999,999,999,999.
- When the contents of the memory or grand total memory exceed 999,999,999,999.
(Ex. ***M** 999999999999 **M+** 1 **M+**)
- When any number is divided by zero. (Ex. 5 **÷** 0 **=**)

SPECIFICATIONS

Operating capacity: 12 digits

Power source:
6V ... (DC): Manganese battery, size AA (or R6) x 4

Operating temperature: 0°C – 40°C (32°F – 104°F)

Operation time: Approx. 6 months (when used 1 hour/day, 5 days/week)

Operating time depends on the type of battery and type of use.

Automatic Power-off: Approx. 12 min.

Dimensions: 150 mm (W) × 228 mm (D) × 62 mm (H)

(5-29/32" (W) × 8-31/32" (D) × 2-7/16" (H))

Weight: Approx. 490 g (1.09 lb.) (with batteries)

Accessories: Manganese battery (R6) x 4 and operation manual

RESETTING THE UNIT

Strong impacts, exposure to electrical fields, or other unusual conditions may render the unit inoperative, and pressing the keys will have no effect. If this occurs, you will have to press The RESET switch twice and check that "0." is displayed.

The RESET switch should be pressed only when:

- an abnormal event occurs and all keys are disabled.
- you install or replace the battery.



CALCULATION EXAMPLES

- Press **ON/C** **CCE** prior to beginning any calculation.
- If an error is made while entering a number, press **CCE** or **→** and enter the correct number.
- After entering a value, press **COST**, **SELL**, or **MGN** to activate the Cost/Sell/Margin Calculation mode. In case of performing different calculation tasks, **CCE** key must be pressed first to cancel the Cost/Sell/Margin mode.
- Example procedures are listed in following manner unless otherwise specified.
- If the status is not specified, use "OFF" for GT mode, "F" for number of decimal digits specification mode, and " $\uparrow\downarrow$ " for round mode.
- "DEC" means the decimal point setting.

Operation Main Display Sub Display

ESPECIFICACIONES TÉCNICAS

Capacidad de cálculo: 12 dígitos

Fuente de alimentación:
6V ... (CC): Pila de manganeso, tamaño AA (o R6) x 4

Temperatura: 0°C – 40°C

Tiempo de funcionamiento: Aprox. 6 meses (si se utiliza 1 hora/día, 5 días/semana)

El tiempo de funcionamiento depende del tipo de pila y la forma de utilización.

Desconexión automática de corriente: Aprox. 12 min.

Dimensiones: 150 mm (An) × 228 mm (P) × 62 mm (Al)

Peso: Aprox. 490 g (con pilas)

Accesorios: Pila de manganeso (R6) y manual de manejo

REPOSIACIÓN DE LA UNIDAD

Los impactos fuertes, la exposición a campos eléctricos u otras condiciones inusuales pueden ser la causa de que la unidad no funcione, y pulsar las teclas no servirá de nada. Si eso ocurre, deberá pulsar el interruptor RESET dos veces y comprobar que aparece "0.". El interruptor RESET sólo deberá pulsarse cuando:

- Se produzca alguna anomalía y no funcione ninguna tecla.
- Instala o sustituye las pilas.

Notas:

- Al pulsar el interruptor RESET se borrárá la configuración de la tasa de impuesto, el historial y el contenido de la memoria.
- Use solamente un bolígrafo para pulsar el interruptor RESET. No use nada que pueda romperse ni tampoco algo muy puntiagudo como, por ejemplo, una aguja.



EJEMPLOS DE CÁLCULOS

- Pulse **ON/C** **CCE** antes de empezar cualquier cálculo.
- Si se comete un error al introducir un número, pulse **CCE** o **→** e introduzca el número correcto.
- Después de introducir un valor, pulse **COST**, **SELL** o **MGN** para activar el modo de cálculo de coste/venta/margen. En el caso de realizar cálculos diferentes, deberá pulsarse primero la tecla **CCE** para cancelar el modo de coste/venta/margen.
- Los procedimientos de ejemplos están puestos de la siguiente manera, a menos que se especifique lo contrario.
- Si no se especifica el estado, utilice "OFF" para el modo GT, "F" para el modo de especificación del número de decimales y " $\uparrow\downarrow$ " para el modo de redondeo.
- "DEC" se refiere a la configuración del punto decimal.

Operación Pantalla principal Pantalla secundaria

ADDITION AND SUBTRACTION WITH ADD MODE SUMA Y RESTA CON MODO DE SUMA

12.45 + 16.24 + 19.35 – 5.21 = DEC: A

1245 +	12.45	12.45 +
1624 +	28.69	16.24 +
1935 +	48.04	19.35 +
521 -	42.83	5.21 –
*	42.83	42.83 *

• **[]** was not used in the entries.

• La **[]** no ha sido usada en las introducciones.

MIXED CALCULATIONS / CÁLCULOS MIXTOS

A. $5 \times 2 + 12 =$ DEC: 0

5 x	5.	5. x
2 =		2. =
	10.	10. *
12 +	10.	10. +
+	22.	12. +
*	22.	22. *

B. $(10 + 2) \times 5 =$ DEC: 0

10 +	10.	10. +
2 +	12.	2. =
x	12.	12. x
5 =	60.	60. *

CHECKING HISTORY / COMPROBACIÓN DEL HISTORIAL

You can search up to 300 steps of the history.
Se puede buscar hasta en 300 pasos del histórico.

EXAMPLE/EJEMPLO

DEC: 2

2020.01.12 #	19.99 +
	29.99 +
	48.50 +
	48.50 +
	146.98 *
	1776 #
	7.75 x
	22.98 ÷
	5. =
	35.62 *

2020.02.23 #	246.99 +
	72.99 +
	70.79 +
	390.77 *
	1776 #
	7.75 x
	22.98 ÷
	5. =
	35.62 *

2nd ▼ (▼)	CHECK	246.99 +
		72.99 +
		70.79 +
		390.77 *

ON/C	390.77	

ERRORES

Existen diversos casos en los que ocurre un exceso de capacidad o una condición de error. Al producirse esto, aparecerá "E". El contenido de la memoria, en el momento del error, se conservará. Si se produce un error, pulse **CCE** para borrar el error.

- Si la respuesta es superior a 999,999,999,999.
- Si el contenido de la memoria o la memoria de gran total supera 999,999,999,999.
(Ej. ***M** 999999999999 **M+** 1 **M+**)
- Cuando se divide un número cualquiera por cero. (Ej. 5 **÷** 0 **=**)

CONSTANT / CONSTANTES

A. $62.35 \times 11.11 =$ ① $62.35 \times 22.22 =$ ②

62.35 x	62.35	62.35 x
11.11 =		692.7085 * ①
	692.7085	
22.22 =		62.35 x
		22.22 =
		1'385.417 * ②

B. $11.11 \div 77.77 =$ ① $22.22 \div 77.77 =$ ②

11.11 ÷	11.11	11.11 ÷
77.77 =		77.77 =
	0.14285714285	0.14285714285 * ①
22.22 =		22.22 ÷
		77.77 =
		0.28571428571 * ②

GRAND TOTAL / GRAN TOTAL