

**SHARP**

# ELECTRONIC PRINTING CALCULATOR CALCULADORA IMPRESORA ELECTRÓNICA

**EL-1801V L**

## OPERATION MANUAL MANUAL DE MANEJO

SHARP CORPORATION

22LSC(TINSA336EHVT)

## ENGLISH

## OPERATIONAL NOTES

To insure trouble-free operation of your SHARP calculator, we recommend the following:  
 1. The calculator should be kept in areas free from extreme temperature changes, moisture, and dust.  
 2. A soft, dry cloth should be used to clean the calculator. Do not use solvents or a wet cloth.  
 3. Since this product is not waterproof, do not use it or store it where fluids, for example water, can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunction.  
 4. If service should be required, use only a SHARP servicing dealer, a SHARP approved service facility or SHARP repair service.  
 5. If you disconnected the AC adaptor to cut electricity completely, the presently stored tax rate will be cleared.  
 6. Do not wind the cord around the body or otherwise forcibly bend or twist it.  
 7. Unplug the calculator by pulling on the plug portion, not the cord.  
 8. Do not place objects on the cord. Do not run the cord under rugs, mats, or other such objects.  
 9. This product, including accessories, may change due to upgrading without prior notice.

SHARP will not be liable nor responsible for any incidental or consequential economic or property damage caused by misuse and/or malfunctions of this product and its peripherals, unless such liability is acknowledged by law.

## OPERATING CONTROLS

## POWER SWITCH; PRINT / ITEM COUNT MODE SELECTOR:

"OFF": Power OFF  
 "P": Power ON. Set to the non print mode.

"P+IC": Power ON. Set to the print and item count mode.

- For addition or subtraction, each time [ $\pm$ ] is pressed, 1 is added to the item counter, and each time [ $=$ ] is pressed, 1 is subtracted.  
 • The count is printed when the calculated result is obtained.  
 • Pressing of [ $\times$ ] or [ $\div$ ] clears the counter.

- When the grand total/rate setting mode selector is in the ON position (GT), the counter will count the number of times that the calculation results have been stored in the grand total memory. To print and clear the count, press the [ $\text{GT}$ ] key.

- The memory item counter will count the number of times that the [ $\text{M}+$ ] key has been pressed in the addition mode.

Note: Each time the [ $\text{M}-$ ] key is used in the subtraction, 1 will be subtracted from the count.

- The count is printed when the memory is recalled.

- Pressing of the [ $\text{M}=\text{}$ ] key clears the counter.

Note: The counter has a maximum capacity of 3 digits (up to ±999). If the count exceeds the maximum, the counter will recount from zero.

## ROUNDING:

Example: Set Decimal Selector to 2.

$4 \div 9 =$	0.44	5 $\div 9 =$	0.56
↓	0.45	↓	0.56
↑	0.44	↓	0.55

Note: The decimal point floats during successive calculation by the use of [ $\times$ ] or [ $\div$ ]. If the decimal selector is set to "F" then the answer is always rounded down (↓).

## GRAND TOTAL / RATE SETTING MODE SELECTOR:

"GT": Grand Total

"+": Neutral

"RATE SET": Rate setting

## Tax rate:

- Press [ $\text{GT}$ ] three times, enter the tax rate, followed by [ $\text{TAX}$ ].
- A maximum of 4 digits can be stored (decimal point is not counted as a digit).
- Only one rate can be stored. If you enter a new rate, the previous rate will be cleared.

## F63210A DECIMAL / ADD MODE SELECTOR:

"6 3 2 1 0": Presets the number of decimal places in the answer.

"F": The answer is displayed in the floating decimal system.

"A": The decimal point in addition and subtraction entries is automatically positioned to the 2nd digit from the lowest digit of entry number. Use of the add mode permits addition and subtraction of numbers without entry of the decimal point. Use of [ $-$ ], [ $\times$ ] and [ $\div$ ] will automatically override the add mode and decimal correctly answers will be printed.

## PAPER FEED KEY

## LAST DIGIT CORRECTION KEY

## NON-ADD / SUBTOTAL KEY:

Non-add - When this key is pressed right after an entry of a number in the Print mode, the entry is printed on the left-hand side with the symbol "#". This key is used to print out numbers not subject to calculation such as code, date, etc.

Subtotal - Used to get subtotal(s) of additions and/or subtractions. When pressed following the [ $\text{+}$ ] or [ $\text{-}$ ] key, the subtotal is printed with the symbol "0" and the calculation may be continued.

## CLEAR / CLEAR ENTRY KEY

Press this key twice, followed by [ $\text{TAX}$ ], to print the set tax rate.

## TOTAL KEY

## EQUAL KEY

## CHANGE SIGN KEY:

Changes the algebraic sign of a number (i.e., positive to negative or negative to positive).

## RECALL AND CLEAR MEMORY KEY

## TAX-INCLUDING KEY

## PRE-TAX KEY

Used to calculate the average.

## In U.S.A.:

## LIMITED WARRANTY

Victor Technology LLC warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair or replace the defective Product or parts for labor for the period(s) indicated below ("Warranty Period"). This warranty does not apply to damage resulting from acts of God, misuse, abuse, accident, unauthorized modification, or normal wear and tear, damage resulting from repair or attempted repairs performed by anyone other than an authorized service center, Nor shall Victor be liable or in any way responsible for any incidental or consequential damages. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the seller nor any other person is authorized to make any warranties beyond those described herein, or to extend the duration of any warranties beyond the time period described herein.

The warranties described herein shall be the sole and exclusive remedies granted by Victor and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time specified herein, shall constitute full satisfaction of all obligations and liabilities of Victor to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Victor be liable, or in any way responsible, for any incidental or consequential damages. Some states do not allow the exclusion of liability for incidental or consequential damages, so the above exclusion may not apply to you.

THE WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Your Product: Electronic Calculator

Warranty Period for this Product: Six (6) months parts and labor from date of purchase.

Additional Items Excluded from Warranty Coverage: Any additional items such as paper, maintenance cartridge, ink cartridges supplied with the Product or to any equipment or any hardware or software purchased separately, power cords, cables, rubber parts, or peripherals other than the Product.

How to Obtain Service: Call Victor Technology LLC toll free at 1-844-578-1637 or email SharpService@VictorTechnology.com. You will be asked to ship your Product to Victor Technology LLC for repair. Be sure to have proof of purchase available. If you ship or mail the Product, be sure it is packaged carefully.

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL 1-844-578-1637.  
 Sharp Calculator Service by Victor Technology LLC  
[www.SharpCalculators.com](http://www.SharpCalculators.com)

## ESPAÑOL

## NOTAS AL MANEJARLA

A fin de que su calculadora SHARP funcione sin averías, le recomendamos lo siguiente:

- Evite dejar la calculadora en ambientes en que haya cambios de temperatura, humedad y/o bastante notables.
- Al limpiar la calculadora, utilice un paño suave y seco. No use disolventes ni tampoco un paño húmedo.
- Debido a que este producto no es una prueba de agua, no deberá ser utilizado o guardado en lugares donde pudiera ser salpicado por líquidos, por ejemplo agua. Gotas de lluvia, salpicaduras de agua, jugos o zumos, café, vapor, transpiración, etc. también perjudican el funcionamiento del producto.
- Si necesita reparar esta unidad, diríjase sólo a un distribuidor SHARP, a un centro de servicio autorizado por SHARP o a un centro de reparaciones SHARP.
- Si desconecta el adaptador de CA para desconectar completamente la electricidad, la tasa de impuesto almacenada actualmente se borrará.
- No bobine el cable alrededor de la calculadora, y no lo doble o retuerza a la fuerza.
- Desenchufe la calculadora tirando de la clavija, no del cable.
- No ponga objetos encima del cable. No pase el cable por debajo de alfombras, esteras u otros objetos similares.
- Este producto, incluyendo los accesorios, puede sufrir cambios debido a mejoras sin previo aviso.

SHARP será responsable de ningún daño imprevisto o resultante, en lo económico o en propiedades, debido al uso malo de este producto y sus periféricos, a menos que tal responsabilidad sea reconocida por la ley.

## CONTROLES DE FUNCIONAMIENTO

## INTERRUPTOR DE LA ALIMENTACIÓN: SELECTOR DEL MODO DE IMPRESIÓN / MODO PARA CONTAR ARTÍCULOS:

"OFF": Apagado (OFF)

"+": Encendido (ON). Fija el modo de impresión.

"P": Encendido (ON). Fija el modo de impresión.

"P+IC": Encendido (ON). Fija el modo de impresión y de cuenta de artículos.

- En las sumas o restas, cada vez que se pulse [ $\pm$ ] se añadirá 1 al contador de artículos, y cada vez que se pulse [ $=$ ] se restará 1.
- Cuando cada vez impresa cuando se obtiene el resultado calculado.
- Al pulsar [ $\times$ ] o [ $\div$ ] se borra el contenido del contador.

- Cuando está activado el selector del modo de gran total/líajación de tipos (posición GT), el contador contará el número de veces que se han almacenado los resultados de cálculo en la memoria del gran total. Para imprimir y borrar la cuenta, apretar la tecla [ $\text{GT}$ ].
- El contador de artículos en memoria contará el número de veces que la tecla [ $\text{M}+$ ] ha sido apretada en la suma.

Notas: • Cada vez que se use la tecla [ $\text{M}+$ ] en la resta, 1 será restado de la cuenta.  
 • La cuenta queda impresa al llamarla la memoria.  
 • Apriete la tecla [ $\text{M}=\text{}$ ] se borra el contador.

Nota: El contador tiene una capacidad de un máximo de 3 dígitos (hasta ±999). Si la cuenta excede el máximo, el contador vuelve a contar partiendo de cero.

## SELECCION DEL REDONDEO:

Ejemplo: Fije el selector decimal en 2.

4  $\div 9 =$  0.444 ... , 5  $\div 9 =$  0.555 ...

4	$\div$	9	$=$	5	$\div$	9	$=$
↓				↓			
0.45				0.56			

Nota: El punto (= coma) decimal flota mientras se hacen cálculos sucesivos usando [ $\times$ ] o [ $\div$ ]. Si el selector decimal se coloca en "F", la respuesta siempre se redondea por defecto (↓).

## SELECCION DEL MODO DE GRAN TOTAL / FIJACIÓN DE TASA:

"GT": Gran total

"+": Neutra

"RATE SET": Fijación de tasa

## TASA DE IMPUESTOS:

- Presione [ $\text{GT}$ ] tres veces, y introduzca la tasa de impuestos, seguida por [ $\text{TAX}$ ].

• Se podrá almacenar un máximo de 4 dígitos (el punto decimal no se cuenta como un dígito).

• Solo puede almacenar una tasa. Si introduce una nueva tasa, borrará la anterior.

## F63210A SELECCION DEL MODO DE DECIMAL / SUMA:

"6 3 2 1 0": Prefija el número de lugares decimales de la respuesta.

"F": La respuesta se visualizará en el sistema decimal flotante.

"A": El punto decimal en las introducciones de suma y resta se coloca automáticamente el segundo dígito a partir del último dígito del número introducido. Utilizando el modo de suma se pueden sumar y restar números sin introducir el punto decimal. El uso de [ $-$ ], [ $\times$ ] y [ $\div$ ] anula automáticamente el modo de suma e imprime las respuestas decimalmente correctas.

## TECLA DE AVANCE DEL PAPEL

## TECLA DE CORRECCIÓN DE ÚLTIMO DÍGITO

## NON-ADD / SUBTOTAL KEY:

Non-add - When this key is pressed right after an entry of a number in the Print mode, the entry is printed on the left-hand side with the symbol "#". This key is used to print out numbers not subject to calculation such as code, date, etc.

Subtotal - Used to get subtotal(s) of additions and/or subtractions. When pressed following the [ $\text{+}$ ] or [ $\text{-}$ ] key, the subtotal is printed with the symbol "0" and the calculation may be continued.

## CLEAR / CLEAR ENTRY KEY

Press this key twice, followed by [ $\text{TAX}$ ], to print the set tax rate.

## TOTAL KEY

## EQUAL KEY

## CHANGE SIGN KEY:

Changes the algebraic sign of a number (i.e., positive to negative or negative to positive).

## RECALL AND CLEAR MEMORY KEY

## TAX-INCLUDING KEY

## PRE-TAX KEY

Used to calculate the average.

## GRAND TOTAL KEY

## COST PRICE ENTRY KEY:

Press this key to enter the cost price.

## SELLING PRICE ENTRY KEY:

Press this key to enter the selling price.

## MARGIN ENTRY KEY:

Press this key to enter the margin.

## CHANGE CALCULATION KEY:

• See how much change to return, have the price amount displayed, then enter the pay amount, followed by this key. The change is calculated in accordance with the DECIMAL / ADD MODE SELECTOR setup as well as the ROUNDING SELECTOR setup.

• The intermediate result of an addition or subtraction in the Change calculation is retained.

• While the POWER SWITCH / PRINT / ITEM COUNT MODE SELECTOR is placed in "P" or "P+IC", the pay amount is printed after "\*\*\*\*\*" and the change printed with "CG".

Note: The displayed change value will not be added to the grand total memory.

## DISPLAY SYMBOLS:

MGN : Appears when the margin is entered or calculated.

COST : Appears when the cost price is entered or calculated.

SELL : Appears when the selling price is entered or calculated.

TAX RATE : Appears when a TAX RATE is set.

TAX\* : Appears when tax is included in the calculation result.

TAX- : Appears when tax is not included in the calculation result.

M : Appears when a number is in the memory.

- : Appears when a number is negative.

G : Appears when a number is in the grand total memory.

E : Appears when an overflow or other error is detected.

## INK ROLLER REPLACEMENT

If printing is blurry even when the ink roller is in the proper position, replace the roller.

Ink roller: Type IR-40T

## WARNING

APPLYING INK TO WORN INK ROLLER OR USE OF UNAPPROVED INK ROLLER MAY CAUSE SERIOUS DAMAGE TO PRINTER.

## INK ROLLER REPLACEMENT

If printing becomes dull after long time usage, clean the printing wheel according to the following procedures:

- Set the power switch to OFF.
- Remove the printer cover. (Fig. 1)
- Hold the top of the ink roller and remove the roller by pulling it toward you and then upward. (Fig. 2)
- Install the new ink roller in the correct position. Make sure that the roller is securely in place. (Fig. 3)
- Put back the printer cover.

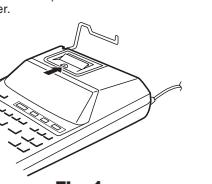


Fig. 1

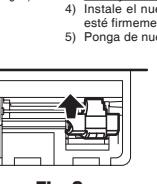


Fig. 2


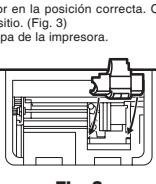


Fig. 3

## HOW TO CONNECT THE AC ADAPTOR

This machine can be operated on AC power by use of AC Adaptor.

AC adaptor: PS1006-060HUB030

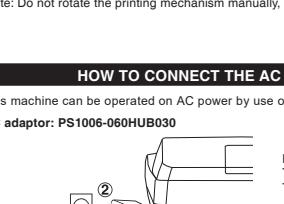

Make sure that you turn the calculator's power off when disconnecting the AC adaptor.

To connect the AC adaptor, follow steps ① and ②.

Sujete la parte superior del rodillo entintador y extraiga el rodillo tirando de él hacia usted y hacia arriba. (Fig. 2)

Instale el nuevo rodillo entintador en la posición correcta. Cerciórese de que el rodillo esté firmemente colocado en su sitio. (Fig. 3)

Ponga de nuevo en su lugar la tapa de la impresora.

## PRECAUCIÓN

El uso de otro adaptador que no sea el PS1006-060HUB030 podría ocasionar la entrada de una tensión inadecuada a su calculadora SHARP y provocar daños en la misma.

## CAMBIO DEL ROLLO DEL PAPEL

Nunca introduzca un rollo de papel roto. Esto causará atascos del papel.

Corte siempre en primer lugar el borde anterior.

- Introduzca el borde del papel del rollo de papel en la abertura. (Fig. 1)
- Conecte la alimentación y haga avanzar el papel pulsando [PRINT]. (Fig. 2)

## SPECIFICATIONS

Operating capacity: 12 digits  
 Power supply:  
 Operating: AC: Local voltage with AC adaptor PS1006-060HUB030  
**PRINTING SECTION**  
 Printer: Mechanical printer  
 Printing speed: Approx. 2.0 lines/sec.  
 Printing paper: 57 mm(2-1/4") - 58 mm(2-9/32") wide  
 80 mm(3-5/32") in diameter (max.)  
 Operating temperature: 0°C - 40°C (32°F - 104°F)  
 Dimensions: 193 mm (W) x 267 mm (D) x 61 mm (H)  
 (7-19/32" (W) x 10-1/2" (D) x 2-13/32" (H))  
 Weight: Approx. 633 g (1.40 lb.)  
 Accessories:  
 1 paper roll, 1 ink roller (installed), AC adaptor PS1006-060HUB030, and operation manual

## WARNING

**THE VOLTAGE USED MUST BE THE SAME AS SPECIFIED ON THIS CALCULATOR.**  
 USING THIS CALCULATOR WITH A HIGHER VOLTAGE THAN THAT WHICH IS SPECIFIED IS DANGEROUS AND MAY RESULT IN A FIRE OR OTHER TYPE OF ACCIDENT CAUSING DAMAGE. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE RESULTING FROM USE OF THIS CALCULATOR WITH A VOLTAGE OTHER THAN THAT WHICH IS SPECIFIED.

## RESETTING THE UNIT


Strong impacts, exposure to electrical fields, or other unusual conditions may render the unit inoperative, and pressing the keys will have no effect. If this occurs, you will have to press the RESET switch on the front of the unit. The RESET switch should be pressed only when:

- an abnormal event occurs and all keys are disabled.

Notes:  
 • Pressing the RESET switch will clear conversion rate, tax rate, and memory contents.

• Use only a ballpoint pen to press the RESET switch.  
 Do not use anything breakable or anything with a sharp tip, such as a needle.  
 • Connect the AC adaptor to an outlet, then press the RESET switch.

Turn the power key "ON" and check that "0." is displayed.

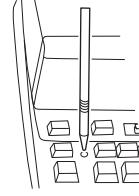

## CALCULATION EXAMPLES

- Set the decimal selector as specified in each example.  
 The rounding selector should be in the "5/4" position unless otherwise specified.
- The grand total/rate setting mode selector should be in the "•" position (off) unless otherwise specified.
- The print / item count mode selector should be in the "P" position unless otherwise specified.
- Press **YCE YCE** prior to beginning any calculation.
- If an error is made while entering a number, press **YCE** or **DEL** and enter the correct number.
- After entering a value, press **COST**, **SELL** or **MGN** to activate the Cost/Sell/Margin Calculation mode. In case of performing different calculation tasks, **YCE YCE** key must be pressed first to cancel the Cost/Sell/Margin mode.
- Example procedures are listed in following manner unless otherwise specified.

Operation | Display | Print

## ADDITION AND SUBTRACTION WITH ADD MODE SUMA Y RESTA CON MODO DE SUMA

F63210 A OFF FPT PMC ON		
12.45	+	19.35 - 5.21 =
1245	+	1245 +
1624	+	28.69
1935	+	16+24 +
521	-	48.04
*	*	19+35 +
		5+21 -
		42.83
		002.....
		42+83 *

\*1 : [ ] was not used in the entries.

\*1 : La [ ] no ha sido usada en las introducciones.

## MIXED CALCULATIONS / CÁLCULOS MIXTOS

F63210 A OFF FPT PMC ON		
A. 5 x 2 + 12 =	5.	5+ x
5	x	2+ =
2	=	10+ *
		10.
		10.
12	+	10+ +
	+	22.
	*	12+ +
	*	002.....
		22+ *
B. (10 + 2) x 5 =	10.	10+ +
10	+	2+ +
2	+	12.
	x	12.
5	=	5+ =
		60.
		60+ *

## ITEM COUNT CALCULATION CALCULO DE CUENTA DE ARTÍCULOS

Bill No. Númer. de factura	Number of bills Número. de facturas	Amount Importe
1	1	\$100.55
2	1	\$200.00
3	1	\$200.00
4	1	\$400.55
5	1	\$500.65
Total	(a)	(b)
100.55	100.55	100+55 +
200	300.55	200+00 +
	500.55	200+00 +
400.55	901.10	400+55 +
500.65	1'401.75	500+65 +
		005.....
		(a)
		1:401.75 * (b)
		1:401.75

## ESPECIFICACIONES TÉCNICAS

Capacidad de cálculo: 12 dígitos  
 Fuente de alimentación:  
 En funcionamiento: CA: Voltaje local usando el adaptador de CA, PS1006-060HUB030  
**SECCIÓN DE LA IMPRESORA**  
 Impresora: Impresora mecánica  
 Velocidad de impresión: Aprox. 2.0 líneas/seg.  
 Papel de impresión: 57 mm - 58 mm de ancho,  
 80 mm de diámetro (máx.)  
 Temperatura: 0°C - 40°C  
 Dimensiones: 193 mm (W) x 267 mm (D) x 61 mm (H)  
 (7-19/32" (W) x 10-1/2" (D) x 2-13/32" (H))  
 Peso: Aprox. 633 g (1.40 lb.)  
 Accesorios:  
 1 rollo de papel, 1 rodillo entintador (instalado), adaptador de CA, PS1006-060HUB030, and operation manual

## PERCENT / PORCENTAJES

F63210 A		
100	x	100.
25	%	100+ x 25% 25+00 *
		25.00
B. (123 ÷ 1368) × 100 =		
123	÷	123.
1368	%	123+ ÷ 1368% 8+99 *
		8.99

## TAX RATE CALCULATIONS

### CÁLCULOS CON LA TASA DE IMPUESTOS

EXAMPLE 1: Set a 5% tax rate.  
 Calculate the tax on \$800 and calculate the total including tax.

EJEMPLO 1: Establezca una tasa de impuestos del 5%.  
 Calcule el impuesto sobre \$800 y calcule el total incluyendo el impuesto.

F63210 A		
GT • SET		
RATE		
5		5.
TAX+		TAX 5.000
800	TAX+	800+ 840+ 840*
		***5+000 %

EXAMPLE 2: Perform two calculations using \$840 and \$525, both of which already include tax. Calculate the tax on the total and the total without tax. (tax rate: 5%)

EJEMPLO 2: Realice dos cálculos utilizando \$840 y \$525, los cuales ya incluyen impuesto. Calcule el impuesto sobre el total y el total sin impuesto. (tasa de impuestos: 5%)

F63210 A		
840	+	840.
525	+	1'365.
TAX-		840+ 1'300.
		840+ 1'300.

## AVERAGING / PROMEDIO

Ex. / Ej.

F63210 A		
Day / Día		Sales / Ventas
If /	Monday / Lunes .....	\$123.15 / \$123.15
Si el	Tuesday / Martes .....	\$118.00 / \$118.00
	Wednesday / Miércoles .....	\$131.58 / \$131.58
	Thursday / Jueves .....	\$125.02 / \$125.02
	Friday / Viernes .....	\$158.25 / \$158.25
Total Sales		\$656.00 for 5 days
Then Average Sales = \$131.20		\$656.00
Por lo tanto: Promedio de las ventas = \$131.20		F63210 A GT • SET OFF FPT PMC ON

F63210 A		
12315	+	123.15
118	+	241.15
13158	+	372.73
12502	+	497.75
15825	+	656.00
*		005+*****
		656+00 *
		131+20 ΔG
		131.20

## GRAND TOTAL / GRAN TOTAL

100 + 200 + 300 = ①

+ 300 + 400 + 500 = ②

Grand total / Gran Total ③

F63210 A		
*	GT	
100	+	100.
200	+	300.
300	+	600.
*		600+ * + ①
G	600.	
G	300.	300+ *
G	700.	400+ *
G	1'200.	500+ *
GT	1'200.	1'200+ * + ②
		1'800.
		1'800+ * * ③

## Supplier's Declaration of Conformity (Compliance Information)

### SHARP ELECTRONIC PRINTING CALCULATOR : EL-1801V

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

Victor Technology, LLC  
 100 EAST CROSSROADS PARKWAY, SUITE C  
 BOLINGBROOK, IL 60440  
 TEL:+1-630-754-4400  
 +1-844-578-1637

Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE



Note: A shielded interface cable is required to ensure compliance with FCC regulations for Class B certification.

## COST / SELL / MARGIN CALCULATION

### CÁLCULO DE COSTES / VENTAS / MARGENES

EXAMPLE 1: Determine the cost price for 30% margin when the selling price is set at \$500.

① Selling Price ② Margin ③ Cost price

EJEMPLO 1: Determine el precio de coste para un margen del 30% cuando el precio de venta es de 500 euros.

① precio de venta ② margen ③ precio de coste

F63210 A GT • SET

500 SELL 500. 30. 30+ \*Δ ①

30+ \* ②

350+ \*C ③

SELL 500.

• : Entries in the order of "30 MGN 500 SELL" are also valid.

• : Las introducciones en el orden de "30 MGN 500 SELL" también son válidas.

EXAMPLE 2: Determine the selling price for 30% margin when the cost price is set at \$350.

① Cost price ② Margin ③ Selling Price

EJEMPLO 2: Determinar el precio de venta para un margen del 30% cuando el precio de coste es de 350 euros.

① precio de coste ② margen ③ precio de venta

F63210 A

350 COST 350. 30. 30+ \* ②

500+ \*Δ ③

SELL 500.

• : Entries in the order of "30 MGN 350 COST" are also valid.

• : Las introducciones en el orden de "30 MGN 350 COST" también son válidas.

EXAMPLE 3: Determine the margin when the cost price is set at \$350, and the selling price at \$500.

① Cost price ② Selling Price ③ Margin

Also, obtain the margin when the cost price is set to \$250.

EJEMPLO 3: Determinar el margen cuando el precio de coste es de 350 euros y el precio de venta es de 500 euros.

① precio de coste ② precio de venta ③ margen

Además, obtener también el margen cuando el valor del precio de coste se establezca en 250 euros.

F63210 A

350 COST 350. 500. 500+ \* ②

30+ \* ③