


GENNIE SHIFTER LLC IS NOT RESPONSIBLE FOR IMPROPER INSTALLATION, MISUSE OR ABUSE OF IT'S PRODUCTS AND ANY INJURY OR DEATH AS A RESULT THEREOF.

ALL GENNIE SHIFTER PRODUCTS ARE ADJUSTABLE AND SHOULD BE INSPECTED FOR ADJUSTMENT ON A REGULAR BASIS FOR ADDED SECURITY.

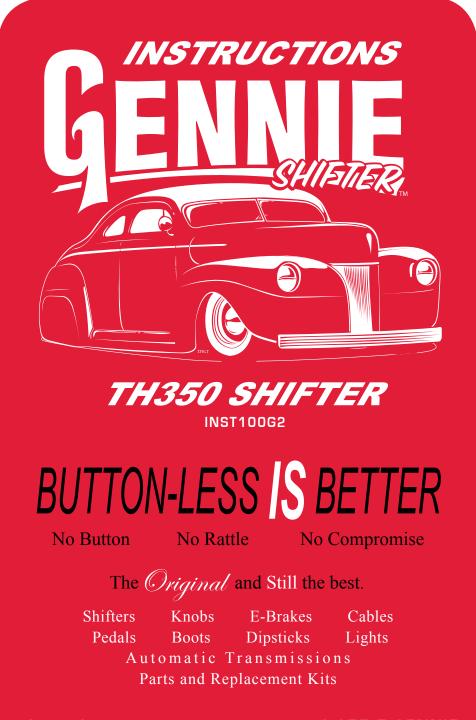

GENNIESHIFTER.COM

INST100G2

1-877-7-GENNIE

GENNIE SHIFTER. COM

1-877-7-GENNIE

Installation and Adjustment

This unit has been pre-assembled, adjusted to initial specifications.

Adjustments may be required for you particular application.

1. **Determine position** of 3-3/4" hole to be cut in floorboards by temporarily positioning shifter brackets on transmission.

NOTE: Some transmission brackets are formed from flat steel plates and may have multiple mounting positions.


- 2. **Drill test hole** in floorboards at selected position to obtain dead center of shifter. Use hole saw, snips, or drill bit to cut 3-3/4" hole in floorboards.
- 3. **Install** transmission brackets on transmission. Leave bolts at tailshaft housing slightly loose.
- 4. The shift mechanism is then lowered through the 3-3/4" hole in the floorboards and bolted to the shifter brackets using the two 5/16" 2-1/4" bolts and tubular spacers provided. Center the shift mechanism on its slotted holes and tighten. **Take care not to over-tighten.** SEE PICTURE
- 5. Before installing the shift linkage, shift the stick between park position (near dash) and low (near seat) and determine if the stick position needs to be adjusted by using the slotted holes in the shift mechanism. If so, loosen the two 5/16" 2-1/4" bolts and adjust stick position, then re-tighten. SEE PICTURE
- 6. Install trans arm (see photos). On 350 turbo-hydro transmissions install arm with curve toward transmission. Use new split lock washer.
- 7. With transmission in park, using care not to position the lever past the park detent, as this will definitely confuse the procedure. Adjust linkage so that the 10-32 bolts can be installed without moving either arm

NOTE: (Adjustment issues) If you are having trouble engaging a gear, typically Park or Low, remove the splined arm on the shifter and re-position one spline in the direction needed. If the stick position has been adjusted all the way back (toward the seat) using the slotted holes in the shift mechanism, the splined arm on the shifter will definitely have to be adjusted 1 spline to the rear or the transmission will not go into 1st gear.

- 8. With bolts tight, shift through all positions to check synchronization of shifter stops and transmission detents. Adjust linkage slightly if necessary.
- 9. Adjust shifter friction (drag) by two 3/8" JAM NUTS on the cross shaft. (PROPER ADJUSTMENT REQUIRES A MODERATELY HEAVY AMOUNT OF DRAG TO AVOID SELF-SHIFTING.) SEE PICTURE
- 10. NOTE: If it becomes necessary to remove the stick from the mechanism for any reason, be sure to remove the spring #10 from the cross shaft before removing the roll pin #4 that holds the stick. The spring is behind the 3/8" set screw #11 that the jam nuts #12 are on. SEE PICTURE
- 11. If you desire a shorter stick, we stock several lengths including 12", 16", 23", 23" Swan, 23" Stainless Steel Swan and 28" sticks. Please call and order a retro fit kit.

Copyright Warning:

All drawings and diagrams are property of and represent the intellectual assets of Gennie Shifter. Any use of copyrighted drawings or reproduction and/or reverse engineering of said property or assets will be subject to prosecution in a court of law. Hey, that's why it's the Original and still the best.

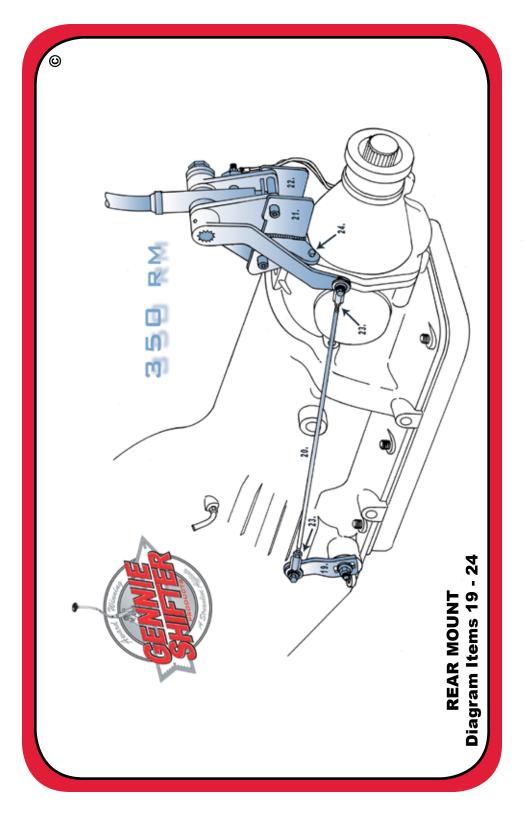

COMPONENT LIST FOR REAR MOUNT TH350 SHIFTER

Number on Diagram	Component	Description	Quantity
1	1015 to 1020	Shifter Stick	1
2	TBNG10001	T - Tube	1
3	RETA10001	Roll Pin Retainer	1
4	PINS30001	Pin - Roll 1/4 x 7/8	1
5	ARMS10002	Shift Arm RM	1
5	SCRW10012	10-24X5/16 Set Screw SHIFT ARM	1
6	BRKT20032	Triangle Bracket #1	1
7	BUSH10001	Delrin Bushing	3
8	BRKT20033	Triangle Bracket #2	1
9	WASHNFC2	WASHER #2 1" OD x 13/32 ID x .	1
10	SPRG10006	Internal Spring 12	1
11	SCRW10014	3/8-16 x 1" Sckt Set Screw	1
12	NUTS10037	NUT-JAM 3/8-16	2
14	SWCH20001	Neutral Saftey Switch	1
15	SPAC10001	SHIFTER TUBE	2
16	PLAT10002	Plate - Selector 350 RM	1
17	BOLT10011	5/16-18 x 2-1/2 Sckt Cap	2
18	JONT10001	Heim Joint	2
19	ARMS20006	Trans Arm 350 RM	1
20	RODS10003	Linkage Rod 350-400 RM	1
21	BRKT20026	Trans Bracket 350 RM LH	1
22	BRKT20027	Trans Bracket 350 RM RH	1
23	NUTS10035	Nut - Jam 10-32 Plated	2
24	BOLT10023	3/8-16 x 1-1/2" Sckt Head Cap	2
for 1.	CAPS20001	Small Plastic Black Button Cap	1
for 1.	KNOB	KNOB-3 SPEED	1
for 1.	NUTS10018	Nut - Jam 5/16-18 SS	1
for 13.	WASH10011	Shim .568 x 1 x .048	1
for 13.	WASH10030	.553x.837odx.016 Shim	1
for 13.	WASHNFC5	WASHER #5 Shim 1" OD x 9/16" I	1
for 17.	NUTS10033	Nut - Nylock 5/16-18	2
for 17.	WASH10029	AN960 C516L Thin Washer SS	4
for 18.	BOLT10026	10-32x3/4 Soc Cap	2
for 18.	NUTS10009	Nut - Nylock 10-32	2
for 18.	WASHNFC4	WASHER #4 AN 960 C10 Washer	2


NEUTRAL SAFETY SWITCH

The GENNIE SHIFTER comes with a double pole normally open safety switch which is connected into the wire (series) from the **IGN** (ignition) switch to the POS (positive) side of the starter solenoid.

WARNING:

Proper operation of the neutral safety switch is extremely important so the vehicle does not start in gear. Due to variations in manufacturing, it may be required to shim the neutral safety switch, to allow for proper operation.

UPPER SHIFTER Diagram Items 1 - 18

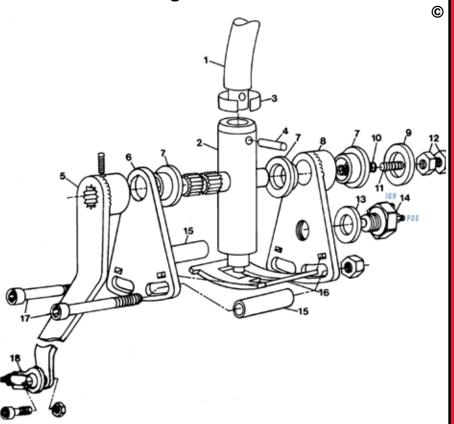

READ THIS NOTICE

This product will be partially or entirely replaced if defective in manufacture or packaging. Except for such replacement, the sale or any subsequent handling of this product is without warranty or liability even though defect, damage, or loss is caused by negligence or other fault. PLEASE CONSULT THE DEALER YOU PURCHASED THIS PRODUCT FROM.

COMPONENT LIST FOR MID-MOUNT TH350 SHIFTER				
Number on Diagram	Component	Description	Quantity	
1	1015 to 1020	Shifter Stick	1	
2	TBNG10001	T - Tube	1	
3	RETA10001	Roll Pin Retainer	1	
4	PINS30001	Pin - Roll 1/4 x 7/8	1	
5	ARMS10001	Shift Arms	1	
5	SCRW10012	10-24X5/16 Set Screw SHIFT ARM	1	
6	BRKT20032	Triangle Bracket #1	1	
7	BUSH10001	Delrin Bushing	3	
8	BRKT20033	Triangle Bracket #2	1	
9	WASHNFC6	1" OD x 7/16" ID x .075 (USS 3	1	
10	SPRG10006	Internal Spring 12	1	
11	SCRW10014	3/8-16 x 1" Sckt Set Screw	1	
12	NUTS10037	NUT-JAM 3/8-16	2	
14	SWCH20001	Neutral Saftey Switch	1	
15	SPAC10001	SHIFTER TUBE	2	
16	PLAT10001	Plate - Selector 350-400	1	
17	BOLT10011	5/16-18 x 2-1/2 Sckt Cap	2	
18	JONT10001	Heim Joint	2	
19	ARMS20007	Trans Arm 350	1	
20	BOLT10004	3/8-16 X 1/2 Button Sckt Hd	6	
21	BRKT10001	Shifter Bracket MTG	2	
22	BRKT20010	Trans Bracket 350 LH	1	
23	BRKT20011	Trans Bracket 350 RH	1	
24	RODS40005	Linkage Rod 5 1/2in	1	
24	RODS40007	Linkage Rod 8 1/4in	1	
24	RODS40008	Linkage Rod 11 1/4in	1	
25	STUD20001	Trans Bracket Stud	2	
26	TABS20006	Tab - Trans 350 LH	1	
26	TABS20007	Tabs - Trans 350 RH	1	
27	NUTS10035	Nut - Jam 10-32 Plated	2	
for 1.	CAPS20001	Small Plastic Black Button Cap	1	
for 1.	KNOB	KNOB-3 SPEED	1	
for 1.	NUTS10018	Nut - Jam 5/16-18 SS - for knob	1	
for 13.	WASH10011	Shim .568 x 1 x .048	1	
for 13.	WASH10030	.553x.837odx.016 Shim	1	
for 13.	WASHNFC5	WASHER #5 Shim 1" OD x 9/16" I	1	
for 17.	NUTS10033	Nut - Nylock 5/16-18 - for #17	2	
for 17.	WASH10029	AN960 C516L Thin Washer SS	4	
for 18.	BOLT10026	10-32x3/4 Soc Cap	2	
for 18.	NUTS10009	Nut - Nylock 10-32 - for Heim Joint	2	
for 18.	WASHNFC4	WASHER #4 AN 960 C10 Washer	2	
for 20 and 25.	WASHNFC3	WASHER #3 3/8 AN 960 C616L	8	
for 25.	NUTS10021	Nut - Jam 3/8-24 NI	2	

