



# Bamboo Floor Budget Click system


①

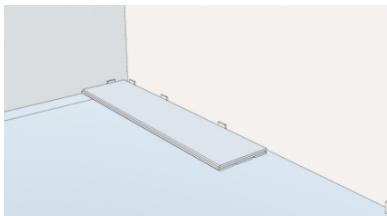


②

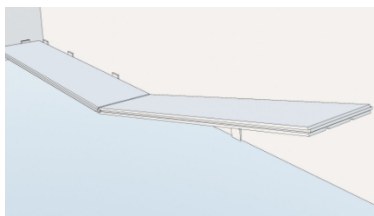


③

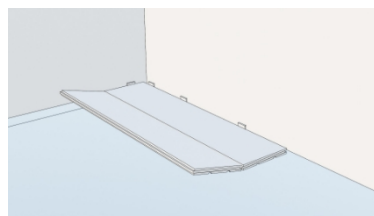


④

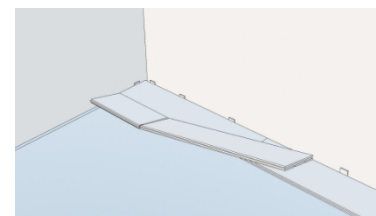


⑤

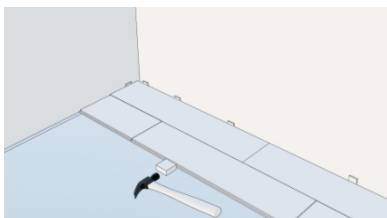


⑥

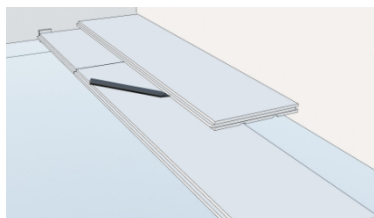

⑦

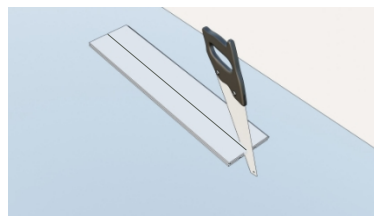

⑧

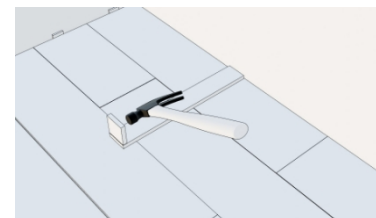

## Preparation:

- Bamboo parquet must acclimate for at least 48 hours in the room where it is installed. The floor must be stored flat, in its sealed packaging, at temperatures between 18° and 21°C (40-65% humidity). The planks must be installed immediately after opening the plastic package or box stop, size or color deviations and damages. Complaints about these issues will not be addressed after the equipment is installed or further
- The subfloor on which the bamboo is placed, a minimum temperature of 18°C. Make sure that the subfloor is level, crack-free, dry and clean.
- High moisture content has a negative impact on bamboo floors. The use of adhesive tape because it can damage the maximum allowable moisture content for finishing. different subfloors is: Sandcement 1.8%, Chipboard 7-9% and Anhydrite 0.3%.
- It is recommended that a PE moisture barrier film (at least 0.2 mm thick) to protect them from dust and sand. to be used with overlaps of at least 30 cm.
- It is recommended to install a sound-insulating underlay.

## Notice:

- Bamboo is a natural product! Variations in color and texture within one delivery are possible. Mix different sections from multiple boxes during installation.
- It is recommended that materials be checked for moisture before installation.
- Installation of bamboo flooring should ideally be the last task of the project to avoid surface damage. Be careful with the furniture and chairs should be have in order to prevent damage to the floor surface.
- Place a doormat at entrance doors

## Ideal conditions:

- The room temperature should be 18-21°C with a humidity of 40-65%.
- The air becomes very dry during the winter months. Use air moisteners on radiators and electric air-humidifiers for larger spaces to improve the keep humidity constant. During the summer and fall, when the air humidity is high, provide a good ventilation of the room.
- Too many fluctuations in the space climate can cause the material to warp, shrink or bend. Check the humidity with a hygrometer.

## Expansion Space:

- This type of parquet is usually laid floating, but under certain conditions it can also be completely attached to the subfloor.
- be glued - please consult your supplier. Professional knowledge and tools are required for this process.
- Bamboo and wood products are affected by humidity. High humidity causes expansion, while low humidity can cause shrinkage. Therefore, leave an expansion gap of about 10-15 mm around walls, door frames, pipes, etc. For floors wider than about 7 or 12 meters, provide expansion joints and a larger space.

### **Floor heating/cooling:**

- This floor type can be installed over water-based floor heating systems under certain conditions.

### **Installation:**

(Numbers refer to the diagrams above)

1. Place the panel with the tongue side facing the wall and later install spacers.
2. Snap the end edge of the next panel into the previously installed panel, after laying 2 to 3 rows of spacers place between the wall and the panels.
3. Start the second row with the cutting waste from the end of the first row. Make sure that the end joints of the boards are staggered by at least 50 cm. Use a wedge under the previous panel.
4. Connect the ends, press the panel down and slide the long side into place.
5. Gently tap the parts into place with a tapping block. Remove the wedge and gently press the parts onto the subfloor. Continue laying the floor in this way.
6. To measure the width of the last row, lay the board to be cut upside down on the previous row, with another board against the wall. Using the top plank as a guide, mark the cutting line and allow for expansion space.
7. Cut the board along the pencil line.
8. Install the last board with a hammer and a tapping iron. Use spacer shoulders to maintain the required expansion joint.

### **Maintenance and cleaning:**

- Newly installed, factory-oiled or pre-finished bamboo floors require immediate maintenance.
- Factory-oiled WOCA floors must be re-oiled after installation for maximum protection.
- Polish with a red pad or patina paint after application of the under- holding oil, then polish with a white pad or cloth.
- Your floor will last longer if you use the right cleaning and maintenance products.

### **Important:**

These installation instructions are intended to describe optimum application possibilities. However, this guide cannot be considered binding because individual circumstances (such as specific applications, substrate and processing) are beyond our control.

Consult your supplier in case of doubt. Subject to change.

### **Skirting boards:**

Baseboards should be attached to the walls with screws and dowels so that the floor can move naturally. If baseboards are attached to the floor, they may restrict movement and cause damage.