

These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

FP-ABS

ABS PLASTIC FRONT DOOR PANELS FOR VANAGON

The FP-ABS for Vanagon is CNC-machined to fit the interior front door panel. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered. Each panel features cutouts for the door and grab handles, but all other options (power window switch, power mirror switch, manual window cranks, map pocket mounting locations, and speaker hole) are scribed onto the back side of the panel with easy-to-follow lines.

See the diagram on the back of this sheet for a description of the scribed cutout lines on the back of each panel. Use the appropriately sized hole-saw, rotary tool or saw to cut the sections for your door accessory options. Each cutout may then need to be filed slightly for clearance. Fitment Note: The speaker hole is sized for late-model stock speakers. Early-model stock speakers will require a larger (4") hole. Be sure to only cut the sections for your particular door accessory options. Not all recesses will need to be cut out.

Panel Installation:

- 1. Place the panel over the door, aligning the mounting hole cutouts.
- 2. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

FP-ABS ABS PLASTIC FRONT DOOR PANELS FOR VANAGON

The FP-ABS for Vanagon is CNC-machined to fit the interior front door panel. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered. Each panel features cutouts for the door and grab handles, but all other options (power window switch, power mirror switch, manual window cranks, map pocket mounting locations, and speaker hole) are scribed onto the back side of the panel with easy-to-follow lines.

See the diagram on the back of this sheet for a description of the scribed cutout lines on the back of each panel. Use the appropriately sized hole-saw, rotary tool or saw to cut the sections for your door accessory options. Each cutout may then need to be filed slightly for clearance. Fitment Note: The speaker hole is sized for late-model stock speakers. Early-model stock speakers will require a larger (4") hole. **Be sure to only cut the sections for your particular door accessory options. Not all recesses will need to be cut out.**


Panel Installation:

- 1. Place the panel over the door, aligning the mounting hole cutouts.
- 2. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.



FP-ABS ABS PLASTIC FRONT DOOR PANELS FOR VANAGON

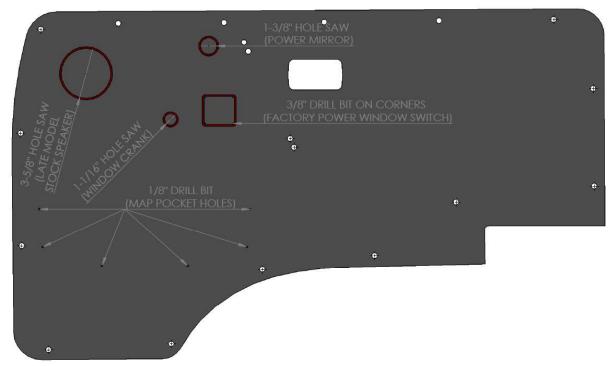

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

FP-ABS ABS PLASTIC FRONT DOOR PANELS FOR VANAGON

