

- 1. *For power mirrors only:* Remove OEM mirror glass by inserting a small flat-blade screwdriver or similar (butter knives work well) into left and right vertical gap between mirror and plastic housing body, and rotating locking ring to release glass (Bentley Manual, Page 66.2).
- 2. Clean surface of OEM mirror with alcohol pad thoroughly to remove any oil or contaminants.
- 3. Peel off 5 adhesive pad covers and gently press the new mirror glass onto the old mirror. Be careful! You only get one shot at it. Those pads are STICKY.
- 4. For power mirrors only: Re-install assembly to power mirror body, and enjoy a fresh perspective on your past!



- 1. *For power mirrors only:* Remove OEM mirror glass by inserting a small flat-blade screwdriver or similar (butter knives work well) into left and right vertical gap between mirror and plastic housing body, and rotating locking ring to release glass (Bentley Manual, Page 66.2).
- 2. Clean surface of OEM mirror with alcohol pad thoroughly to remove any oil or contaminants.
- 3. Peel off 5 adhesive pad covers and gently press the new mirror glass onto the old mirror. Be careful! You only get one shot at it. Those pads are STICKY.
- 4. For power mirrors only: Re-install assembly to power mirror body, and enjoy a fresh perspective on your past!



- 1. *For power mirrors only:* Remove OEM mirror glass by inserting a small flat-blade screwdriver or similar (butter knives work well) into left and right vertical gap between mirror and plastic housing body, and rotating locking ring to release glass (Bentley Manual, Page 66.2).
- 2. Clean surface of OEM mirror with alcohol pad thoroughly to remove any oil or contaminants.
- 3. Peel off 5 adhesive pad covers and gently press the new mirror glass onto the old mirror. Be careful! You only get one shot at it. Those pads are STICKY.
- 4. For power mirrors only: Re-install assembly to power mirror body, and enjoy a fresh perspective on your past!