Optima Turn Installation & Operation Guide





Wellell Inc. 2022.01.27

- Accessories
- User Interface
- Installation
- General operation
- Turning mode
- Heel relief
- Patient handling
- Transport mode

- Emergency
- Cleaning & Disinfection
- Storage
- Maintenance
- Trouble shooting
- Features
- FAQ





Accessories



Accessories

Wellell



Operation Panel



User Interface





User Interface Screen Unlock

Wellell

User interface will be locked automatically 5 mins after last operation or by pressing panel lock key for 1 s. To unlock user interface, press and hold panel lock key for 1 s.



User Interface Max firm

Wellell

Press max firm button to make the mattress fully inflated. (automatically back to previous mode setting if idle for 20 minutes)



User Interface Alarm Mute



When alarm occurs, press alarm mute button to temporarily mute for 3 minutes. The alarm resumes automatically if technical issue is unable to be resolved within 3 minutes.







Installation Set up the replacement mattress



Set up the replacement mattress on the bedframe, make sure that the Feet icon is at the bed end



Installation Secure the mattress



Secure the mattress to the bed frame using the click-lock buckles



Installation Setup the pump



Hang the pump onto the foot board



Installation Connect the quick connector



Press both sides of quick connector to remove the lid, then connect it to the slot on the pump.



Installation Connect the power cord



Connect the power cord to the slot on the left side of pump.



Installation Storage of power cord

Wellell

The cable management tape is provided along the side of the mattress to manage power cord.

02/15 Pohan Cable Management的設計有更改過 · 因此目前無影片素材

Installation Plug-in the power



Connect the power plug to the power socket.



Installation Turn on the power switch



Turn on the power switch to operate the pump.



Installation Mattress inflation



The new mattress would be fully inflated within 30 minutes.



General Operation



General Operation Adjustment pressure level based on patient weight





Wellell

General Operation Alternating mode

Wellell

Alternating mode : The air cell inside the mattress are deflated and inflated periodically to release pressure.







Select the cycle time(10, 15, 20, 25 minutes).



General Operation Continuous low pressure (CLP) mode



CLP mode provide better envelopment and immersion.



General Operation Auto seat inflation mode





Auto seat inflation automatically initiates when head section is raised by over 30 degrees to prevent patient from being bottomed-out



Turning Operation



Turning Operation Turning mode

Wellell

and left-supine-

Three turning mode including left turn right turn can be selected.



, right turn

Turning Operation Turning angle

Wellell

Three turning angle including light-turn(**10°**) *(*, half-turn(**20°**) *(* and full-turn(**30°**) *(* can be selected.



Turning Operation Turning dwell time



Turning dwell time can be selected between 10/20/30/60 mins



Turning Operation Pause

Wellell

Allow caregivers to temporarily stop the action when emergency occurred by pressing pause key. Caregivers could change to other settings during this period which return to the previous mode automatically after 10 mins.







Heel Relief

Wellell

The last five cells from the foot-end have heel-relief connectors to release pressure and eliminate pressure exerted on patient's heel.



Patient Handling



Wellell

Press max firm button to make the mattress fully inflated, make sure the side handling has been removed, disconnect the quick connector.







Transport

Wellell

For optimum comfort, change the system to CLP mode and wait for 5 mins before disconnecting power cord is recommended. Cap on the quick connector to keep the air inside the mattress. The mattress remains inflated at least 24 hours.






Emergency CPR

Wellell

Rotate the CPR knob on left-hand side of mattress into open position to release air from mattress, it will let patient bottom out within 15 s.



Cleaning and Disinfection



Washing temperature:

- Top Cover : 95 °C
- Bottom cover : 60 °C



Wiping instruction including cover/base

- 75% 酒精 alcohol
- 0.5% (5000 ppm) 漂白水(次氯酸鈉) chlorine solution

Wellell





Storage

Wellell

Turn off pump-->Switch off the power-->Remove the power cord -->Storage the power cord-->Remove the position sensor-->Remove the pump connector-->Rotate red CPR knob in the OPEN position for deflation(※Remove extra air and prevent air flow into mattress)-->Close the lid--> Place the pump on the mattress for storage --> rolled the mattress by straps



Maintenance



Wellell

Operators are suggested to check and replaced air filter regularly every six months



Troubleshooting





Er 00

Reason: The inflation time exceeds its setting standard Solution:

1. Check the CPR knob is turned to close.

2. Check if the tubing between the mattress and pump is correctly connected.

3. Check if there are any air leakages on the air cells

If the problem you have not solve the above information, please contact local representative or Wellell.

Er01-06

Reason: low pressure alarm

Solution :

1. Check the CPR knob is turned to close.

2. Check if the tubing between the mattress and pump is correctly connected.

3. Check if the heel-relief connectors at the last five air cells properly connect.

4. Check if there are any air leakages on the air cells

If the problem you have not solve the above information, please contact local representative or Wellell.

Er18

Reason: The connector did not connect with the pump correctly or

properly

Solution :

1. Check if the tubing between the mattress and pump is correctly connected

If the problem you have not solve the above information, please contact local representative or Wellell.

Mattress Features



Mattress Top Cover material

Wellell

4 way stretch top cover required comfortability, high moisture permeability, low friction, low shear force and Fire rating(BS 7175 Crib 5 & Crib 7).





Wellell

Firm air cell side bolsters combined with the bed rails prevent the patients from slipping off the mattress



FAQ



FAQ -1



Q. What's the step for installation?

A. Place the mattress \rightarrow Fix the mattress \rightarrow Place the pump \rightarrow Connect with the connector \rightarrow Connect the position sensor \rightarrow Plug the power cord \rightarrow Storage the extra power cord \rightarrow Plug to the socket \rightarrow Turn on the power \rightarrow Activate the pump \rightarrow Pre-select therapy mode \rightarrow Initial mattress inflation \rightarrow Auto Adjustment

Q. How long for initial mattress inflation?

A. Normally within 30 mins

Q. What's the suggestion for cleaning and disinfection?

A. Washing temperature suggestion: top cover with 95degree and bottom cover with 60 degree

Wiping condition (included top cover, bottom cover and pump75% alcohol solution and 0.5% (5000 ppm) chlorine solution concentration

Q. Where's the CPR position? How long for deflation?

A.The red CPR knob locates on the left side of the mattress and allows deflation for 15 seconds

Wellell

Q. What's the instruction for storage?

A.Turn off pump \rightarrow Switch off the power \rightarrow Remove the power cord \rightarrow Storage the power cord \rightarrow Remove the position sensor \rightarrow Remove the pump connector \rightarrow Rotate red CPR knob in the OPEN position for deflation(\otimes Remove extra air and prevent air flow into mattress) \rightarrow Close the lid \rightarrow Place the pump on the mattress for storage \rightarrow rolled the mattress by straps

Q. How long should the operate change air filters?

A. The system will remind operators to change air filters after six months operation to make sure normal function. If not changing the air filter, system will send visual and audio alarm to remind operators to change every time when activate the system, press the mute button can turn off the alarm function.

Q. What should the operator do when the screen shows error code?

A. Please refer to troubleshooting chapter and follow the instruction. If troubles remain, please connect to the distributors or manufacture.

Q. How to activate one time turning function? What is the purpose behind this function?

A. Press of for 3 seconds to activate one time turning. This function enables clinicians to do one-time caring behavior, then it will automatically back to previous mode setting if idle for 20 minutes)

Q. Why Optima Turn is not able to provide alternating function during turning process when the holding time (dwell time) is being set at 10 mins?

A. An integral alternating cycle is 20 mins, a 10 mins setting cannot complete a whole alternating therapy.



