



ICON

Troubleshooting Manual

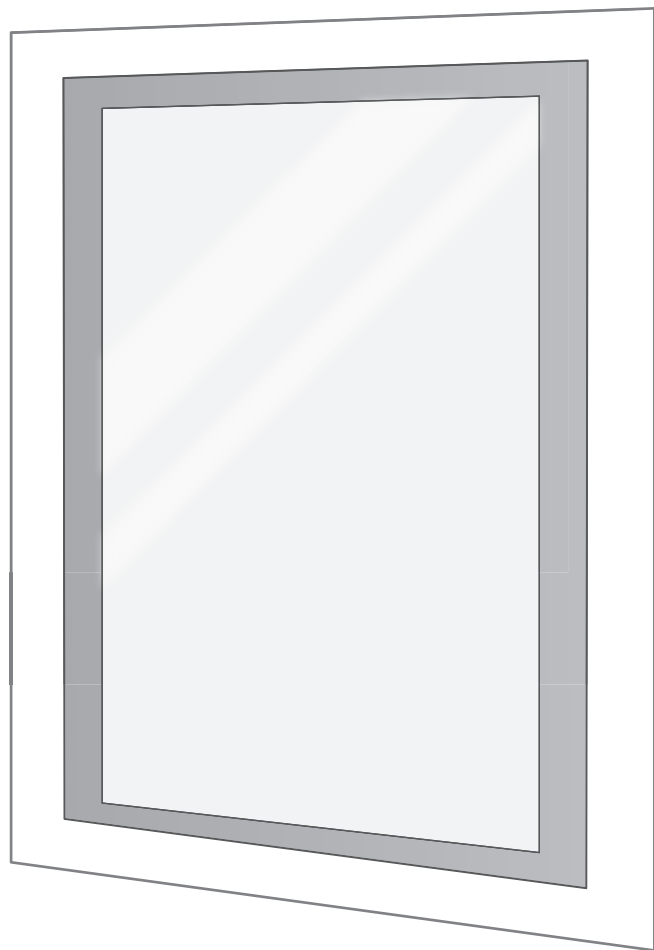

STEP 1

Lay the mirror on its back with mirror facing up, providing an easy access to the side anchor screws.

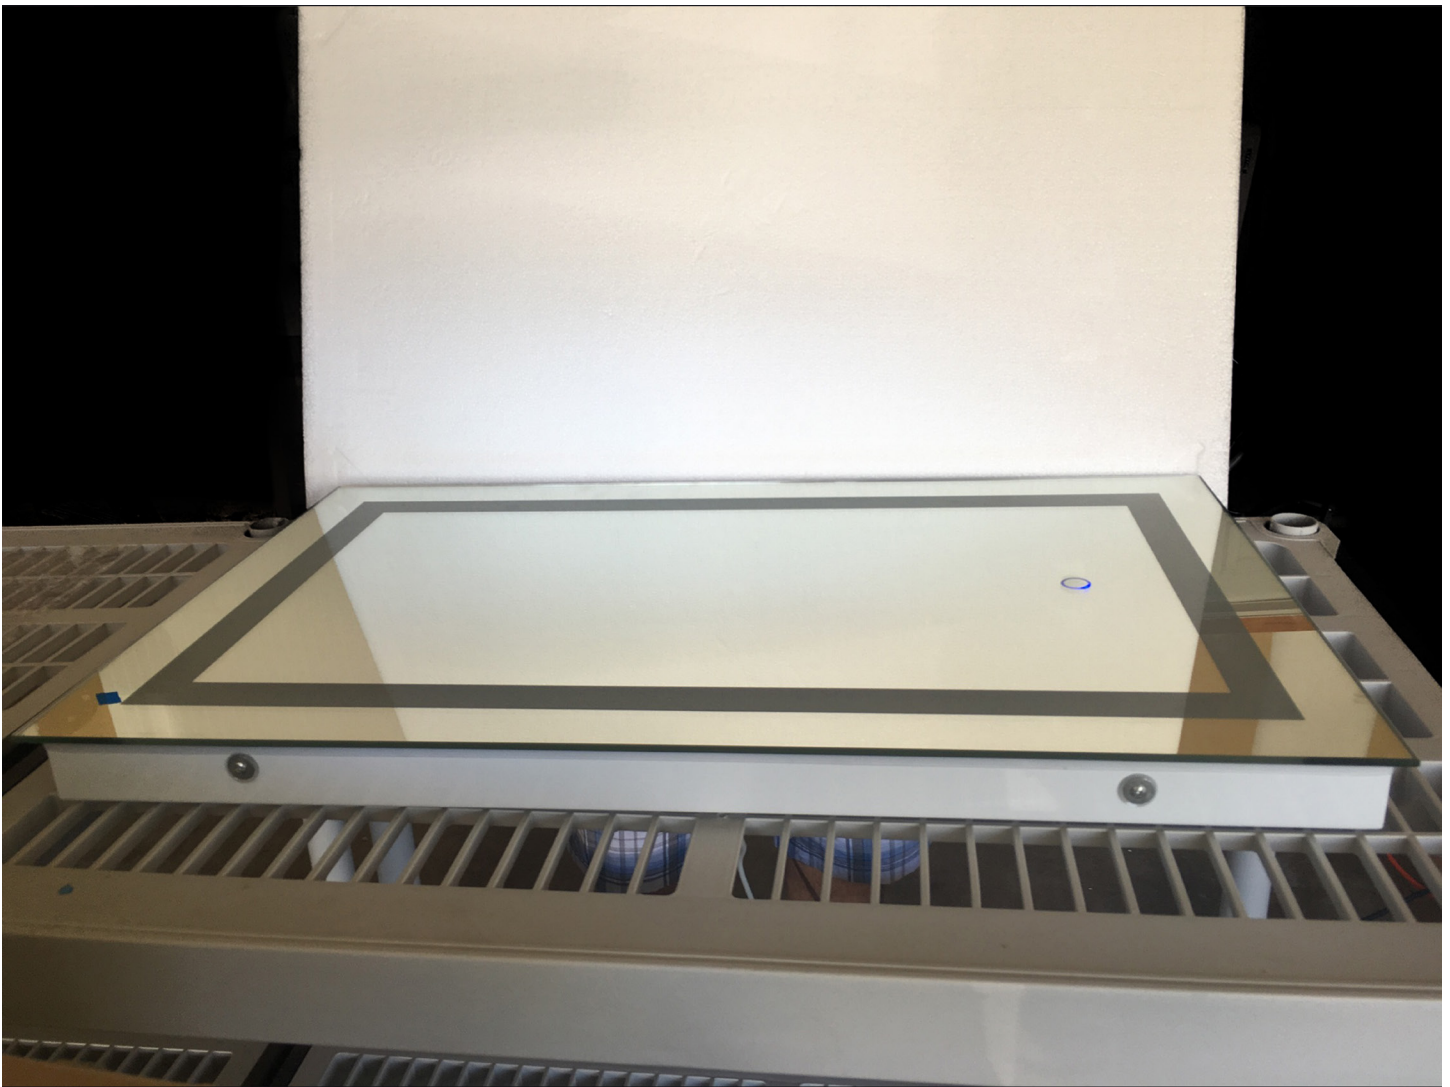

STEP 2

Unscrew the four Philips head anchor screws from mirror frame.




STEP 3

Carefully lift the back panel, flip and hold open on one of its sides.




STEP 3 (continued)

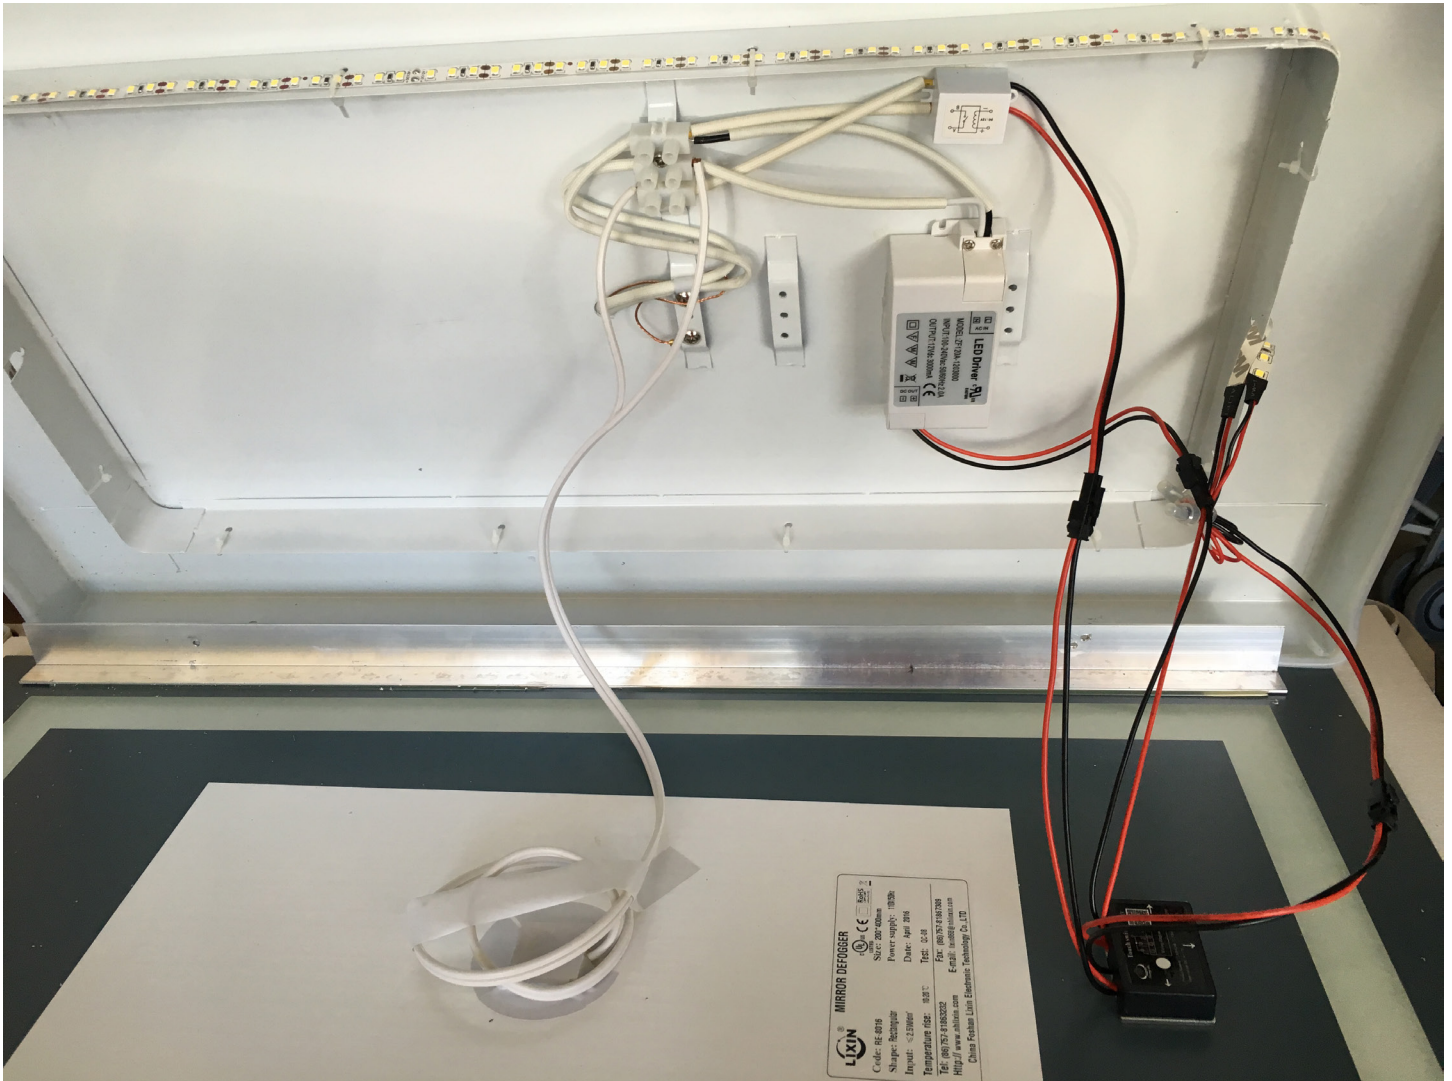

STEP 4

Review the parts, and ensure that all wires are connected. Proper functionality requires that no wires are loose, all couplings are locked together


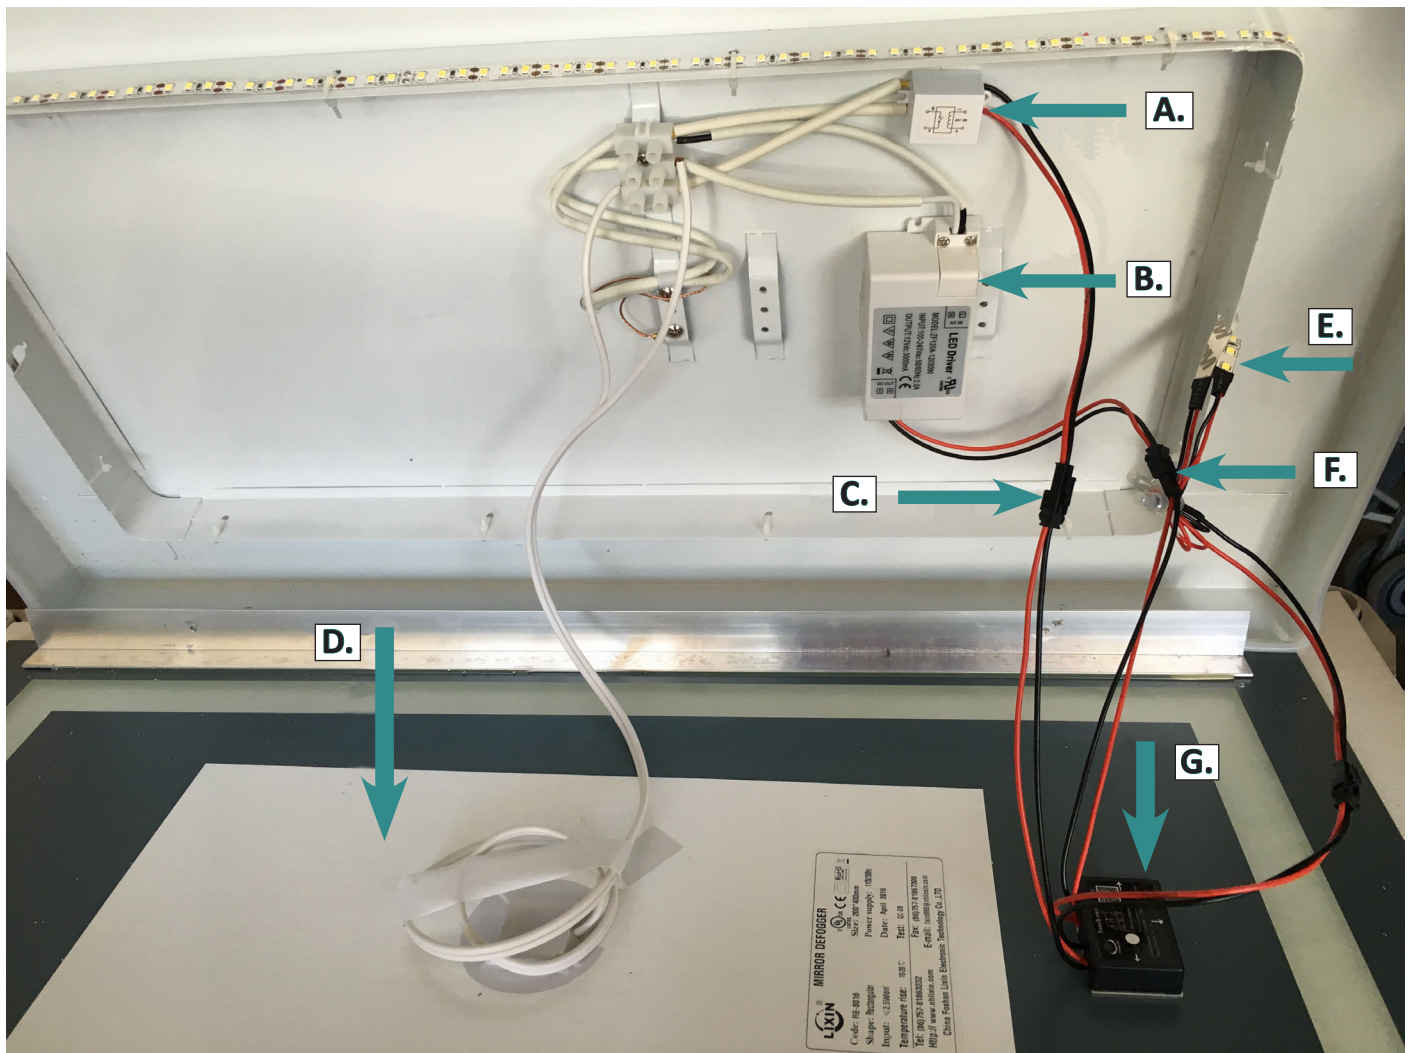


- A. ON/OFF Switch
- B. LED Driver
- C. ON/OFF Cable between touch sensor and switch

- D. Heating Element
- E. Connection to LED Strip
- F. Connection to LED Driver
- G. Touch Sensor

STEP 5

If a coupling is came loose during shipment, simply slide the 2 pins into the socket.

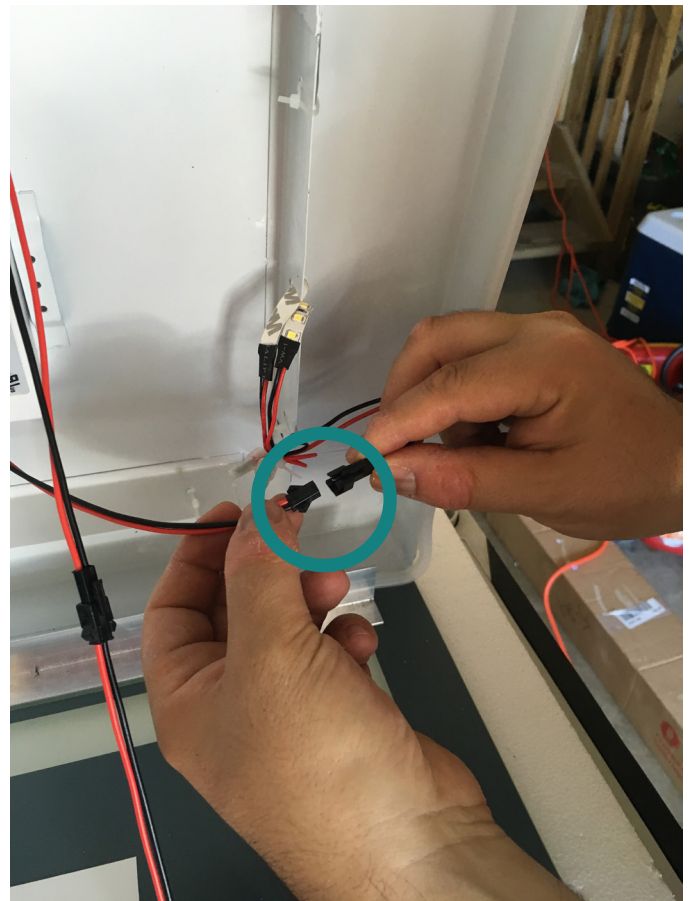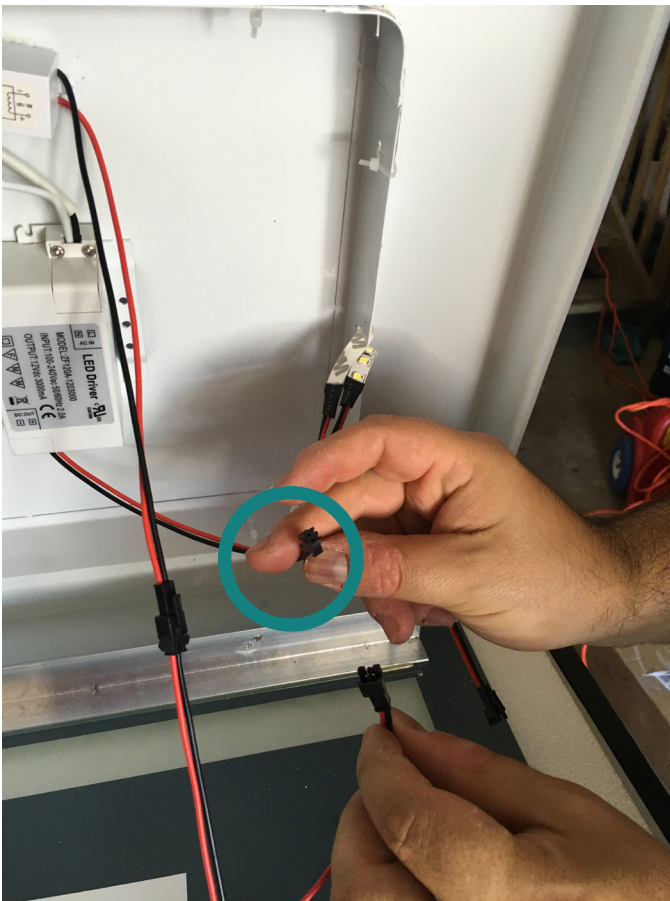

STEP 6

Close the back panel and secure it with the four anchor screws.



TOOLS USED

