



OSMO Wood Reviver gel

OSMO Wood Reviver power gel is a special liquid detergent for cleaning and refreshing external timbers which have gone grey, such as decking, garden furniture, pergolas and other trim.

Easy to use. The gel has a thick "no drip" consistency which makes it ideal for use on both horizontal and vertical surfaces. The 2.5 litre can is supplied with a free scrubbing brush which can be attached to a broom handle. Perfect for cleaning decks.

Before using, remove any plants that may come into contact with the gel, and cover or remove any metal objects and ornaments.

First, sweep the area with a broom or brush to remove loose dirt etc. Moisten the timber with clean fresh water, then apply the Wood Reviver gel neat from the container. **Do not thin.** Apply generously, using a stiff hand held scrubbing brush on garden furniture etc, or the scrubbing brush / broom for decks. Wait for 20 minutes, then scrub with the brush or broom, finally rinsing with plenty of fresh water. Allow about 48 hours of warm dry weather to dry the timber before applying any surface finish.

Available in 2.5 litre (with free brush) containers. Store in a frost free area.

OSMO Wood Reviver is solvent free, and contains no formaldehyde, chlorine compounds or amines. The active ingredient is oxalic acid (<5%) which is biologically degradable.

Store out of reach of children. Avoid contact with eyes and skin. In case of contact with eyes, rinse immediately and consult a doctor. For sensitive skin, wear suitable protective clothing, gloves and goggles etc. If swallowed, seek medical advice immediately, showing the container or label.

Manufactured by Ostermann & Scheiwe GmbH & Co. KG, Munster, Germany.