



## ninebot F25e Kick Scooter Instruction Manual

[Home](#) » [Ninebot](#) » ninebot F25e Kick Scooter Instruction Manual

### Contents [ [hide](#) ]


- [1 ninebot F25e Kick Scooter](#)
- [2 Welcome](#)
- [3 Packing List](#)
- [4 Assembly](#)
- [5 Activation](#)
- [6 How to Ride](#)
- [7 Charging](#)
  - [7.1 WARNINGS](#)
- [8 Folding](#)
- [9 Carrying](#)
- [10 Unfolding](#)
- [11 Adjusting the Disc Brake Cable](#)
- [12 Valve Stem Extension](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)

**ninebot**

**ninebot F25e Kick Scooter**



## Welcome

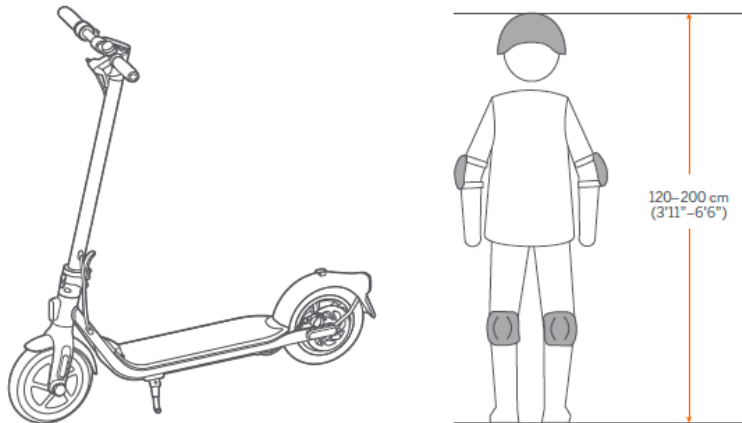

**Warning:** Always wear a helmet, elbow pads and knee pads when riding.

## Packing List

Ninebot KickScooter



 
- 3 mm Hex Wrench




- M5 Screw × 5



- Valve Stem Extension



- Battery Charger

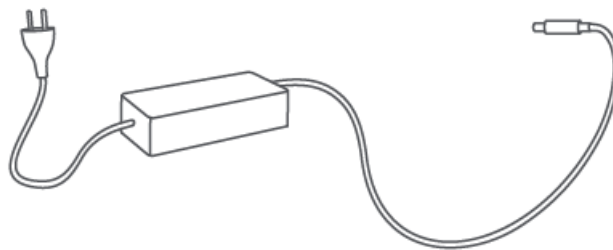


- Tire (For F25E)




## Assembly

- Unfold the handlebar stem and close the quick-release lever.

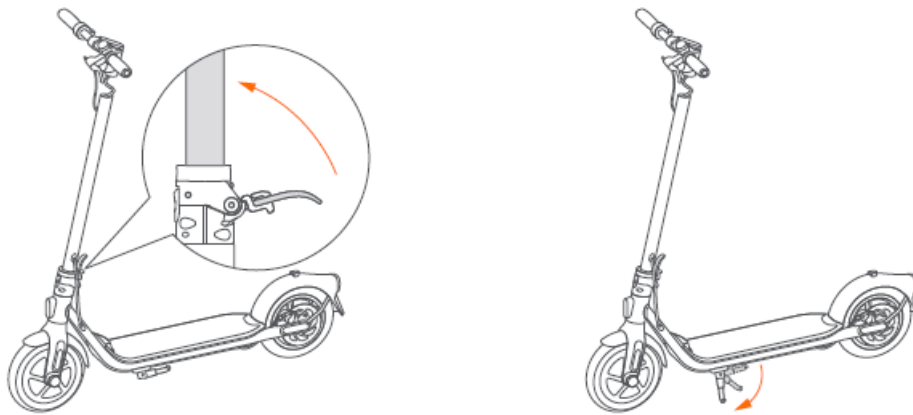

- Unfold the kickstand.
- Connect the wires inside the handle and the stem. Slide the handlebar onto the stem with the headlight facing forward.

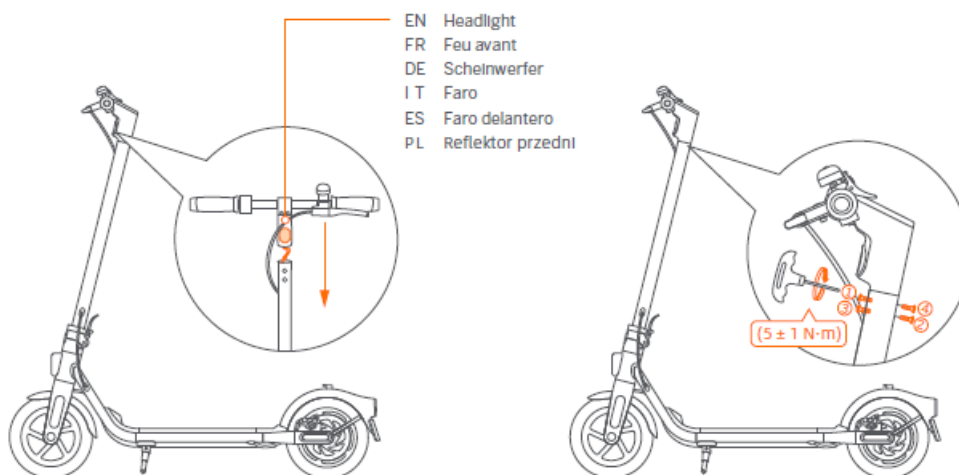


- Install the 4 screws in order (two on each side) with the included hex wrench.

## Activation


- An inactivated KickScooter will keep beeping when turned on, and its speed is limited to 15 km/h (9.3 mph).




- Scan the QR code to download the Segway-Ninebot app to register or log in.

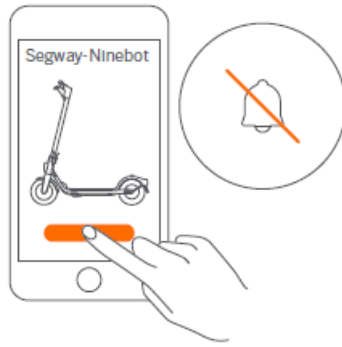


- Click “Search vehicle” and pair with your KickScooter.

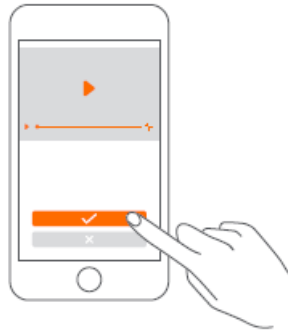

- Follow the instructions to watch the Riding Safety.

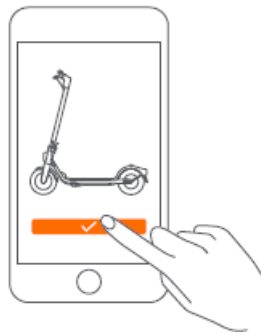


- Click to activate the KickScooter.

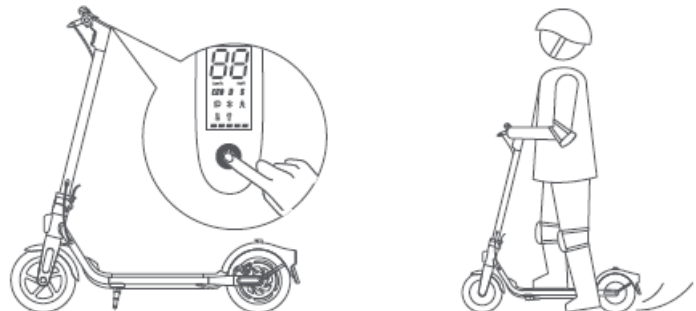


## How to Ride


- Power on the KickScooter.

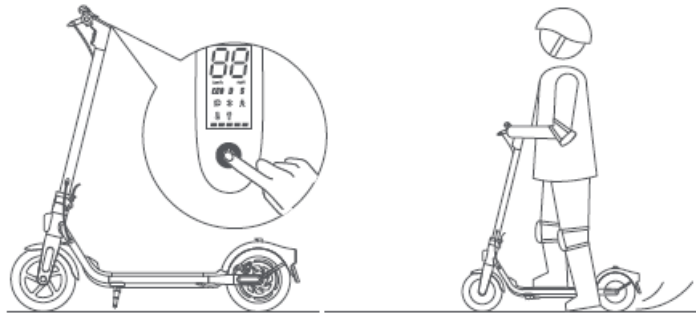


- Stand on the footboard with one foot and push off with the other foot to start gliding.
- Put both feet on the footboard and stand stably. Press the throttle to speed up when you are balanced. Note: For your safety, the motor will not engage until the KickScooter reaches 3 km/h (1.9 mph).

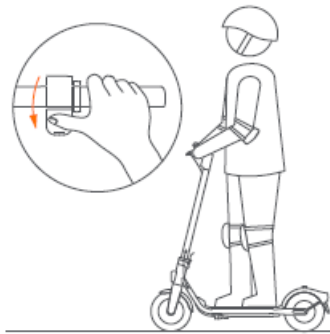


- Slow down by releasing the throttle and squeezing the brake lever. The rear light flashes when braking (not for F20D, F30D or F40D).

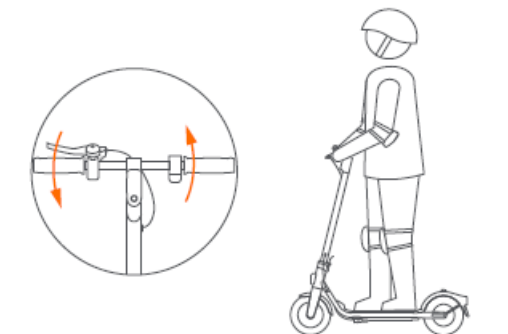

- To turn, shift your body and turn the handlebar slightly.

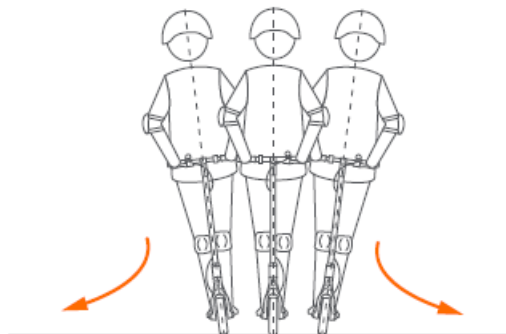


- Put down the kickstand.

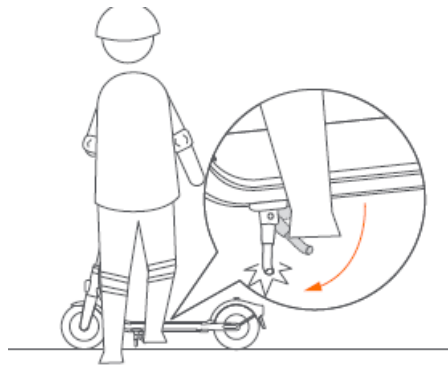


## Charging

- Charge Port

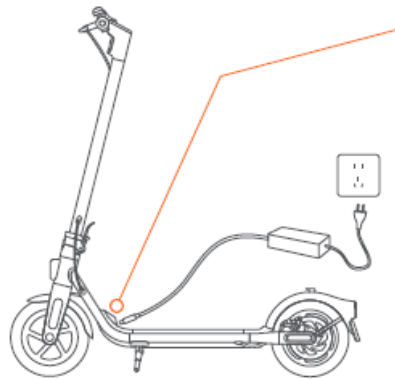


- Open the charge port cover.

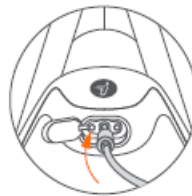


- Insert the charge plug.
- Close the charge port cover when finished.

## WARNINGS

- DO NOT ride on public roads, motorways, or highways unless the local laws or regulations have exceptions.

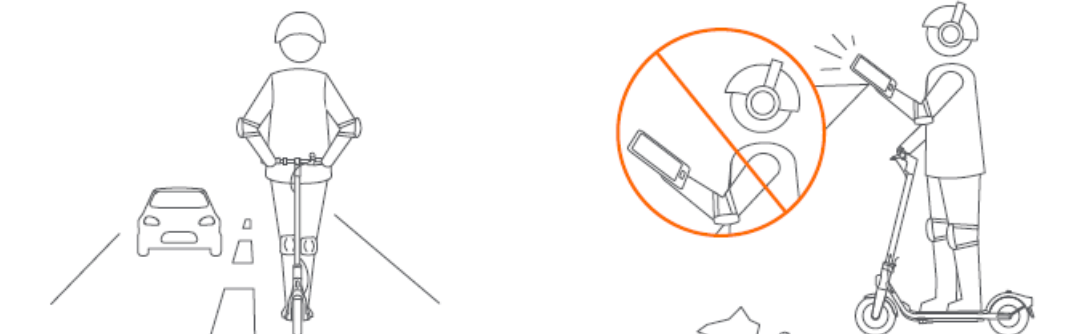


- DO NOT use a mobile phone or wear earphones when riding the KickScooter.
- EN DO NOT ride up and down stairs or jump over obstacles.

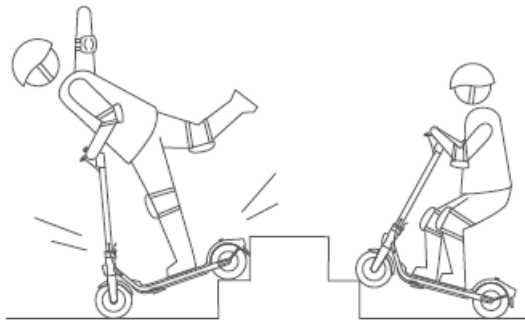


- DO NOT ride the scooter with only one foot or one hand.



- DO NOT overtake.

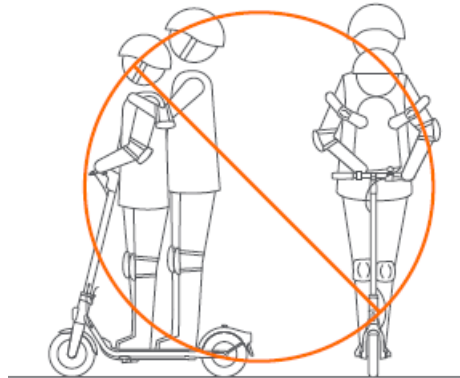

- Watch your head when passing through doorways.
- DO NOT carry any passengers.

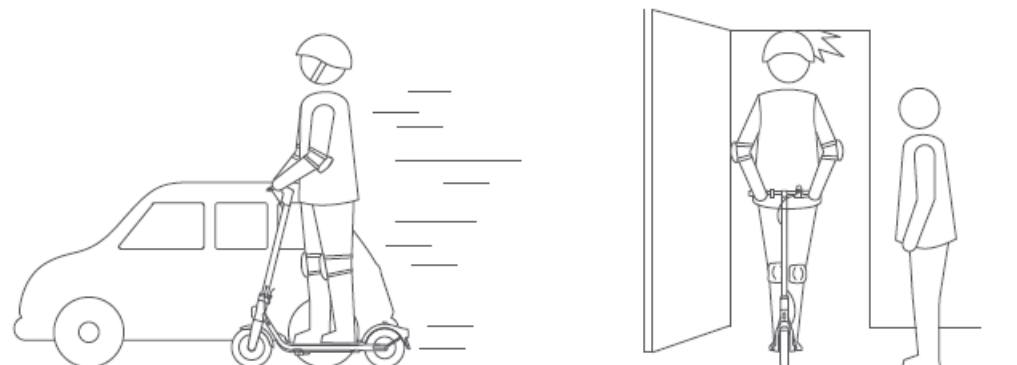


- Keep your speed between 3.1–6.2 mph (5–10 km/h) when you ride through speed bumps or other uneven surfaces.
- Avoid contacting obstacles with the tire/wheel.





- DO NOT carry heavy objects on the handlebar.

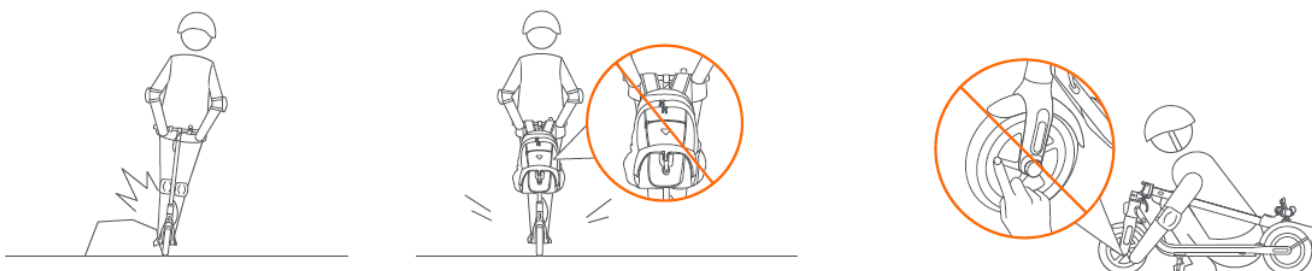

- DO NOT touch the hub motor after riding because it can get hot.
- DO NOT touch the disc brake after riding.
- DO NOT ride the scooter in the rain. DO NOT ride through puddles or other obstacles.



- DO NOT park in the open air or outdoors for a long time.




## Folding

- Lift the safety lock and open the quick-release lever.




- Lift the safety lock and open the quick-release lever again, then fold the stem.
- Align and fasten the snap hook and the buckle.

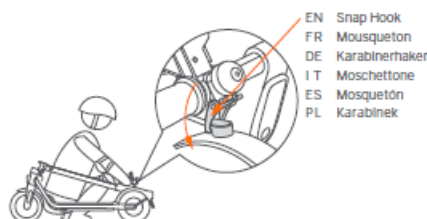


## Carrying

- Lift by the stem to carry.

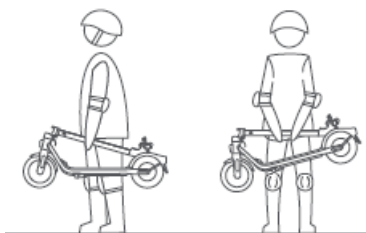

## Unfolding

- Disengage the snap hook from the buckle.

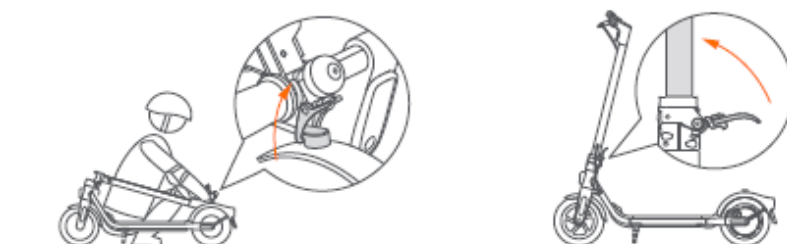

- Unfold the handlebar stem and close the quick-release lever.

## Adjusting the Disc Brake Cable


- Before adjustment, make sure the scooter is powered off and not charging.




- Loosen: Loosen the screw with a 4 mm hex wrench. Decrease the brake cable and tighten the screw.
- Tighten: Loosen the screw with a 4 mm hex wrench. Increase the brake cable and tighten the screw.

## Valve Stem Extension

- Unscrew the valve cap.

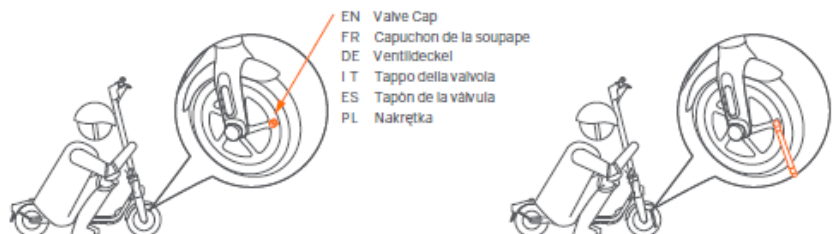

- Connect the valve stem extension to the tire valve stem.
- Connect the pump to inflate the tire.

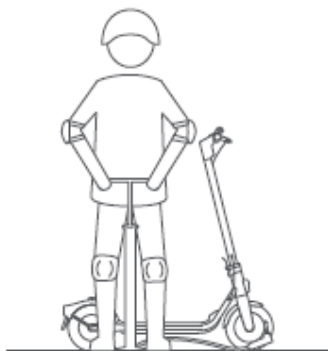

## Documents / Resources

	<a href="#">ninebot F25e Kick Scooter</a> [pdf] Instruction Manual F25e Kick Scooter, F25e, Kick Scooter
--	---