



Vibes Only

The Charlie

Instruction Manual

Size: 4.5"L x 2.7"W x 1.5" D

Weight: 110g

Materials: Medical-grade silicone

Battery: Lithium ion

Charging Time: 2 hrs

Hands-free pleasure, so your only focus is feeling good

Turn up the heat with or without your partner, thanks to this versatile, partially penetrative toy that can be used solo or during sex. The outer arm brings vibration to the clitoris, while the flexible internal arm stimulates the G-spot with gentle vibrations for full body pleasure. The unique shape of the Charlie ensures the sensations stay exactly where you want them.

Why you'll love the Charlie c-shape vibrator:

- Connects to the Vibes Only app
- Targets the clitoris and G-spot simultaneously for double the pleasure
- Stays in place effortlessly for hands-free satisfaction
- Flexible to fit your body perfectly
- 3 intensity levels
- 3 vibration patterns
- Ultra-soft, medical-grade silicone
- Water resistant





Hope you're ready, this vibrator only gets better...

Connect to the Vibes Only app to unlock a whole new world of pleasure by controlling your vibrator in the palm of your hand, or give control to your partner. The Charlie works in tandem with the app for a full-blown journey into orgasmic bliss.

And that's not all – get exclusive video content from the pros on sex, dating, pleasure, and more. We hope you'll learn, laugh, and love it.

Get connected

Scan this code to download the Vibes Only app on your phone.



Start vibing

This vibe comes partially charged. To get it all the way up, charge before use.

The vibe can be worn during penetration for shared pleasure.

For comfortable wear, lubricate generously with our recommended Juiced Up water-based lubricant and insert the rounded internal arm of the vibe into the vagina, adjusting as necessary.



On your device, hold down each power button for two seconds to turn on. Your Bluetooth will be enabled when the device turns on. The light will flash to indicate it is discoverable.

The app will detect your device. Select it, and your vibrator is synced!



To adjust intensity and patterns manually: Click the buttons to enjoy various sensations.

Power your vibrator

Charging instructions

If your vibe is feeling a little lowkey, it may be time for a charge.

Due to the unique design, each Vibes Only model charges slightly differently.

First, plug your USB cord into a standard charging block (high-power charging blocks may damage the battery).

Connect the magnetic charging points to the matching points on your vibrator. The light on your device will flash to indicate that it's charging.

When it is fully gassed up (approx. 2 hrs) the light will change to a steady glow.



Care for your vibrator ...and it will love you back!

Care instructions

We can't recommend using a water-based lubricant enough, such as Vibes Only Juiced Up. Avoid using a silicone-based lubricant as this could kill your vibrator. If you must use a silicone-based lubricant, perform a patch test first.

After every use, clean with warm water and antibacterial soap or toy cleaner. Dry thoroughly with a clean towel or air dry. Store in a cool, dry place and keep your vibrator away from toys made of other materials. Remember to charge periodically to maintain the battery life.

What NOT to do

- Use with oil-based massage oils or lubricants as it may damage the silicone.
- Leave your vibrator in direct sunlight or ever expose it to extreme heat.

Troubleshooting

Your vibe's light does not pulse when the charger is connected? This could be why:

- Battery is fully charged (go off!)
- Battery is drained and will require several minutes to recognize that it is being charged.
- Charger is not properly connected. Check your charging block and charging cable.

Your vibe does not connect with your phone when the button is pressed?

- Battery is drained and your device requires charging.
- Make sure you give Vibes Only permission to access Bluetooth in your phone settings.
- The Bluetooth on your phone is not enabled. Make sure to enable, or reset your phone if needed.
- You have exceeded the 10 seconds required for your vibrator to 'find' a device. Reset both your vibrator and your phone by turning off, waiting 30 seconds, then turning on. Now try again making sure your phone has fully restarted, with the Bluetooth switched on.

If you experience any other problems with your Vibes Only product or have any questions regarding operation, visit www.vibesonly.com or please contact: help@vibesonly.com.

What's your vibe?

Discover more:



@VibesOnly



vibesonly.com





