



Choppi

User guide

Please make sure to read this User Guide prior to using your unit.

Hello!

Welcome to Nutricook

Easy cooking, delicious food, better nutrition is what you get when you're part of the Nutricook community. We're so glad you've joined us! Now let's get started.

Join us and
#ElevateYourLife
@nutricookworld


Explore more of our products and accessories on our website.
www.nutricookworld.com

To get help:
Our customer service team is always ready to answer questions or solve issues.
Email: support@nutricookworld.com

Important safeguards & cautionary information

⚠ WARNING! This appliance contains a powerful motor, lithium-ion batteries, and sharp cutting blades. To avoid the risk of injury, fire, electric shock or property damage, carefully read all instructions before operating this appliance.

⚠ SAFETY FIRST!

When using any electrical appliance, basic safety precautions should always be observed, including the following [critical information](#).

GENERAL SAFETY

- To protect against risk of electrical shock, **DO NOT** immerse the motor base, charging cable, or any electrical plug in water or other liquid.
- Close supervision is necessary when any unit is used by or near children.
- This appliance is **NOT** a toy. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children.
- This cordless chopper is designed for chopping and mincing food items. **DO NOT use chopper for anything other than its intended use.**
- Misuse can cause injury.
- Be careful if hot liquid is poured into the food processor as it can be ejected out of the appliance due to a sudden steaming.
- **DO NOT** fill the cup past the **MAX line**.
- **DO NOT** attempt to remove the motor base while the blade is still spinning. Allow the unit to come to a complete stop before removing the motor.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- **Before operation, ensure there are no utensils inside the cup.**
- Avoid contact with moving parts.
- **DO NOT** tamper with any of the safety mechanisms.
- **DO NOT** place on or near a hot gas, electric burner and or in a heated oven. Heat from an external source will damage the appliance.
- **⚠ WARNING: DO NOT** expose this unit to extreme temperatures, such as direct sunlight or freezing conditions. This may adversely affect the battery performance. Prolonged exposure to extreme temperatures can cause the

batteries to leak, rupture, or explode.

Only use the chopper on a stable, dry and flat surface to avoid tipping and potential injuries.

WARNING: Ensure the motor base is securely locked in place before operating this unit.

DO NOT leave this chopper unattended when in use.

Periodically inspect this chopper and its components for damage or wear that may impair proper functioning or create a safety hazard.

DO NOT insert any object other than the appropriate charger into the USB port. **DO NOT** allow dust to accumulate inside the port.

DO NOT crush, drop, or damage the motor base. **DO NOT** operate if the motor base is damaged in any manner. Contact Customer Service for assistance.

DO NOT attempt to clean the motor base by immersing in water or other liquids. Use a soft, barely damp cloth to gently wipe and dry with a clean cloth. **NEVER PLACE THE MOTOR BASE IN THE DISHWASHER.**

DO NOT store anything inside the cup other than the blade.

Always **POWER OFF** and **UNPLUG** the unit when it is not in use, and **BEFORE** assembling, disassembling, changing accessories, or cleaning.

If the motor base becomes hot during use, allow it to cool before handling or recharging.

DO NOT charge in an area of extreme heat or cold.

DO NOT grab or carry your device by the charging cable.

When not in use, store the unit with the motor base properly locked in the cup.

DO NOT microwave any containers or accessories provided with this appliance.

DO NOT refrigerate or freeze the unit.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;

- farm houses;

- by clients in hotels, motels and other residential type environments;

- bed and breakfast type environments.

BLADE SAFETY

Blades are sharp! Handle with care when removing, inserting, or cleaning to avoid bodily injury.

DO NOT touch the sharp edges of the blades.

ALWAYS allow blade to stop moving before removing the motor base.

Handle with care when washing the blade by hand.

Regularly inspect the blades for damage. Discontinue use if the blade is bent or damaged. **Contact Customer Service for blade replacement.**

BATTERY SAFETY

The Nutricook Choppi contains rechargeable lithium-ion batteries. **The batteries are not replaceable**

and must be recycled or disposed off properly.

Opening and/or repairing or attempting to replace the batteries to your device can cause electric shock, device damage, fire, and personal injury, or property damage.

This product contains lithium ion batteries. Dispose of the motor base properly. Improper disposal may result in injury, death, or property damage as a result of battery fluid leakage, fire, overheating, or explosion. Lithium ion batteries contain elements that may pose health risks to individuals if they are allowed to leach into the groundwater supply. Disposing of these batteries in standard household waste may be illegal in some countries. Please consult your local jurisdiction for proper disposal. Contact your local recycling or hazardous waste disposal centers in your area for proper disposal instructions.

DO NOT expose the motor base containing the battery pack to fire or excessive heat. Exposure to fire or temperatures above 130°C/265°F may damage the batteries and cause an explosion.

DO NOT recharge this product near a fire, heat source, or in extremely hot conditions.

Recommended ambient charging and storage temperature: 10°C-40°C/50°F-104°F.

DO NOT use your unit in any area with a potentially explosive atmosphere (e.g., fueling areas or fuel service stations, below decks on boats or other vessels, fuel and/or chemical transfer and storage facilities, and areas where flammable chemicals or particles, such as grain dust or metal powders have collected in the air). In such areas, sparks can occur and cause an explosion or fire.

DO NOT use your unit if the motor base is overheated, has an odor, leaks, is bulging, or changes in shape. Leaks from battery cells can occur under extreme conditions. Battery fluid is corrosive and may be toxic. It can cause burns and may be harmful or fatal if swallowed. Turn off immediately, discontinue use, and contact Customer Service for assistance.

AVOID contact with battery fluid. If a battery leaks: Keep the leaked fluid from touching your skin, eyes, clothes, or other surfaces. If the battery fluid contacts your skin, eyes, or clothes, immediately rinse the affected area with water and contact your doctor or other medical providers as appropriate.

DO NOT use this unit in any area with a potentially explosive atmosphere, such as a cabinet above your oven or stove, near a radiator or heater, or in any area exposed to direct sunlight.

DO NOT incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.

ELECTRICAL SAFETY

⚠CAUTION: To avoid risk of electric shock, **NEVER** immerse the cord, plug, or the motor in water or other liquids.

- This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance. If charger is used for charging purpose, only the certified charger that comply with IEC/EN 60335 or IEC/EN 61558 can be used.
- Only use the supplied or recommended charging cable to charge this product.
- To avoid the risk of electrical shock, fire or bodily injury, **DO NOT** charge or handle the unit if it is wet, or in an area that could get wet, or handle with wet hands.
- The use of attachments or parts **NOT** recommended and sold by Nutricook may cause fire, electric shock, personal injury, or product damage and will void the warranty.
- **DO NOT** operate if the motor base has been dropped or damaged in any manner. **Contact Customer Service for assistance.**
- **DO NOT** allow the cable to hang over the edge of the table or counter. **DO NOT** pull, twist, or damage the USB cable. **DO NOT** allow the USB cable to touch hot surfaces, including the stove.
- **DO NOT** charge the unit with a damaged cable.
- **DO NOT** charge the unit if the USB cable is wet
- **DO NOT** charge the unit around flammable materials, on your bed or couch, or on top of any type of paper.

- **DO NOT** wrap or wind the USB cable too tight when storing nor bend or crease the USB cable when using.

**Save these instructions!
FOR HOUSEHOLD USE ONLY**

Before you begin

1. Remove and safely discard all packaging materials and any temporary labels from inside and outside of the Choppi. Exercise extreme care when unpacking and during setup. The Choppi contains sharp blades that can cause injury if mishandled.
2. Verify that all parts are accounted for (refer to the **What's included** section of this user guide)
3. Place the Choppi on a stable, level, clean, and dry surface, away from external heat sources.
4. Read all Important safeguards and cautionary information in this User guide. Failure to do so may result in property damage and/or personal injury.
5. Follow Care & maintenance instructions in this User guide to wash the cup and the blade before using.

NOTE: The batteries in this chopper may have not been fully charged. When using for the first time, batteries must be charged until all 3 indicator lights are steadily illuminated. Refer to the **Indicator light status** section of this user guide.

What's included


- MOTOR BASE
- 2 CUP BOWL
- BLADE
- USB CHARGING CABLE
- CLEANING BRUSH
- USER GUIDE

Product Specification:

Model	CH600
Capacity	500ML Max/2 Cup
Cup Material	BPA-free Tritan
Blade Material	Stainless steel
Battery	2*2000 mAh
Working Current	1-24A
Working Voltage	7.4V
Charging Voltage/Current	5V === 1A
Charging Port	Type-C
Motor Speed	1600 RPM
Charging Time	2-3 hours

Choppi parts overview

Note: Images are for visual representations only, Always refer to the actual product.

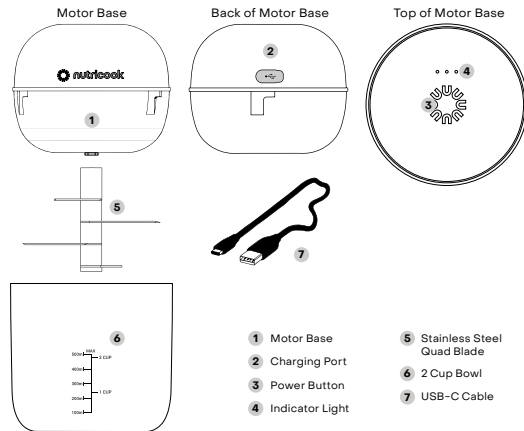

Indicator lights

The Nutricook Choppi features 3 indicator lights located on top of the motor base indicating the unit's operational and charging status.

No Power – Flashing orange light.

Chopping

- All 3 indicator lights steadily illuminate – 67-100% of power
- 1st and 2nd indicator lights steadily illuminate – 34-66% of power
- Only 1st indicator light steadily illuminate – 21-33% of power
- 1st light blinks – 1-20% of power

Charging – Indicator light blinks based on the corresponding battery percentage.

- 1st light blinks – charging up to 33%
- 2nd light blinks while 1st light steadily illuminates – charging from 34-66%
- 3rd light blinks while 1st and 2nd lights steadily illuminate – charging from 67-100%
- All 3 lights steadily illuminated – fully charged.

Errors – Flashing orange light.

1. Lid is not properly locked or assembled.

Troubleshooting: Position the grooves of the motor base to the cup and twist in clockwise direction to lock in properly.

2. Blade is stuck while chopping.

Troubleshooting: Unlock the motor base and carefully remove any blockage with a utensil. DO NOT touch the blade.

Chopping modes

The Nutricook Choppi offers 2 convenient chopping modes. For controlled chopping, use the "Pulse" mode and for continuous chopping with ease, use the "Steady" mode, offering versatility in achieving desired textures.

PULSE Mode

Turn On the Unit: Press the **POWER** button once. You'll know the unit is on when the indicator lights are illuminated.

Activate PULSE Mode: Simply press the **POWER** button to begin chopping.

STEADY Mode

Activate STEADY Mode: If the unit is off, press the **POWER** button twice consecutively.

The **STEADY** mode will operate for a maximum duration of 30 seconds then automatically turns off.

You can manually stop **STEADY** mode at any time by pressing the **POWER** button once more.

NOTE: To switch between the two modes, wait for about 5 seconds for the unit to automatically turn off.

How to use

WARNING:

- Only use the chopper on a stable, dry and flat surface to avoid tipping and potential injuries.
 - **DO NOT** leave this chopper unattended when in use.
1. Firmly grasp the motor base and rotate counterclockwise to unlock. Lift and rest the motor base on a clean, stable and dry surface.
 2. Ensure the blade is properly installed/inserted into the metal pillar located in the cup.
 3. Place the ingredients inside the cup, leaving enough space for chopping.
WARNING: When chopping, DO NOT exceed the MAX line indicated in the cup for optimal performance and to ensure safe operation.
 4. Lock the motor base into the cup. To lock, align the grooves of the motor base to the cup and twist in clockwise direction.
 5. Press Power button once to activate the pulse function or press twice (consecutively) for Steady mode.

NOTE:

- To switch between the two modes, wait for about 5 seconds for the unit to automatically turn off.
6. Continue chopping until the desired texture is achieved.
 7. After chopping, carefully/securely hold the tip of the blade shaft, ensuring your fingers **DO NOT** come into contact with the sharp cutting surfaces.
WARNING: After removing the blade, place it in a safe and secure area, away from the reach of children or anyone who may accidentally come into contact with it.
 8. Transfer the chopped ingredients into a bowl.

Care & maintenance

WARNING:

- To avoid electric shock and injury, **ALWAYS** disconnect the chopper from any power source before cleaning.
- **DO NOT** immerse the cable and the motor base in water or any other liquids
- **DO NOT** use abrasive cleaners, steel wool, or scouring pads. Dry all parts and accessories thoroughly after cleaning, before using, or before storing your chopper.

Motor Base

- Wipe the motor base with a **SOFT** and barely damp cloth.
- **WARNING: NEVER** submerge the motor in water or any other liquids.
- **Always cover the charging port. DO NOT** allow dust to accumulate inside the port.
- After cleaning, ensure all surfaces are dry by gently wiping them with a soft dry cloth before using this unit.

Cup

- Hand-wash the cup with warm, soapy water and rinse clean.
- Wipe dry using a soft towel.
- **DO NOT wash the cup in the dishwasher.**

Blade

- Carefully wash the blade by securely holding the top part of the shaft with warm, soapy water using a brush or sponge then rinse clean. **AVOID** touching the blade while cleaning.
- **WARNING: DO NOT** submerge the blade where it becomes almost invisible during cleaning as this may cause serious injury.
- **REGULARLY** inspect the blade to check for damage. **Discontinue use if the blade is bent or damaged.** Contact Customer Service for blade replacement.
- Ensure the blade is fully dry before assembling it into the cup.

USB Cable

- Routinely inspect the cable for signs of wear and tear, such as fraying or exposed wires. If you notice any damage, discontinue use and replace the cable to avoid potential hazards.
- Unplug the cable after charging the chopper.

- Use only a soft and dry cloth to clean the connector and cable gently.
- Store the cable in a cool, dry place when not in use.
- **DO NOT** wrap or wind the cable too tight when storing nor bend or crease the cable when using.

NOTE:

After cleaning, ensure all surfaces and parts are dry. Insert the blade into the cup and lock the motor base into the cup properly. When not in use, store in a cool, dry place that is out of the reach of children to prevent accidental injury.

Federal Communication Commission Interference Statement - Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty

LIMITED WARRANTY FOR NUTRICOOK

Nutricook's limited warranty obligations are confined to the terms set forth below.

Nutricook warrants this product against defects in materials and workmanship for a period of **one year** from the date of original retail purchase. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge, however shipping and processing fees will be incurred for returns, replacements and or refunds.

OBTAINING WARRANTY SERVICE

For limited warranty service, simply visit www.nutricookworld.com for Customer Service details of your respective territory or contact our customer service department at support@nutricookworld.com and we will be glad to help you. When you contact our customer service department you will be asked for your name, address, telephone number and to provide proof of the original purchase (receipt) containing a description of the product(s), purchase date, and the appropriate Nutricook bar code(s). Before you send your product for limited warranty service please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

EXCLUSIONS AND LIMITATIONS

This **Nutricook One-Year Limited Warranty** applies only to Nutricook products distributed by or for Nutricook

that can be identified by the "Nutricook" trademark, trade name, logo and bar code. **Nutricook's One-Year Limited Warranty** does not apply to any other products that may appear to be authentic, but were not distributed/sold by Nutricook.

Normal wear and tear is not covered by this limited warranty.

This limited warranty applies to consumer use only, and is void when the product is used in a commercial or institutional setting.

This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.

Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. Nutricook shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty does not apply: (a) to damage caused by accident, abuse, misuse, or misapplication; (b) to damage caused by improper maintenance (including unauthorized parts service); (c) to a product or a part that has been modified in any way; (d) if any Nutricook bar code or trademark has been removed or defaced; and or (e) if the product has been used with an adapter/ converter.

THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL

OR WRITTEN, EXPRESS OR IMPLIED. NUTRICOOK SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF NUTRICOOK CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY. No Nutricook reseller, agent, or employee is authorized to make any modification to this warranty.

Some states or provinces do not allow for the exclusion of implied warranties of merchantability or fitness, so this limitation may not apply to you. In these states and provinces, you have only the implied warranties that are expressly required to be provided in accordance with applicable law.

NUTRICOOK IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY. NUTRICOOK SPECIFICALLY DOES NOT REPRESENT THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS LIMITED WARRANTY.



Choppi

Model No. CH600
nutricook | www.nutricookworld.com | All rights reserved.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

© 2023 Nutricook LLC.

CH600_Series_UG_V1.202309