

3 in 1

PLAYPEN BARRIER

Instruction Manual

INSTALLATION VIDEO



Proud
Supporter



#2747 #2752



29.5"
(75cm)
Tall

Fits Openings 28.8" to 144.6"
(73cm - 370cm)

**IMPORTANT! READ AND
FOLLOW THESE INSTRUCTIONS
CAREFULLY AND KEEP FOR
FUTURE REFERENCE.**

This product complies with safety standard ASTM F1004-19.

TABLE OF CONTENTS

SAFETY INFORMATION	
General	03
Maintenance	03
Warnings	04
Mountings	06
WHAT'S IN THE BOX	
Parts	08
INSTALLATION	
Gate Placement	10
Underside Bracket Wall Assembly	11
Topside Bracket Wall Assembly	15
Room Divider or Safety Barrier	18
To Add Extra Panels	20
To Remove Unwanted Panels	21
Playpen Assembly	22
OPERATION	
How to Open	23
Safety Play Mat	24
Cleaning Instructions	25
SUPPORT	
Warranty Certificate	26
Warranty Card	27
After Sales Support	27

SAFETY INFORMATION

GENERAL

Read this instruction manual carefully and keep it in a safe place for future reference. The correct use and maintenance of this product is essential.

MAINTENANCE

Regularly check that the gate is functioning correctly, lubricate hinges and moving components with a suitable spray lubricant. Tighten and adjust mounts to ensure secure smooth operation. Inspect all components regularly and stop using if any component is damaged or missing.

WARNINGS

WHEN USED AS A SAFETY BARRIER

- WARNING** Incorrect fitting or positioning of this safety barrier can be dangerous.
- WARNING** Do not use the safety barrier if any components are damaged, missing or disassembled.
- WARNING** Never install this product on glass doors or windows.
- WARNING** Stop using the product if the child is able to climb, dislodge or open barrier unassisted.
- WARNING** A maximum of 9 panels can be used when used as a barrier/room divider.
- WARNING** Danger to older children if climbing over the barrier.
- WARNING** Regularly check that the barrier is properly fixed and secure.
- WARNING** Any additional or replacement parts should only be obtained from after sales support.
- WARNING** This safety gate is suitable for openings from 73cm (28.8") to 370cm (145.6").
- WARNING** Before using this product, carefully inspect for any loose parts and whether any parts need to be tightened.
- WARNING** Children have died or been seriously injured when [gates/enclosures] are not securely installed.
- WARNING** ALWAYS install and use [gates/enclosures] as directed using all required parts.

WARNINGS

WHEN USED AS A PLAYPEN

- WARNING** This product is intended for use with children from 6 to 24 months or small to medium pets from 4.5kg (10 lbs) up to 18kg (40 lbs).
- WARNING** Do not use the playpen without the PERMA Products play mat base.
- WARNING** Do not place the playpen close to an open fire or other heat source.
- WARNING** Do not leave anything in the playpen which may provide a foothold or create a danger of suffocation or strangulation.
- WARNING** This safety barrier is for domestic use only.
- WARNING** This safety barrier has a manual closing system.
- WARNING** Ensure that the playpen is fully erected and all the locking mechanisms engaged before placing your child in this playpen.
- WARNING** Do not use the playpen if any part is broken, torn or missing and use only spare parts approved by manufacturer, accessories which are not approved by manufacturer shall not be used.
- WARNING** Check regularly that all assembly fittings are tightened properly.
- WARNING** Use only with the locking/latching mechanism securely engaged.
- WARNING** NEVER use to keep child away from pool.

MOUNTINGS

Gate must be installed in a structurally sound opening. Ensure mounting surface (wall, door frame, stair posts, etc.) is strong, rigid and has an even surface.

Note: If using gate on stairs, it must be placed either on the top step or on the lowest step at the bottom.

Select the appropriate fixing method from the following list.




WOOD MOUNTING

Drill 2mm (5/64") pilot holes and use the wood screws provided screwing directly into the wood.




FOR INSTALLATION

Wood Screws

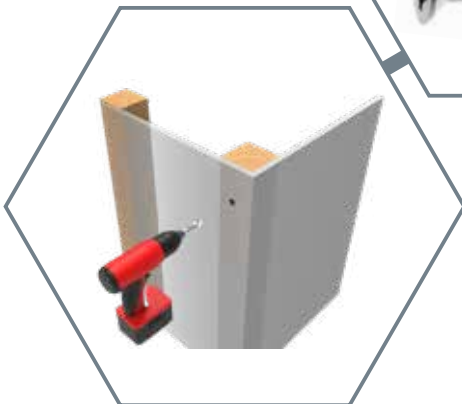

DRY WALL MOUNTING

Locate the wood stud and follow the wood mounting instructions. **Do not mount into dry wall without additional support.**

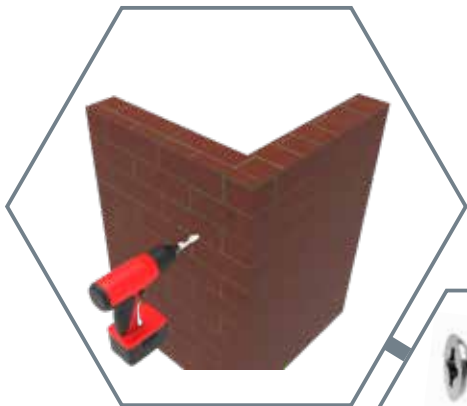


HARD WALL MOUNTING BRICK

Drill 5mm (3/16") pilot holes,
insert anchor and secure with
screws.



FOR INSTALLATION

Wood Screws
Anchor

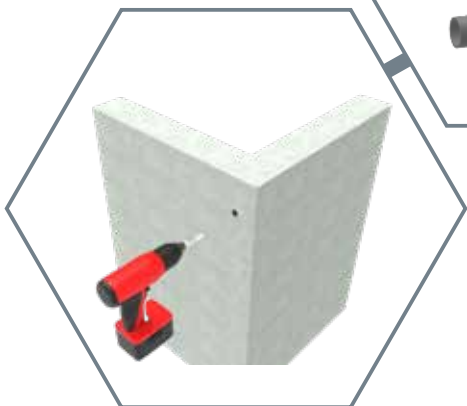

HARD WALL MOUNTING CONCRETE

Drill 5mm (3/16") pilot holes,
insert anchor and secure
with screws.

TOOLS REQUIRED



PENCIL



PHILLIPS HEAD
SCREW DRIVER



DRILL

This gate must only be fixed to a solid and secure surface. If unsure, check with a qualified builder or trades person that the installation you intend is suitable and safe within the chosen location.

PARTS



5 x
Barrier Panels



1 x
Gate Panel



1 x
Top Underside
Wall Bracket



1 x
Top Topside
Wall Bracket



2 x
Lower Wall Bracket



1 x
Top Cap



1 x
Bottom Cap



8 x
Screws



7 x
Corner Tubes

If any parts are missing do not attempt to use your Playpen Barrier. Please contact us at www.permachildsafety.com/contact to obtain replacements. Only use parts supplied by the manufacturer with your Playpen Barrier.

STEP 1: GATE PLACEMENT

SUITABLE PLACEMENT OF GATE AND CATCH MOUNT




As a Barrier;
Across the room



As a Playpen;
In an open space


STEP 2: UNDERSIDE BRACKET WALL ASSEMBLY

1. Place the Lower Wall Bracket over Corner Tube, and then put the Corner Tube into the Top Underside Wall Bracket.

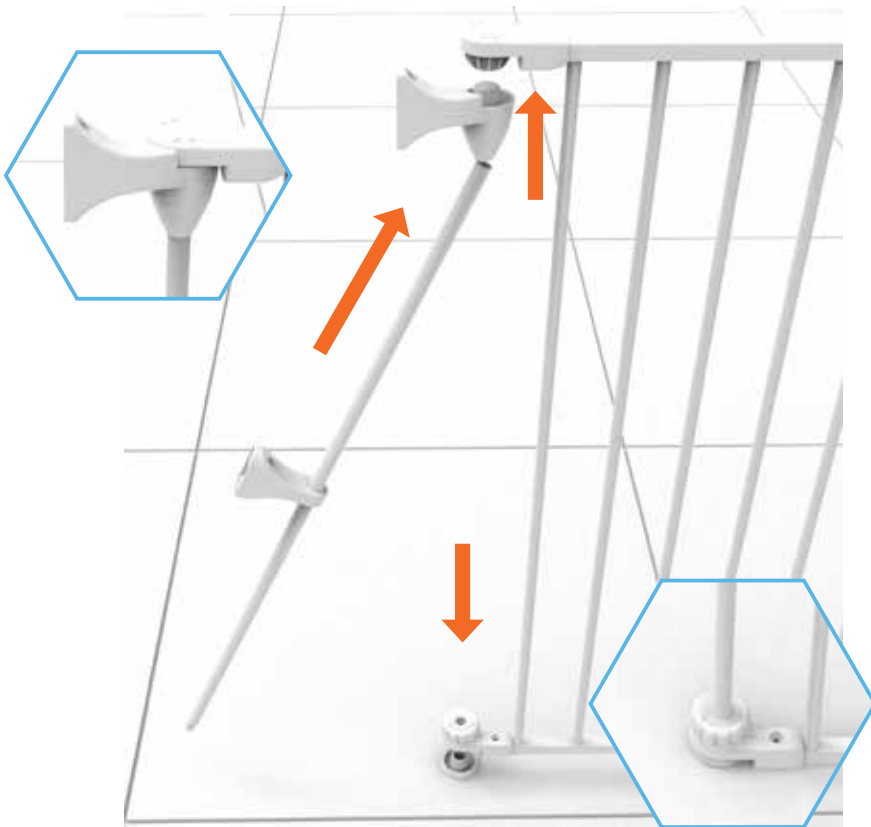


2. Put the Top Underside Wall Bracket into the top of the Barrier Panel, and the bottom into the bottom of the Barrier Panel, and then into the Bottom Cap.

3. Mark screw hole positions with a pencil for the Top Underside Wall Bracket and the Lower Wall Bracket.

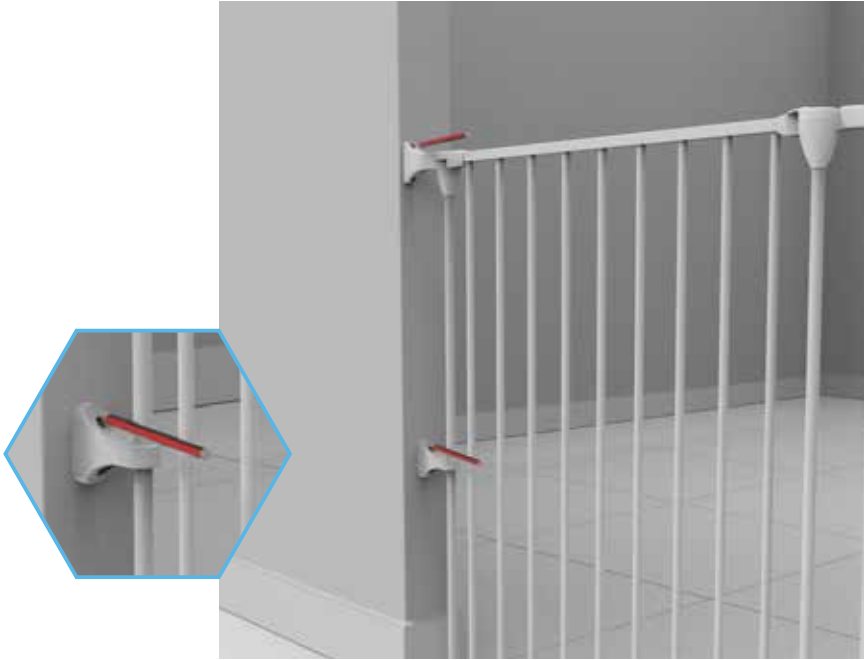

4. Disassemble and screw in Top Underside Wall Bracket and Lower Wall Bracket.

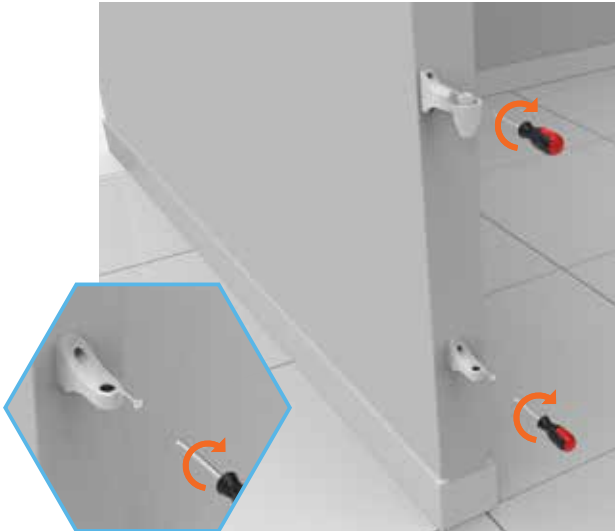


5. Reassemble gate panel by connecting the top of the Barrier Panel to the Top Underside Wall Bracket.



6. Place the Corner Tube through the Lower Wall Bracket.




7. Then place the Corner Tube into the Top Underside Wall Bracket. Pull the Corner Tube up so you can position the bottom of the Corner Tube into the bottom hole, and then into the Bottom Cap.

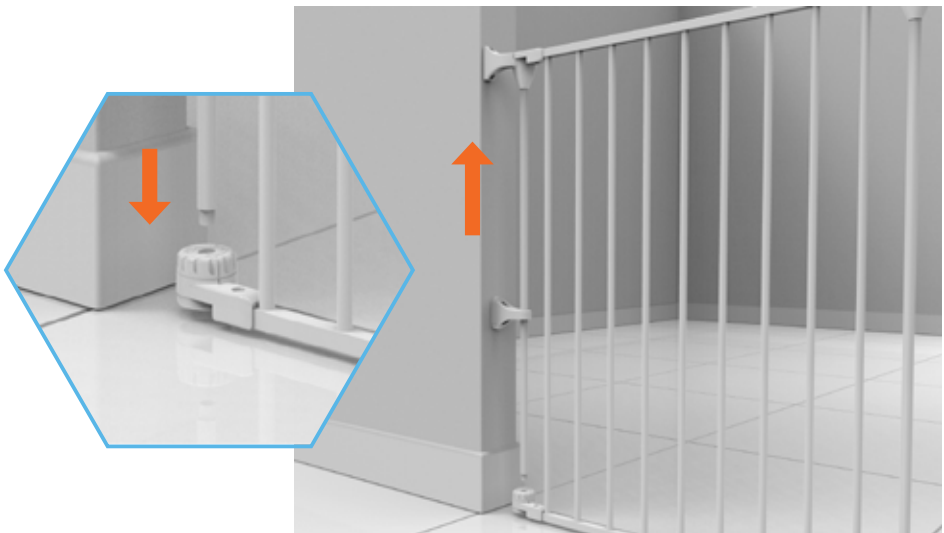


STEP 3: TOPSIDE BRACKET WALL ASSEMBLY

1. Place the Lower Wall Bracket over Corner Tube, and put the Top Cap on the bottom of the Barrier Panel.

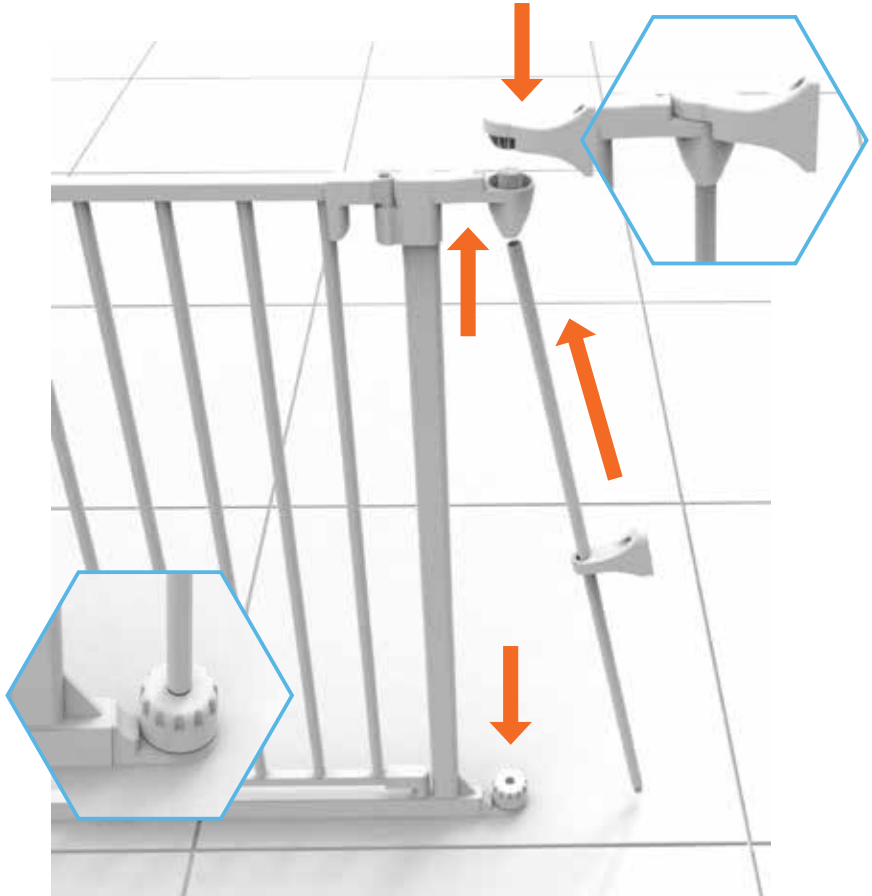


2. Place the Corner Tube into the Barrier Panel and then into the Top Topside Wall Bracket. Pull the Corner Tube up, while lifting the bottom into its position.

- 3.** Mark screw hole positions with a pencil for the Top Topside Wall Bracket and the Lower Wall Bracket.

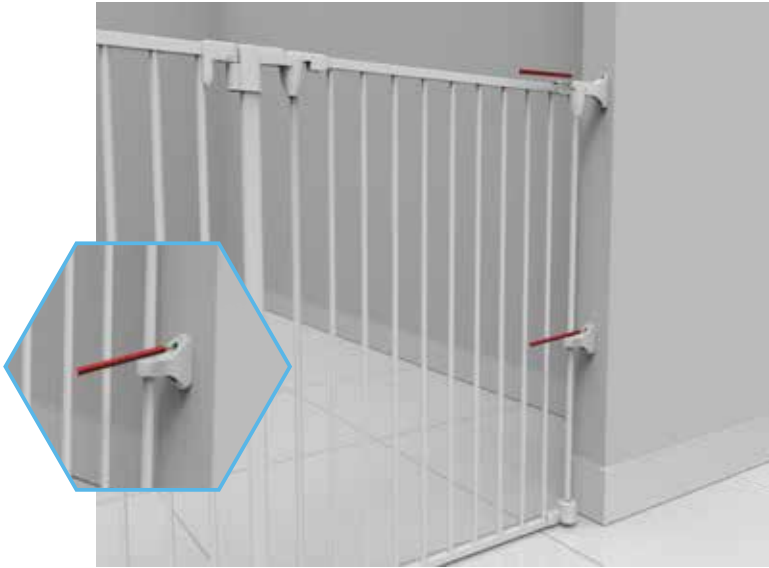

- 4.** Disassemble and screw in Top Topside Wall Bracket and then screw in the Lower Wall Bracket.

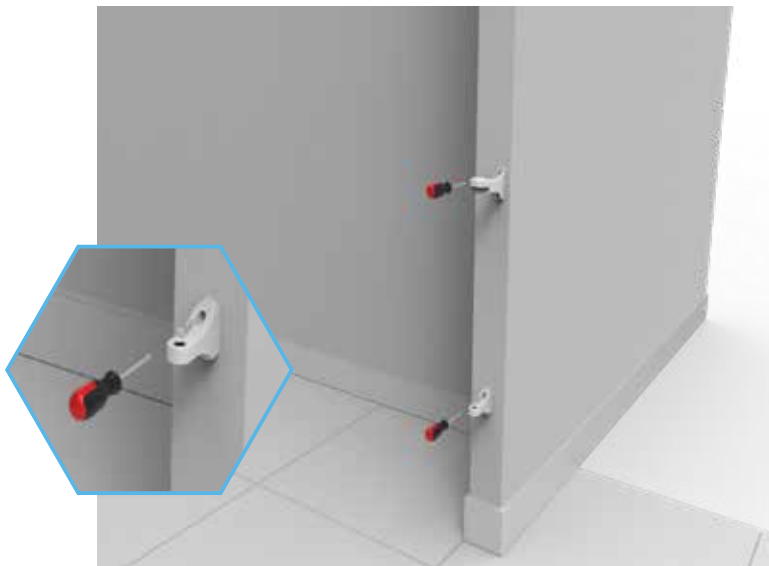

- 5.** Place the Corner Tube through the Lower Wall Bracket and then push the Corner Tube through the top hole.





- 6.** Put the Top Cap on the bottom of the Barrier Panel, and then position the Corner Tube in place.



STEP 4: ROOM DIVIDER OR SAFETY BARRIER


Up to 9 panels including the gate may be used in open configurations providing the 2 end panels are securely fixed to a wall with the fixings provided.

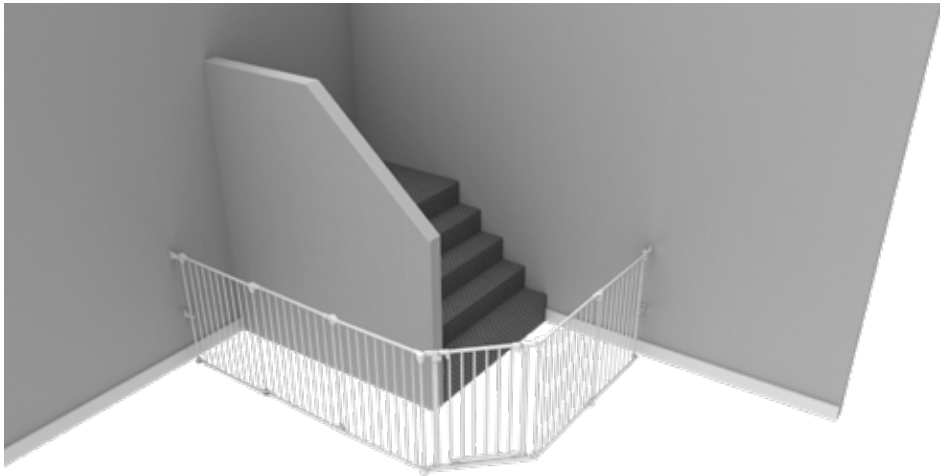

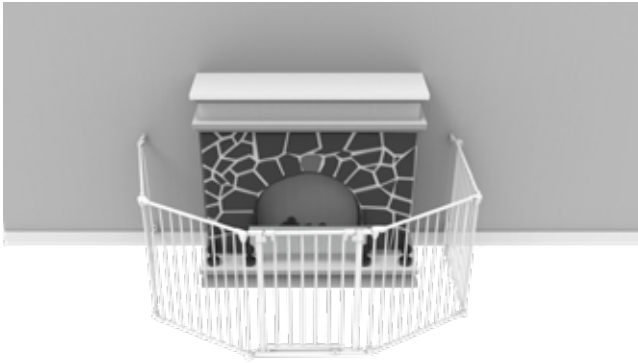


STEP 5: TO ADD EXTRA PANELS

1. Align opposite ends of panels, place the Corner Tube into the top hole first, then pull the Corner Tube up so you can position the bottom of the Corner Tube into the bottom hole.

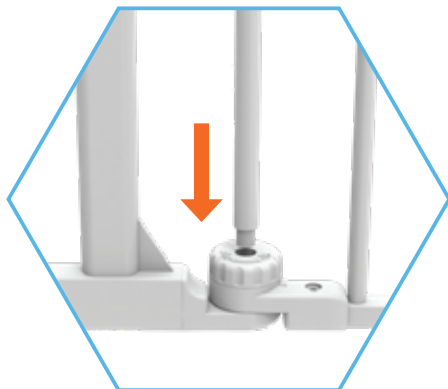

UNLOCKED

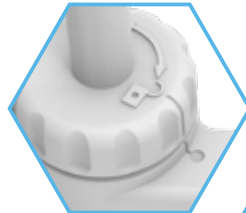


LOCKED




STEP 6: REMOVE UNWANTED PANELS

1. Turn base knob to the unlocked position, pull up on the Corner Tube and slide the bottom of the Corner Tube out from the base. With the Corner Tube removed you can lift and remove the unwanted panel.

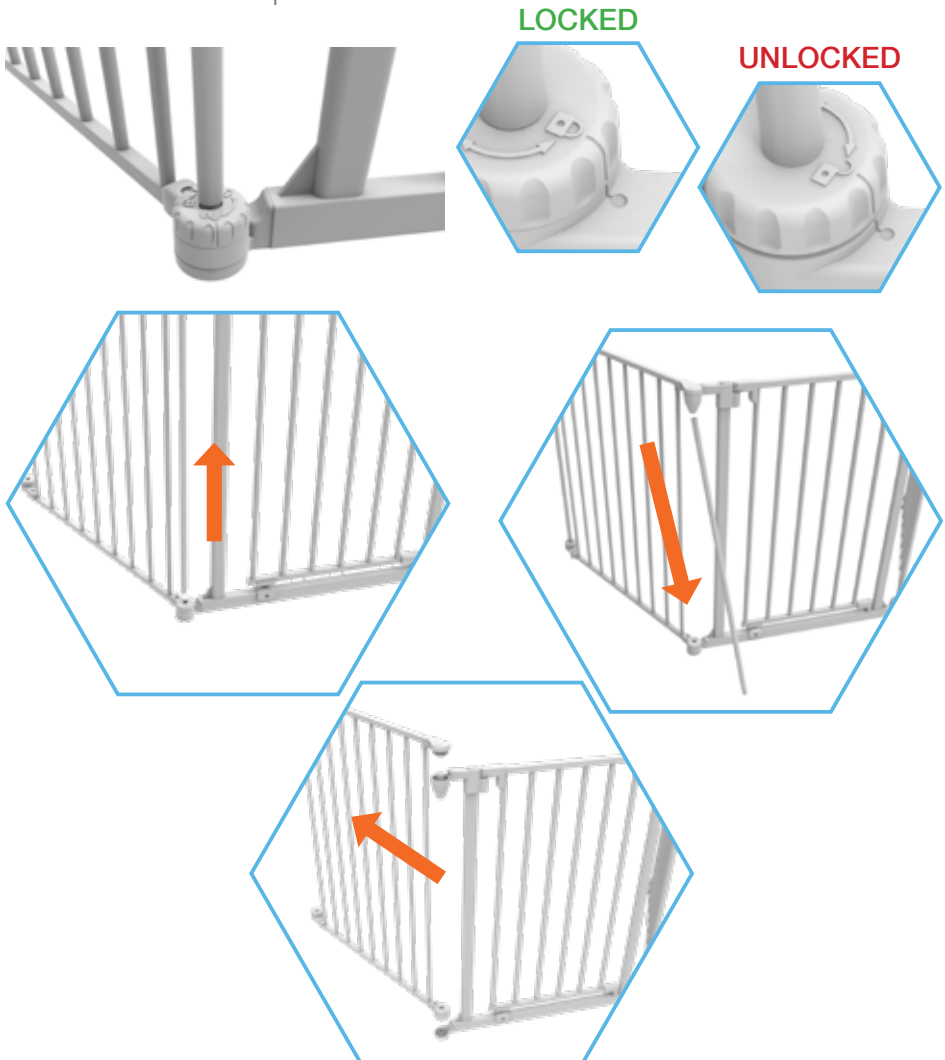

STEP 7: PLAYPEN ASSEMBLY


1. Align the Gate Panel and one of the other panels together. Place the Corner Tube into the top hole first, pull the Corner Tube up so you can position the bottom of the Corner Tube into the bottom hole. Align arrow with hexagon icon.

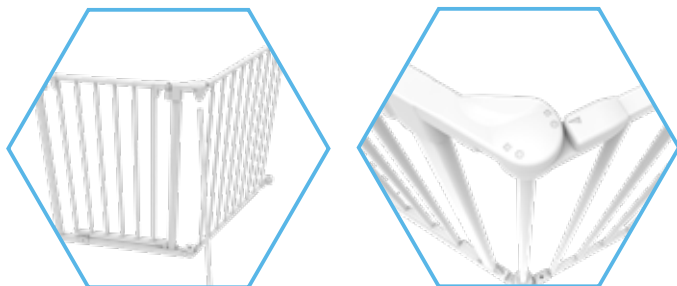

2. Repeat step 1 and 2 for all sides and corners.




3. Turn base knob and align lock icon with dot on panel to lock and unlock panels.

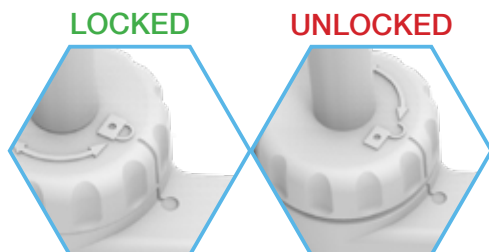


HOW TO OPEN

1. Using one hand place thumb on the button and grip gate with fingers. Slide button and lift gate, then open gate in either direction, when released gate will swing closed automatically.

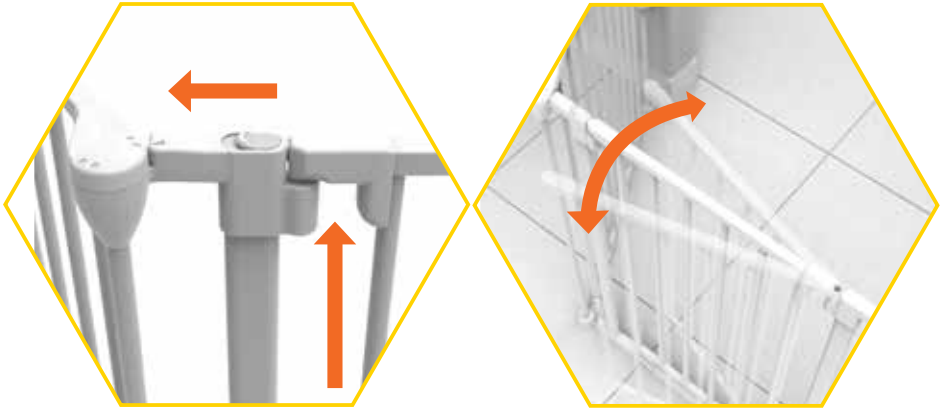

Always check gate is properly closed.


2. To enable stay open feature, completely open gate to a 90° angle.

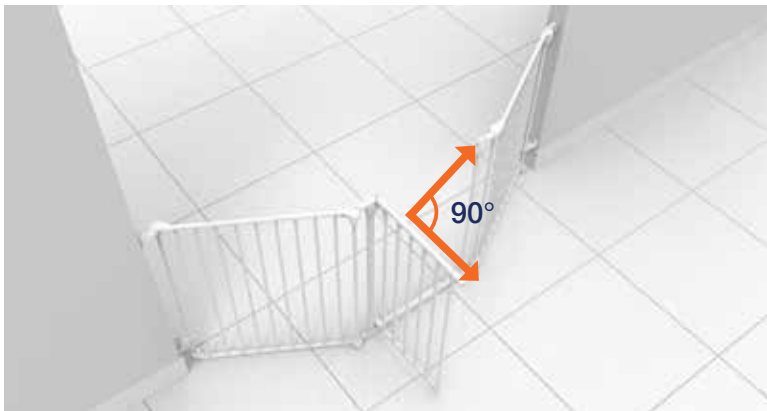

SAFETY PLAY MAT (SOLD SEPARATELY)

1. Note: A safety play mat is required if playpen is used with children.

Your child's play mat can now be placed into the playpen and secured to the bottom bars of each panel with the ties.

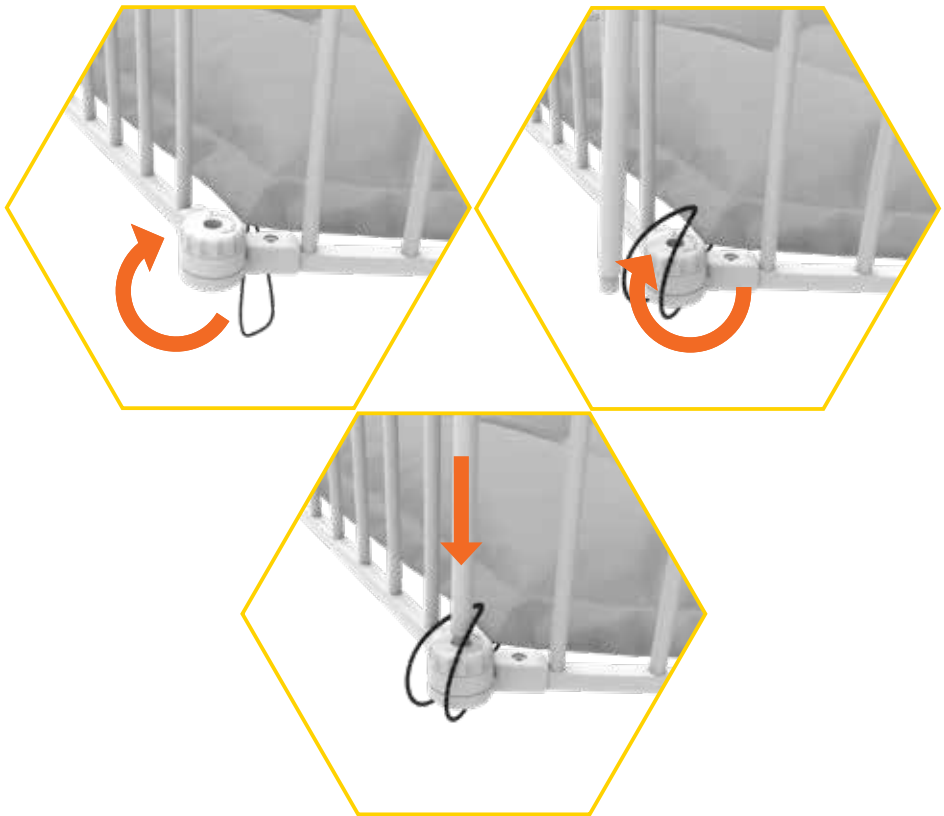

The play mat is available separately, contact after sales support for details.

CLEANING INSTRUCTIONS

Simply use a soft damp cloth to wipe playpen, dry after cleaning.
Do not use chemical or abrasive cleaners.



WARRANTY CERTIFICATE

Congratulations! You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, we will provide you with a warranty against defects as follows:

Warranty

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Proof of Purchase

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

Extent of Warranty

This warranty is limited to defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not cover consumable items.

Normal Wear and Tear

This warranty does not cover normal wear and tear to the products or parts.

Exclusions

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.

To Make a Claim

If a defect in the goods appears within 12 months, you are entitled to claim a warranty. Please contact after sales support via the link below:

www.permachildsafety.com/contact-us

Please ensure that you have a copy of proof of purchase so that we are able to respond as quickly and efficiently as possible.

WARRANTY CARD

Details:

Product Name: 3 in 1 Playpen Barrier

Product Number: White 2747 | Warm Black 2752

Your Name:

Address:

Phone:

Email:

Date of Purchase:

Location of Purchase:

We recommend that you keep a copy of your receipt, showing the date of purchase, with this warranty certificate and keep for your reference. In the event of a product fault, please contact after sales support. Ensure that you include the product details (as shown on this card) so that we are able to respond as quickly and efficiently as possible.

AFTER SALES SUPPORT

Product Code: White 2747 | Warm Black 2752



For questions, concerns and to view our latest products visit:
www.permachildsafety.com/contact-us



©2020 Permastik Pty Ltd.
All Rights Reserved.
Distributed by Perma Products USA®
www.permaproducts.com
Tel: 239 494 5481
Made in China to Perma quality standards

Perma™ 
Child Safety
next generation safety



CARDBOARD BOX
PLEASE RECYCLE