

# BATTERY INSTALLATION

## INSTALLING THE BATTERY

The iLiving Scooter battery is located at the front of the scooter. When you stand in front of the scooter, you will notice a key cover on the left side of the battery. Slid open the key cover to access the battery lock. The battery is not pre-installed inside the scooter due to safety issues during shipping.

Unlock the batteries to remove the batteries. Use the key to unlock the batteries, and slide the batteries out of the battery rails. To remove both batteries, you must slowly slide out the top battery, then the bottom respectively.

To install the battery, slowly line up the battery to the battery guiding rails, and slid the first battery all the way to the bottom. Make sure the battery is fully seated before loading the second battery. Following the same procedure, slide the second battery on top of the first one. To secure the battery, insert the key to the lock, and turn it clockwise to lock the batteries. Replace the key cover when done.



### STEP 1:

Slide the first battery along the rail.



### STEP 2:

Ensure the first battery is fully seated.

- STEP 3 CONTINUED ON NEXT PAGE -

# BATTERY INSTALLATION

- CONTINUED FROM PREVIOUS PAGE -



## STEP 3:

Slid the second battery along the rail until it's fully seated on top of the first battery.



## STEP 4:

Use the key to lock the batteries in place.