

1

2

3

4

5

6



Compact Electronic Drum Kit
Operating Manual



DKR01BK



I. Specification:

- 7 drum pad - includes crash cymbal, ride cymbal, open/close hi-hat, snare, high tom, low tom and floor tom. 2 drum pedals - 1 hi-hat and 1 bass drum.
- 12 demo songs
- 7 drum sounds
- 9 accompaniments
- Volume control
- Speed control
- Recorder and play
- Audio MP3 input
- Headphone socket
- Stereo speakers

II. Features:

 
- The roll up drum kit is compact and portable - you can bring your electronic drum kit everywhere you go
- Ideal for practicing your drumming
- The kit includes 12 pre-selected demo songs and 7 drum sounds
- Switch easily to record mode to playback your drum sessions
- Two stereo speakers effectively reproduce realistic expression
- Connect your own MP3 device (phone/tablet) to play along with your own music
- Connect your own headphones so you can practice whenever you want

III. Kit Includes:



- 1 x Drum pad
- 2 x Pedals
- 1 x USB cable
- 1 x 5V wall power adaptor
- 1 x 3.5mm audio jack cable
- 2 x Drum sticks

1


IV. Drum kit appearance

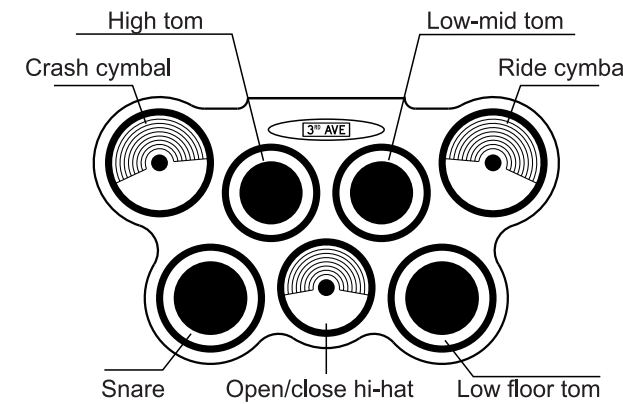

  V. Device connection

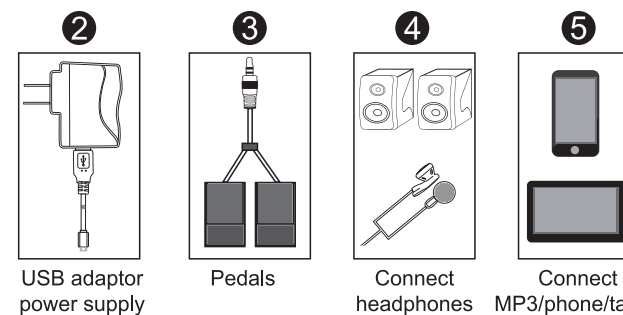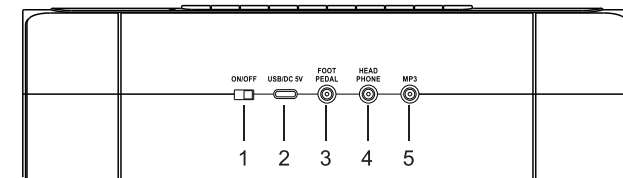

2

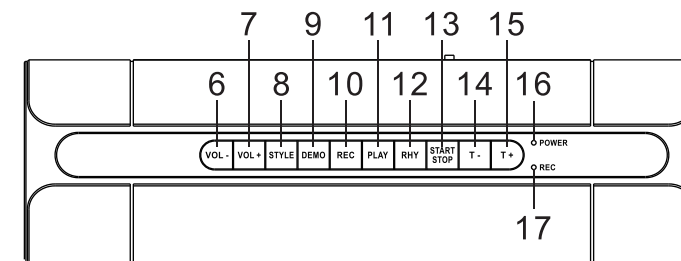 

VI. Functions

No.	Name	Function Description
1	ON/OFF	Power switch
2	USB/DC 5V	USB port for power. by AC adapter or power bank
3	FOOT PEDAL	Pedals for Hi-Hat and Bass Drum
4	HEAD PHONE	Audio output interface
5	MP3	Audio input interface
6	VOL-	Volume down
7	VOL+	Volume up
8	STYLE	Drum sounds

3

9	DEMO	Demo songs
10	REC	Record, ensure the REC light is on
11	PLAY	Play the recording
12	RHY	Play accompaniment
13	START/STOP	Start to play/stop playing the accompaniment, recording or demo songs
14	T-	Control the playing speed of demo songs and accompaniment
15	T+	Control the playing speed of demo songs and accompaniment
16	POWER LED	The LED is on when the power adaptor is plugged in and switched on
17	REC LED	The LED is on when you press REC

VII. Pedals

- The drum kit supports the included pedals with single channel input (hi-hat and bass drum).
- When the pedal is not plugged in, the hi-hat makes a "closed" sound. When the pedal is plugged in, you can control "open" and "closed" hi-hat sound by pressing the pedal.

VIII. Power ON/OFF

- When the drum kit is switched on, the power LED light will be on.
- After you switch on the drum kit, you can change the volume with the VOL- and VOL+ buttons.

4

IX. Troubleshooting

Failure	Reason	Solution
Power indicator does not work	External power adaptor is not plugged in well or USB cable is not inserted correctly	Please check the external power cable
Abnormal sound	External power adaptor Voltage shortage	Please replace the external power adaptor
Pedal does not work	The interface is not connecting well	Please completely unplug and then replug it back in
No sounds (Headphone or audio)	1.No power supply 2. volume is not adjusted well 3. earphone not connected to the right interface of our drum	Please check the volume level and ensure all connections are secure

5

i. Cautions:

- Do not use the drum kit in wet, dusty and high temperature areas
- Keep the drum kit level when in use
- Do not place the drum kit near areas with strong electric waves
- Do not place heavy objects on the product
- Do not pull or twist the drum kit as it may cause damage
- Do not tamper with the wiring of this product with a knife or other sharp tools
- When rolling the drum kit after use, do not roll too tight.

ii. Specification:

1. Product size:

Length: 442mm
Width: 318mm
Depth: 62mm

Weight: 760g

2. Input: USB DC 5V

3. Material: Silicone

6