



3RD AVE

3rd Avenue Roll Up Rainbow Piano

RUP01

USER MANUAL



Microphone

Sustain

USB
power supply

Thank you for purchasing this 3rd Avenue Roll Up Piano.

We recommend that you read this manual carefully so that you can take full advantage of all the features and functions of the instrument.

We also recommend that you keep this manual in a safe and handy place for future reference.


Product Specifications

- 49 keys
- LED display
- 128 tones, 128 rhythms and 14 demo songs
- Record and play functions
- Sustain
- Volume control
- Microphone function
- Drum sounds
- Headphone/speaker output
- Power supply: USB 5V power supply or 4xAAA batteries

Product Features

- The compact and portable design of the piano is convenient for playing on the move and where space may be limited.
- Ideal for introducing younger students and beginners to the piano
- You can get creative with the included sounds and voices.
- Can be powered by the included USB cable or 4xAAA batteries.
- Plug in your headphones to avoid disturbing those around you or connect to a speaker for performances.

Display

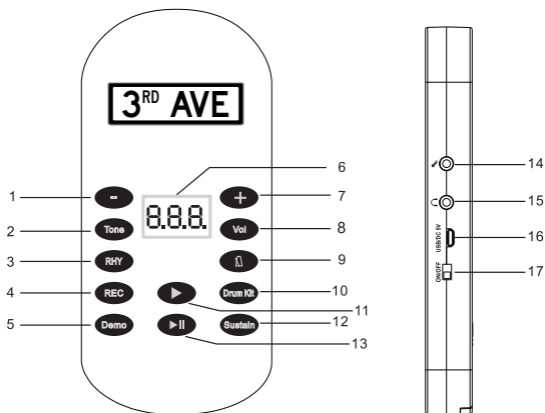

1	-	Down selection	10	Drum kit	Drum kit tone button
2	Tone	Tone+select(+/-)	11	▶	Play button
3	Rhythms	Rhythms+select(+/-)	12	Sustain	Sustain button
4	Record	Record button	13	▶	Star/Stop button
5	Demo	Demo button	14	🎤	Microphone input
6	8.8.8	LED indicate	15	🎧	Earphone/Speaker input
7	+	Up selection	16	USB/DC 5V	Power/MIDI out
8	Volume	Volume+select(+/-)	17	ON/OFF	ON/OFF
9	🎵	Metronome			

Functions

1. Tone

The initial tone is 000 when switched on. To choose a tone, press the "Tone" button and then "+/-" to select.

2. Rhythms

Press "RHY" to enter into rhythms mode, use the "+/-" button to select and the ►|| button to play and pause.

3. Demo songs

Press "Demo" to play demo songs. Press the "Demo" button again to cycle through and ►|| to stop playing. You can continue to play the piano whilst demo songs are playing at the same time.

4. Record/Play

Press "REC" to enter into record mode. Press ► button to replay the songs you have recorded. The display will show "FUL" when the system memory is full.

5. Volume

Press "Vol" button and then "+/-" to increase or decrease the volume level. The highest level is 15.


6. Sustain

Press "Sustain" button to activate the sustain feature. Press the same button again to turn off the feature.

7. Drum Kit

Press "Drum Kit" to activate the drum sounds. All the keys change to drum sounds. Press the button again to turn off the feature.

8. Metronome

Press "  " button to activate the built-in metronome. Press the button again to turn off the feature.

9. Sleep mode

The piano will enter sleep mode if it has not been used for 3 minutes. Press any key of the piano (not the display buttons) to turn the piano back on.

List of Tones

Tone Number	Name	Tone Number	Name
T00	Piano 1	T24	Acoustic Guitar (nylon)
T01	Piano 2	T25	Acoustic Guitar(steel)
T02	Piano 3	T26	Electric Guitar (jazz)
T03	Honky-Tonk Piano	T27	Electric Guitar (clean)
T04	Rhodes Piano	T28	Electric Guitar (muted)
T05	Chorused Piano	T29	Overdriven Guitar
T06	Harpsichord	T30	Distortion Guitar
T07	Clavinet	T31	Guitar Harmonics
T08	Celesta	T32	Acoustic Bass
T09	Glockenspiel	T33	Electric Bass(finger)
T10	Music Box	T34	Electric Bass(pick)
T11	Vibraphone	T35	Fretless Bass
T12	Marimba	T36	Slap Bass 1
T13	Xylophone	T37	Slap Bass 2
T14	Tubular Bells	T38	Synth Bass 1
T15	Santur	T39	Synth Bass 2
T16	Hammond Organ	T40	Violin
T17	Percussive Organ	T41	Viola
T18	Rock Organ	T42	Cello
T19	Church Organ	T43	Contrabass
T20	Reed Organ	T44	Tremolo Strings
T21	Accordion	T45	Pizzicato Strings
T22	Harmonica	T46	Orchestral Harp
T23	Bandoneon	T47	Timpani

Tone Number	Name	Tone Number	Name
T48	String Ensemble 1	T76	Bottle Blow
T49	String Ensemble 2	T77	Skakuhachi
T50	SynthStrings 1	T78	Whistle
T51	SynthStrings 2	T79	Ocarina
T52	Choir Aahs	T80	Lead 1 (square)
T53	Voice Oohs	T81	Lead 2 (sawtooth)
T54	Synth Voice	T82	Lead 3 (calliope lead)
T55	Orchestra Hit	T83	Lead 4 (chiff lead)
T56	Trumpet	T84	Lead 5 (charang)
T57	Trombone	T85	Lead 6 (voice)
T58	Tuba	T86	Lead 7 (fifths)
T59	Muted Trumpet	T87	Lead 8 (bass+lead)
T60	French Horn	T88	Pad 1 (new age)
T61	Brass Section	T89	Pad 2 (warm)
T62	Synth Brass 1	T90	Pad 3 (polysynth)
T63	Synth Brass 2	T91	Pad 4 (choir)
T64	Soprano Sax	T92	Pad 5 (bowed)
T65	Alto Sax	T93	Pad 6 (metallic)
T66	Tenor Sax	T94	Pad 7 (halo)
T67	Baritone Sax	T95	Pad 8 (sweep)
T68	Oboe	T96	FX 1 (rain)
T69	English Horn	T97	FX 2 (soundtrack)
T70	Bassoon	T98	FX 3 (crystal)
T71	Clarinet	T99	FX 4 (atmosphere)
T72	Piccolo	T100	FX 5 (brightness)
T73	Flute	T101	FX 6 (goblins)
T74	Recorder	T102	FX 7 (echoes)
T75	Pan Flute	T103	FX 8 (sci-fi)

Tone Number	Name	Tone Number	Name
T104	Sitar	T116	Taiko Drum
T105	Banjo	T117	Melodic Tom
T106	Shamisen	T118	Synth Drum
T107	Koto	T119	Reverse Cymbal
T108	Alimba	T120	Guitar Fret Noise
T109	Bagpipe	T121	Breath Noise
T110	Fiddle	T122	Seashore
T111	Shanai	T123	Bird Tweet
T112	Tinkle Bell	T124	Telephone Ring
T113	Agogo	T125	Helicopter
T114	Steel Drums	T126	Applause
T115	Woodblock	T127	Gun shot

List of Rhythms

Rhythm Number	Name	Rhythm Number	Name
R000	Beguineswing	R012	Trueballadwaltz
R001	Beguine1	R013	Bossawaltz
R002	Beguine2	R014	Easywaltz
R003	Pophit	R015	Shufflewaltz
R004	Pop	R016	Reggaewaltz
R005	Popmalay	R017	Rhumbawaltz
R006	Bossanova	R018	March 1
R007	Disco 1	R019	March 2
R008	Disco 2	R020	Rhumba1
R009	Bluegrassdisco	R021	Rhumba2
R010	Waltz1 1	R022	Slow1
R011	Waltz1 2	R023	Slow2

Rhythm Number	Name	Rhythm Number	Name
R024	Discocha	R052	C.Ballad
R025	Guaracha	R053	4J.Ballad
R026	Charl	R054	60Slowballad
R027	Samba1	R055	PianoBallad
R028	Samba2	R056	50Sballad
R029	Ubminimal	R057	Snakebase
R030	8Bit1	R058	Happyblues
R031	8Bit2	R059	Oldblues
R032	16Bit1	R060	Bluegrass
R033	16Bit2	R061	Boodie1
R034	Ballad16T	R062	Boodie2
R035	Country16T	R063	Boodie3
R036	Tango1	R064	Shuffle 1
R037	Tango2	R065	Shuffle 2
R038	Polka 1	R066	Dreamshuffle
R039	Polka 2	R067	Countrysuffle
R040	Popswing	R068	Quickshuffle
R041	Easyswing	R069	Reggaeshuffle
R042	Softswing	R070	R&B
R043	Rock 1	R071	1Reggaepulse
R044	Rock 2	R072	Reggae1
R045	Rock 3	R073	Reggae2
R046	Airyrock	R074	Salsa1
R047	Heartrock	R075	Salsa2
R048	Rock&roll	R076	Salsa3
R049	Urban	R077	Tecno 1
R050	Ballad	R078	Tecno 2
R051	Jazzballad	R079	Funky 1

Rhythm Number	Name	Rhythm Number	Name
R080	Funky 2	R104	Destiny
R081	Dixie 1	R105	Comedy
R082	Dixie 2	R106	Drive
R083	Foxtrot 1	R107	Liquidnova
R084	Foxtrot 2	R108	Kindustrialfolk
R085	R.roll 1	R109	Slowpure
R086	R.roll 2	R110	SimpleJam
R087	Fastbeat	R111	Synthethix
R088	Quickbeat	R112	Feel
R089	Smoothbeat	R113	Accelerate
R090	Squarebeat	R114	Beachnight
R091	Eurobeat	R115	Irish
R092	Alphadance	R116	Tarantella
R093	Betadance	R117	Bigband
R094	Dreamdance	R118	Dandut
R095	Dance1	R119	Fusion
R096	Dance2	R120	House
R097	Dance3	R121	Keron
R098	Rap	R122	Latin
R099	Thevillage	R123	Mambo
R100	Countrysshuffle	R124	Newage
R101	Electrickeys	R125	Slowrc
R102	Darkkeys	R126	Soul
R103	Easywalk	R127	Twist

List of Demo Songs

Demo Number	Name	Demo Number	Name
D00	Lily.mid	D07	Milk Song
D01	Winter Sonata	D08	Childhood Memory
D02	Kiyomi_Cutie Song	D09	Come into my dream
D03	Beautiful Jazz	D10	Violin HumorseQue
D04	Foreat Mist-Neptun	D11	Snowdreams
D05	Destiny	D12	Dance of fireflie
D06	Poety of the Bird	D13	My Soul

Precautions

- When cleaning the instrument, use a soft, dry cloth. Do not use any harsh chemicals.
- Do not place the piano in hot and humid conditions.
- Remove the batteries when the piano is not in use.
- Do not roll the piano too tight after using it, as this could reduce the key functions.

Troubleshooting

- If the piano stops working or plays an abnormal sound, the batteries may be low, please change all the batteries for new ones.
- If the sounds is abnormal or the keys don't function, turn the power off and restart the piano to restore original settings.