 


instruction for installation

instrument; tool




Chinese-English



screwdriver



Before Installation

1. Please read these instructions before assembling or installing the product.
NOTE: Installation by a licensed electrician is recommended.
2. Take out the fixture and the mounting package and make sure all parts are included.
If any part is missing or damaged, please contact us.
3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
4. Do not disassemble the main body, as it has been installed & commissioned correctly &
5. **IMPORTANT:** Turn off the main power at the circuit breaker and place the wall switch or pull
6. Do not use bulbs with wattage greater than specified on this fixture.

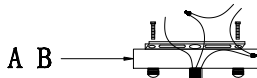


C

No	Material	PCS
A B	Hanging plate + suction top plate	1
C	M10 Hardware middle bar	1
D	Metal cover	2
E	Metal cylinder	1
F	glass	6
G	E27 lamp cup	6
H	spring support	6
I	Metal bracket	6
J	M10 Hardware rod	6

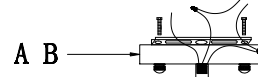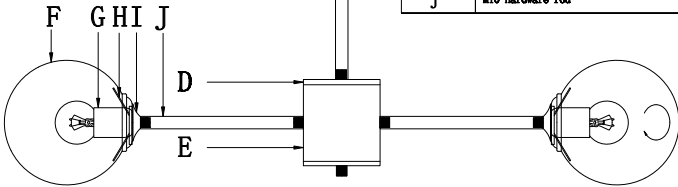

C

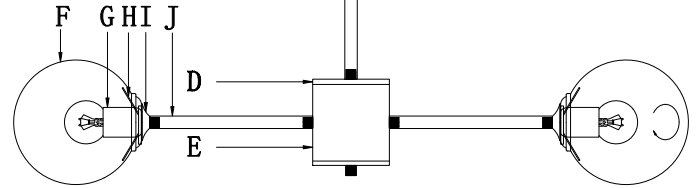

1 One line hanging plate on the wall and the top plate to lock A B

2 Hardware rod with tooth to lock hardware support, E27 lamp cup, spring frame with screws fixed G H I J

3 The hardware bar is locked on the cylinder, connected with the line, the upper and lower hardware flat cover is locked with the tooth, and then the lock hardware middle bar is connected with the suction top plate B C D E

4

Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture does not light.	1. Fixture may be wired incorrectly. 2. Worn or broken bulb 3. Lamp socket or LED transformer (if applicable) may go bad.	1. Check wiring. 2. Replace bulb 3. Replace lamp socket or LED transformer (if applicable)
Light bulb flickers.	1. Switch Contacts are bad 2. Wire connections are loose. 3. Light bulb socket may go bad.	1. Replace the switch 2. Check wire connections. 3. Replace the socket