 
 


instruction for installation

instrument; tool



Chinese-English





screwdriver

Before Installation

1. Please read these instructions before assembling or installing the product.
NOTE: Installation by a licensed electrician is recommended.
2. Take out the fixture and the mounting package and make sure all parts are included.
If any part is missing or damaged, please contact us.
3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
4. Do not disassemble the main body, as it has been installed & commissioned correctly &
5. **IMPORTANT:** Turn off the main power at the circuit breaker and place the wall switch or pull
6. Do not use bulbs with wattage greater than specified on this fixture.

No	Material	PCS
A	ceiling plate	1
B	electric wire	3
C	Hardware rod M10 inner teeth	3
D	Metal flat cover	3
E	Reverse side lamp cup	3
F	glass	3

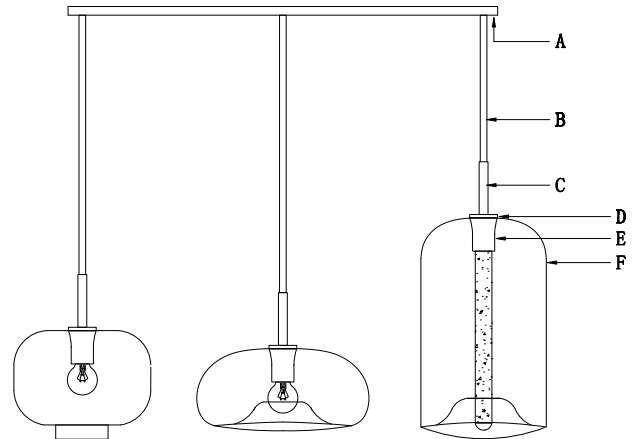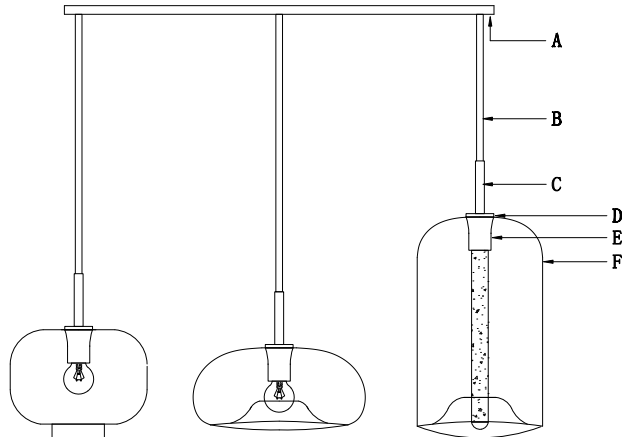

1 Hanging plate on the wall and the top plate to lock A

2 The wire lock head is connected to the top plate C, B, and D with the transmission tooth and the hardware rod

3 Hardware flat lid with E27 ceramic lamp holder against lock, fitted with reverse side lamp cup glass clip middle

4

5

Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture does not light.	<ol style="list-style-type: none"> 1. Fixture may be wired incorrectly. 2. Worn or broken bulb 3. Lamp socket or LED transformer (if applicable) may go bad. 	<ol style="list-style-type: none"> 1. Check wiring. 2. Replace bulb 3. Replace lamp socket or LED transformer (if applicable)
Light bulb flickers.	<ol style="list-style-type: none"> 1. Switch Contacts are bad 2. Wire connections are loose. 3. Light bulb socket may go bad. 	<ol style="list-style-type: none"> 1. Replace the switch 2. Check wire connections. 3. Replace the socket