



Before Installation

- 1. Please read these instructions before assembling or installing the product.
- NOTE: Installation by a licensed electrian is recommended.
- 2. Take out the fixture and the mounting package and make sure all parts are included.

 If any part is missing or damaged, please contact us.
- 3. All parts must be used as indicated in theseinstructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
- parts, leave parts out, or use any parts that are worn out or broken.
 4. Do not disassemble the main body, as it has been installed & commissioned correctly &
- 5. IMPORTANT: Turn off the main power at the circuit breaker and place the wall switch or pull
- 6. Do not use bulbs with wattage greater than specified on this fixture.

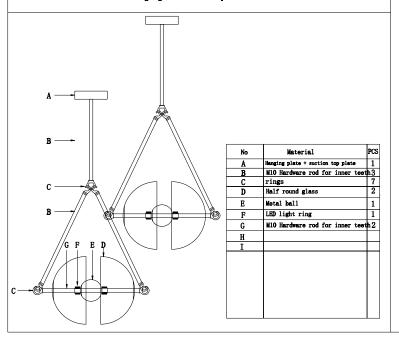

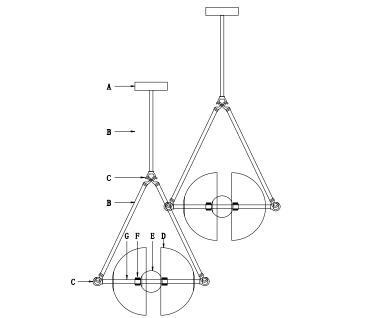

- 1 One line hanging plate on the wall and the top plate to lock A B
- 2 The lifting ring and the inner tooth hardware bar are locked on the suction top plate B C
- M10 inner tooth hardware bar is placed in the semicircle glass with a tooth transfer lock LED light source ring, 3 wiring in the hardware ball, and then use another hardware bar to lock Glass D, E, F and G are locked with rings at both ends

Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture does not light.	1. Fixture may be wired incorrectly.	1. Check wiring.
	2. Worn or broken bulb	2. Replace bulh
	3. Lamp socket or LED transformer (if applicable) may go bad.	3. Replace lamp socket or LED transformer (if applicable)
Light bulb flickers.	1. Swith Contacts are bad	1. Replace the switch
	2. Wire connections are loose.	2. Check wire connections.
	3. Light bulb socket may go bad.	3. Replace the socket