

 boifun

# Product Manual

Portable Video  
Player  
Model: BFN-141



The latest version V1.00



## WARM TIPS

How to get 12 months warranty and become our VIP customer?

Contact us to register within one month of receiving your player.

You will become a VIP customer of BOIFUN and get a member-only gift!

## GET SUPPORT

**Official Mailbox:** [admin@boifun.net](mailto:admin@boifun.net)

 
**Official Website:** <https://boifun.net/warranty>

**Facebook:** <https://www.facebook.com/Boifun-100742497961992/>


# CONTENT

## USEFUL TIPS

- 1. Battery.** Please recharge the Battery for at least 6 hours before the initial use. If you connect this player with AC power, you can use it directly.  
**Note:** Make sure you switch off the unit before charging. The charging indicator LED will change from RED to OFF to indicate that the battery has been fully charged. When the unit is on, the LED turns GREEN.
- 2. Power switch.** Slide the Power switch on the right side of the player to "ON" position to turn on the player after connecting the mains power supply. Slide the Power switch on the player to "OFF" position to turn off the player completely. (please refer to the below picture)  
When the DVD player is turned off, the green power indicator will go out.
- 3. LCD Screen.** If you find scratches on the screen, just remove the screen protector.

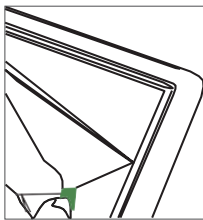

 - 4. Laser Pickup.** There is a yellow card inside the player. Before you insert a disc, please remove the card. Please DO NOT touch the laser pickup or other parts with your hand.

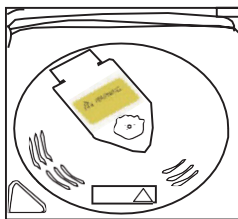

### 5. Disc Format

 
<b>Disc Format Supported</b>	CD, DVD, DVD + R/-R, DVD + RW/-RW, VCD, SVCD, CD-R/RW
<b>Disc Format NOT Supported</b>	Blu-ray, HD DVD, Discs recorded in the AVCHD format, DVD-Audio, Version 1.0 of DVD-RW, DVD-ROM, CD-ROM, CDV, CD-G, SACD, Photo CD, DVD-RAM that cannot be removed from their cartridges, 2.6-GB and 5.2-GB DVD-RAM, PAL discs.

**6. Language Settings.** Press key [SET UP]  $\square$  [OSD language]  $\square$  Change the display language. It is the same procedure for Audio, Subtitles and Menu.

**7. About the Game.** If you want to play games on our device, please check the free drop box link below: <https://sourl.cn/XVcBpM>

**8. About the Maintenance.**


- Wipe with a soft, dry cloth to clean this unit.
- Use eyeglass cleaner to remove stubborn dirt from the LCD.
- Do not use alcohol, paint thinner or benzine to clean it.
- Do not press onto the LCD screen or drop the product from a high place.
- This unit is not waterproof. To prevent a fire, do not place any container filled with liquid near this unit (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

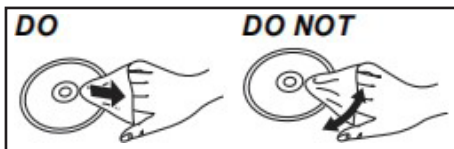


- To clean discs, wipe with a damp cloth and then wipe dry.
- Do not attach labels or stickers to any discs (This may cause disc warping, making it unusable).
- Do not write on the discs with a ball-point pen or any other writing instrument.
- To protect discs from scratches and dirt, please return them to their cases or cartridges when they are not in use.
- Do not use discs that are badly warped or cracked, or irregularly shaped discs, such as heart shapes.

## PRODUCT DESCRIPTION

 
### » Package Contents

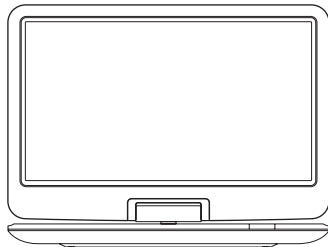


①

 


②

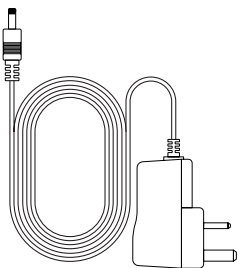 

③

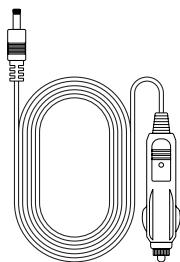 


④

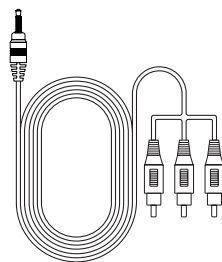 

⑤

<b>1. Portable DVD Player</b>	<b>4. Car Charger</b>
<b>2. Remote Controller</b>	<b>5. 3-in-1 AV Cable</b>
<b>3. AC Adapter</b>	

## » Button and Port Introduction

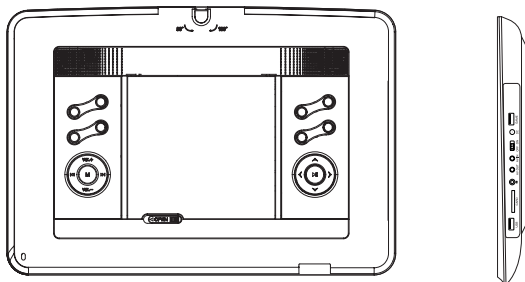 


<b>LCD ON/OFF</b>	Press it and shut down the LCD screen.
<b>Subtitle</b>	Press it to select subtitles.
<b>FWD/REV</b>	Press to achieve fast/rewind forward.





<b>VOL - VOL +</b>	Controls the volume up or down.
	Play previous/next chapter/title/track
<b>MENU</b>	Press to return to the root menu for DVD.
<b>STOP</b>	Short press to stop the audio/video/photo playback.
<b>MODE</b>	Press repeatedly to switch the mode for AV IN or DVD.
<b>USB/CARD</b>	Press repeatedly to switch input source: Disc/USB mode/SD card.
<b>SETUP</b>	Press to enter the setup menu, then use the direction keys and OK to set the system menu.
<b>UP</b>	Direction Keys, up
<b>DOWN</b>	Direction Keys, down
<b>LEFT</b>	Direction Keys, left
<b>RIGHT</b>	Direction Keys, right
	Press the play/pause button
<b>USB</b>	Support USB Sticks, up to 32 GB
<b>SD Card</b>	Support SD Card, up to 32GB
<b>3.5mm Audio port</b>	Support 3.5mm headphone jack
<b>AVIN</b>	For AV cable input interface
<b>AV OUT</b>	For AV cable output interface
<b>Power Switch</b>	Turn on/off the dvd player
<b>Charging Port</b>	Support AC charger and car charger
<b>GAME USB</b>	Support Game Joysticks (not included in the package)
<b>Power Indicator</b>	It will light up red when plugged in, and light up green when switch on

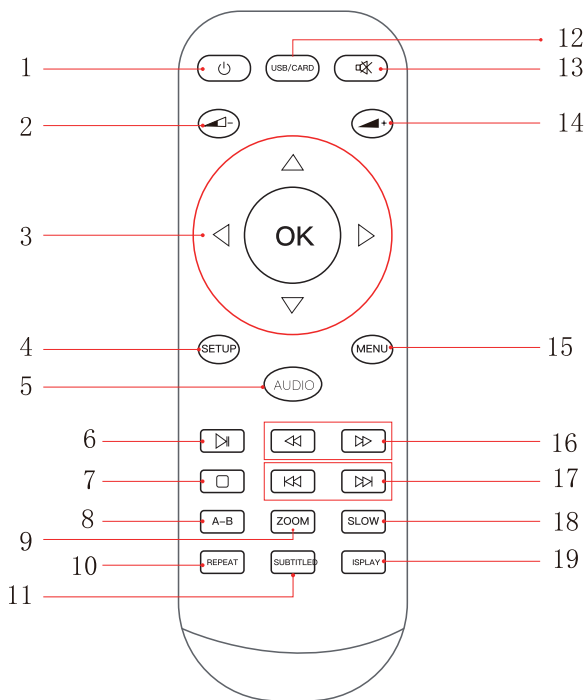 

## » Remote Control Instruction



1. Turn the unit on and off
2. Decrease volume, minimum to 0
3. Selection/Enter, Frame-by-frame
  - To select: Press up, down, left, or right ([ [▲, ▼, ◀, ▶ ]])
  - To enter: Press [OK]
  - Frame forward/ Frame backward:  
(while paused) press left or right ([ [◀, ▶ ]])
4. **SETUP:** Show Setup menu directly (except the AV mode)
5. **AUDIO:** Press to switch left and right channels
6. Play or pause the audio/ movie playback. Confirms the selection or press it to select the file to play
7. Short press to stop the audio/ video/ photo playback
8. **A-B:** Set point A and point B for loop playback
9. **ZOOM:** Short press to select 2X, 3X, 4X, 1/2, 1/3

10. **REPEAT:** Repeat the loaded disc
11. **SUBTITLE:** Change subtitle mode
12. **USB/CARD:** Switch between DVD, CARD and USB modes
13.  Mute the sound (Press again to activate the sound)
14.  + Increase volume, maximum to 20
15. **MENU:** View the main menu on a loaded DVD
16.  Select fast forward/ rewind speed
17.  Play previous/next chapter/title/track
18. **SLOW:** Press to achieve 1/2,1/4,1/8,1/16 times slow playback
19. **DISPLAY:** Turn on or off the LCD screen

## » How to install the battery

Battery installation and replacement for Remote:

1. Slide the cover down as indicated by the arrow.
2. Pull the battery loader out.
3. Insert the battery (2 AAA battery) into the receptacle, making sure the polarity matches the marks inside the component.
4. Replace the battery compartment cover of remote control.

### Using Of Remote Control

Point the remote control towards the sensor window on the main unit when operating.

The remote control works best at a distance less than 5m and at an angle of up to

30 degrees to the front of the unit. Remote requires line-of-sight to work, ensure no objects

 
are between remote and infrared sensor. Do not place the remote control in direct sunlight.

If the remote control fails to work even when it is operated near the player, replace the battery.


### Notes on Batteries

If the remote control is not used for an extended period of time, please remove the battery

from the compartment. Do not heat batteries or dispose of them in fire. Do not dismantle, deform or modify batteries.

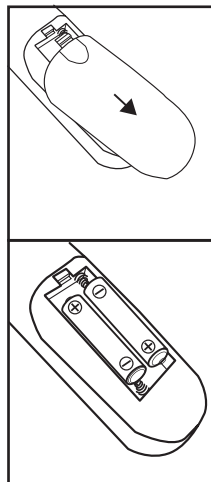


## PLAYING DISC

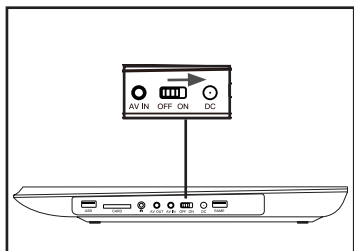 


①

 Slide the switch to the "ON" side

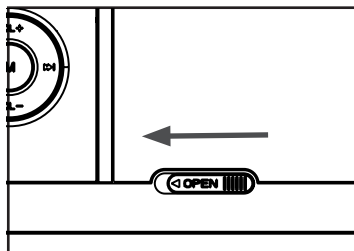

②

 Open the lid.

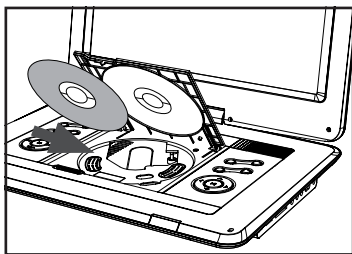

③

**Insert a disc and close the lid.**

- Load double-sided discs so the label for the side you want to play is facing up.
- Some discs start to play automatically when the unit is on.

### **Turn On/ Off the Player**

Slide the Power switch on the right side of the player to "ON" position to turn on the player after connecting the mains power supply.

Slide the Power switch on the player to "OFF" position to turn off the player completely.

**Note:** If the player will not be in use for a long period of time, slide Power switch to the "OFF" position and unplug the portable DVD player from the power source.

### **Selecting the Different Mode (DVD/USB/CARD)**

When the playback is in the stop mode; press the USB/CARD button on the remote control or the unit to select DVD or USB or SD play mode if certain discs or memory devices are connected. When a USB mass storage device is simultaneously inserted, the USB device will be recognized.

### **Return to the Root Menu or Title Menu**

During the disc playback, press the MENU button to return to the disc's root menu or title menu (depending on the disc). For MP3 DVD, Picture discs, press it to go to the file or folder list after pressing the MENU or stop button. Use Direction buttons (UP/DOWN/LEFT/RIGHT) to select a play option. Press the ENTER button to confirm and start playback.

### **Play/Pause the Playback (DVD/VCD/CD/MP3)**

During the playback, press the PLAY/PAUSE button on the remote control to pause the playback. Press it again to resume playback.

 
### **Volume Control**

Press the VOL+/- button on the player or the remote control to increase or decrease the volume level. To switch off the volume temporarily press the MUTE button on the remote control. Playback will continue without sound. Press it again or press the volume button to activate sound.

### **Selecting a Track/Chapter/Title (DVD/ VCD/ CD)**

Press the PREVIOUS I or NEXT I to skip to the previous or next title/chapter/ track. Stop Playback (DVD/ VCD/ CD)

## » Range of use

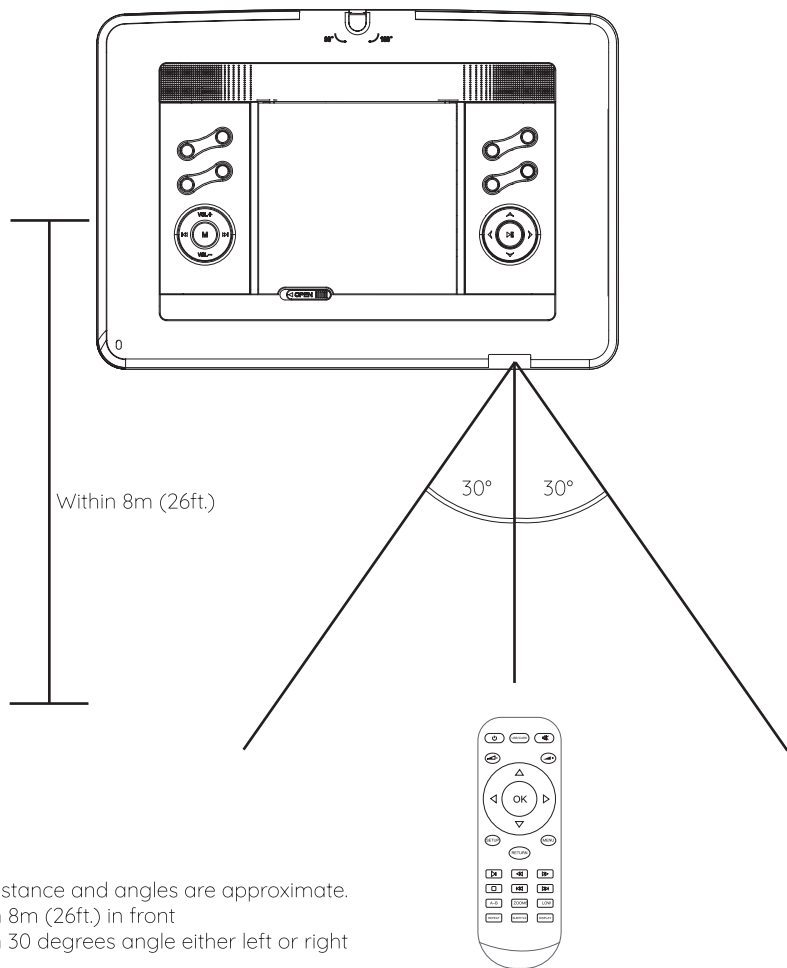

## CONNECTION

### » Enjoy Fun with a Game Controller

You can play multiple classic games with a game controller(not included in the package). Before playing, please download games via this website below.  
<https://sourl.cn/XVcBpM>

Here are the instructions about how to play games on a DVD player:

 
1. Use your PC to download games from the attachment file.
2. Unzip the NES file folder to your PC, and copy the folder to a USB stick (16GB to 32GB).
3. Plug the USB stick into the right-side USB slot and plug the game joystick into the backside USB slot.
4. Turn on the player and press "USB/SD card", choose "USB" mode.
5. Find "NES\_game" from the "menu" then select the game to start playing.
6. If you want to play other games, press the "SELECT" and "START" buttons for the joystick to exit back to the game menu.

### » Enjoy Fun with a Television

our player comes equipped with an AV output jack. Use this feature to connect the player's signal to external equipment (e.g. TV, monitor). Please refer to the image as below to connect them;

1. Connect the 3.5mm—RCA Cable to the AV Output on the unit and the audio/ video inputs on the Television (Red to Red, White to White, and Yellow to Yellow).
2. Turn the unit on by switching the Power Button to the On position.
3. Change the television to the correct audio/video input setting.

Audio and the video played through the unit will now be seen and heard on the connected television.

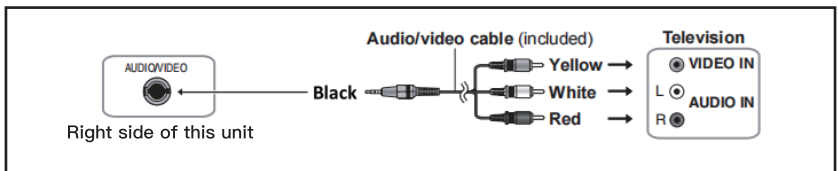

## » Enjoy Fun with a Headphone

### Connecting Headphones

Stereo headphone jacks have been provided on the player for private listening. To use the jacks, plug in the headphones with a stereo mini-jack 3.5mm plug into the headphone jack and adjust the volume to a comfortable listening level.

#### **Note:**

When headphones or earphones are connected to the earphone jack, the main speakers will be automatically muted.

1. Be sure that your player is set at a low volume level before connecting the headphones.
2. Increase the volume gradually for comfortable listening.
3. Listening at high volumes for a long period could cause hearing loss.

## » Enjoy Fun to Connect to USB

You can play or view the supported data flash, such as the MP3/WMA, Video flash in AVI and JPEG photos. Insert the USB device into the USB port on the right side of your portable DVD player. The portable DVD player supports USB devices up to 32GB. (Note: Not all USB devices can be read well, which may result in playback issues.)

When the disc playback is in stop mode, press the source button on the unit or the remote control, and then press the direction button UP/DOWN to select the USB, and press enter. Then select the video you want to play by pressing the direction button.

## » Enjoy Fun with a SD/MMC Memory Card

1. Plug a SD or MMC card into the SD/MMC Memory Slot.
2. Switch unit to Card Mode by pressing the USB/CARD button.
3. Use the Directional buttons to select videos or image. Press the Enter button to play.
4. The portable DVD player supports Memory Cards up to 32GB.

#### **Note:**

 
Please be sure you don't insert the card incorrectly or it may become damaged. Always stop the playback or change to another mode before removing the USB/memory card.

## SETUP PAGE

### » Menu Operation

1. Press **[SETUP]** on the remote control or on the unit to show the setup menu.
2. Press **[LEFT]** / **[RIGHT]** to select an item. The submenu of the selected item will be instantly shown.
3. Press **[UP]** / **[DOWN]** to select an item in the submenu, then press **[OK]** / **[ENTER]** to enter. Use **[UP]** / **[DOWN]** to select an option, then press **[OK]** / **[ENTER]** to confirm it or press **[LEFT]** to cancel.
4. Press **[UP]** / **[DOWN]** to continue to set other items in the submenu.
5. Press **[LEFT]** to go back to the superior menu of the current one.
6. Press **[SETUP]** again and press **[ENTER]** / **[OK]** to exit the setup menu.

### » General Setup Page

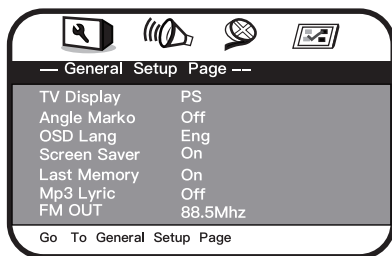

#### [TV Display]

- 1. 4:3 Normal / PS PANSCAN:** If the unit is connected to a conventional TV set, the wide-screen image will be displayed on the screen in its native aspect ratio with some part on the left and right cut off.
- 2. 4:3 Normal / LB LETTERBOX:** If the unit is connected to a conventional TV set, the wide-screen image will be displayed in its native aspect ratio with black borders on the top and the bottom side.
- 3. 16:9 wide:** Select this option if the unit is connected to a wide-screen TV set. The wide-screen image will be displayed in full screen in its native aspect ratio while the 4:3 image will be stretched out horizontally to fit in the screen.

#### [ANGLE MARK]

1. Set this item to ON. When a disc encoded with multiple camera angles is playing, the angle mark will display on the screen. Then you can view the video of different camera angles by pressing **[ANGLE]** on the remote control.
2. Set this item to OFF to disable this function.

**NOTE:** This function only works with those discs encoded with multiple camera angles.



### [OSD LANGUAGE] (on-screen display language)

Set this on-screen display language in this item.

### [SCREEN SAVER]

1. ON: If the image remains motionless on the screen, for several minutes, a screen saver will appear on the screen. You can press any key or button to wake it up.
2. OFF: Turn off the screen saver function.

### [LAST MEMORY]

1. ON: Each time you turn off the unit or stop the disc, it will memorize the last play duration. Next time you turn on the unit and play the same disc, the unit will play from that memorized point.
2. OFF: Disable the last memory function.

### [MP3 LYRIC]

 
If you want to show the lyrics of a song, please load lyrics and music as the same name in a USB or Memory card before performing this function.

1. Choose MP3 file.
2. Download the corresponding lyrics with the extension ".lrc" from the Internet or create it with lyric file editor (not included).
3. Rename the lyrics file. Make sure that the lyrics filename is the same as the music file name.

### [FM OUT]

1. If you want to synchronize the sound of your car audio and DVD player, you can use this function.
2. Select the FM sound output frequency band of the dvd player (you need to select the frequency band within the receiving range of your radio, otherwise it will not match).
3. Turn on your car radio, tune the radio to the frequency band selected by the DVD, and then you can receive the sound from the DVD player.

## » Audio Setup Page

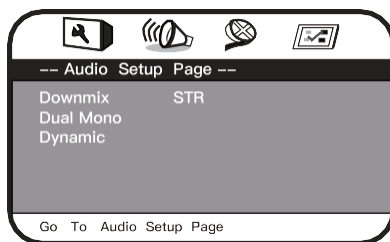


The Audio menu allows you to change the audio setup of the DVD.

**[Down mix]** Set down mix to LT/RT, Stereo.

**[Dual Mono]** Set down Stereo, L-Mono, R-Mono or Mix-Mono.

**[Dynamic]** Full 3/4, 1/2, 1/4, OFF

## » Panel Quality Setup

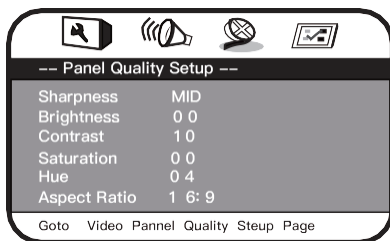 

The video menu allows you to change the display properties of the DVD.

**[Sharpness]** Adjusts the screen sharpness.

**[Brightness]** Adjusts the screen brightness.


**[Contrast]** Adjusts the screen contrast.

**[Saturation]** Adjusts the screen saturation.

**[Hue]** Adjusts the screen hue.

**[Aspect Ratio]** Setup panel display to 16:9 or 4:3.

## » Preference Page

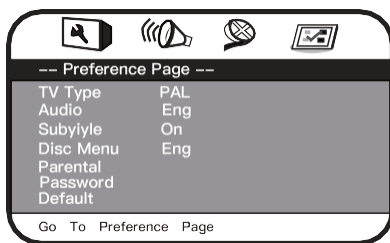 

The preference menu option allows you to adjust the default DVD disc setting. (The setting is only available when no media is inside the unit.)

**[TV Type]** Set TV Type to PAL, AUTO, or NTSC.

**[Audio]** Set the default audio language.

**[Subtitle]** Set the subtitle language.

**[Disc Menu]** Set the disc menu language.

**[Parental]** When setting a rating level, a password screen is shown. Follow the on-screen instructions. Do not forget your password.

**[Password]** Enter the default password "0000" then set your password.

**[Default]** Return the portable DVD to factory default beyond the maximum output of the speaker in sound effects processing.

## SPECIFICATIONS

### » Difference among MPEG 1, MPEG 2 and MPEG 4

	MPEG 1	MPEG 2	MPEG 4
<b>Speed(kb/s)</b>	1380kb/s (352*288)	6500kb/s	8800kb/s (720*576)
<b>Quality</b>	Good	Excelled	Perfect
<b>Hardware</b>	Low	Medium	High

### » Supported Format for different Files

File	Supported Format
<b>Compatible Disc</b>	CD-R, CD-RW, VCD, SVCD, CVD, DVD±R, DVD±RW
<b>Audio</b>	MP3, WMA, OGG, AAC (Bit rates: 32-192kbps)
<b>Video</b>	AVI, MPG, MP4, VOB, FLV, RMVB (Resolution must be within 720*576)
<b>Picture</b>	JPG
<b>E-book</b>	TXT(Code: ANSI)

### » Specification

Compatible DISC	CD, DVD, CD-R(RW), DVD±R, DVD±RW, VCD, SVCD(RW)
Frequency response	20HZ to 20KHZ
Video output	1 Vp-p75 Ohm unbalanced
Audio output	1.4 Vrms/10 kohm
Dynamic range	Better than 85dB

Laser	Semiconductor laser, Waver length:650
Power source	DC9-12V 1.5A
Battery Type	Li polymer

## TROUBLESHOOTING

Before contacting the customer service, please kindly check by yourself with the following chart.

Troubleshooting	Solution
<b>The player can't read discs</b>	<ul style="list-style-type: none"> <li>• Please clean the laser and DVDs with the alcohol first.( P2 )</li> <li>• Ensure the disc is in the right format for our DVD player. Our player doesn't support Dolby, pirate, burnt and blu rays DVDs.</li> <li>• Find your product order and email to "Contact seller" <b>(<a href="mailto:admin@boifun.net">admin@boifun.net</a>)</b></li> </ul>
<b>The player doesn't work</b>	<ul style="list-style-type: none"> <li>• Make sure the power switch has been set to the "ON" position.</li> <li>• Check connections to the AC adaptor or battery pack.</li> <li>• Check the status of the indicator light. Under the premise of power connection, if it's on, there is a problem with the motherboard; if it's off, there is a problem with the motherboard or power adapter.</li> <li>• Find your product order and email to "Contact seller" <b>(<a href="mailto:admin@boifun.net">admin@boifun.net</a>)</b></li> </ul>

<p><b>Picture is distorted</b></p>	<ul style="list-style-type: none"> <li>• The disc might be damaged. Try another disc.</li> <li>• It is normal for some distortion to appear during forward or reverse scanning.</li> </ul>
<p><b>The player doesn't read MP4 on the USB or SD card</b></p>	<p>DVD player supports MP4 files in your USB Drive/ SD card, but you need to convert the formats first. You can download a converter, FormatFactory, to complete the conversion. Any questions please contact customer service for more help.  <b>(<a href="mailto:admin@boifun.net">admin@boifun.net</a>)</b></p>
<p><b>Remote controller doesn't work</b></p>	<ul style="list-style-type: none"> <li>• Replace the battery (AAA battery).</li> <li>• All buttons fail: A problem with remote controller or receiver.</li> <li>• Individual buttons fail: Find your product order and email to "Contact seller"  <b>(<a href="mailto:admin@boifun.net">admin@boifun.net</a>)</b></li> <li>• Note: The remote controller needs to be aimed directly at the front of the Video Player, within 8 m and 30 degrees( P7 ).</li> </ul>

<p><b>The game function doesn't work</b></p>	<ul style="list-style-type: none"> <li>• Check the connection to the game controller. There is a USB port on the right of the device marked "Game".</li> <li>• Make sure the game you download is the one shown in the link below: <b><a href="https://sourl.cn/XVcBpM">https://sourl.cn/XVcBpM</a></b></li> <li>• Follow the correct steps to play( P8 ). Or contact customer service for more help. <b>(<a href="mailto:admin@boifun.net">admin@boifun.net</a>).</b></li> </ul>
<p><b>The player sound is too low.</b></p>	<ul style="list-style-type: none"> <li>• Check that the two speakers of the player are working properly, cover one speaker with your hand, and check if the other speaker is sounding.</li> <li>• Check whether the disc you put in meets the specifications( P13 ). Our player does not support DTS, which is the audio track of Dolby Disc. Please try another disc(not pirate, burnt, Dolby and Blu-ray discs) to hear whether it will play louder.</li> </ul>
<p><b>No sound or distorted sound</b></p>	<ul style="list-style-type: none"> <li>• The speaker is off if headphones are connected.</li> <li>• Make sure your DVD is placed properly and all cables are securely connected into the appropriate jack.</li> <li>• Audio may not be output due to how files were created.</li> </ul>

<p><b>Can't advance through a movie</b></p>	<p>You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.</p>
<p><b>Other problem</b></p>	<p>Static discharges or other external interferences can cause the DVD player to malfunction. When this happens, disconnect the power plug and plug it back in. If the problem happened again, disconnect the device from main power and contact Customer Service or a repair shop.</p>

## WARRANTY

Our company provides customers with a warrant of **12 MONTHS** from the date of purchase.

Should you experience any problems not covered by the FAQ, please don't hesitate to email us at [admin@boifun.net](mailto:admin@boifun.net)

### » WARRANTY EXCLUSION

The warranty will not be valid if:

1. The product has not been installed, operated or maintained in accordance with the manufacturers operating instructions provided with the product.
2. The product has been used for purposes other than its intended function.
3. The product has been used for purposes other than household use.
4. The damage or malfunction of the product is caused by any of following conditions:
  - Incorrect voltage.
  - Accidents (including liquid or moisture damage).
  - Misuse or abuse of the product

- Faulty or improper installation
- Mains supply problems including power spikes or lightning damage
- Infestation by insects
- Tampering or modification of the product by persons other than authorized service person
- Exposure to abnormally corrosive materials
- Insertion of foreign objects into the unit
- Used with accessories not pre-approved





BOIFUN Bring lots of fun to your family.  
If you have any questions, please feel free  
to contact us:  
[admin@boifun.net](mailto:admin@boifun.net)