JRi Adjuster Guide



Reservoir Adjuster - Single Adjustable

The single adjuster for remote reservoirs allows the user to adjust low speed compression.





Align desired number with white line

Low Speed Compression Adjuster

This adjuster is a barrel style adjuster which varies the orifice (bleed) size. While it is a low speed style adjuster, the adjustment range is so large it will effect low and high speed together. This allows it to be used as a general compression adjuster.

Setting "1" is full soft and setting "6" is the stiffest. The adjuster has detents, meaning clicks will be felt while adjusting. The adjuster knob can be turned by hand and the number which is aligned with the white mark (as shown above) is the current setting.

Reservoir Adjuster – Single Adjustable - LSC	
Total Clicks	6
"1" Position	Full Soft
Tool	None