Lacidoll[®] Wide Spray Mist Ultrasonic Humidifier

LCDJSQ-2109 User Manual

Thanks for your purchase. We provide a one-year warranty. If any quality issues, replacement or refund is available. Please feel free to contact us via E-mail:

info@lacidoll.com



Precautions

Thank you for purchasing our humidifier LCDJSQ-2109. Please read this manual carefully before using and keep it for future reference.

All pictures shown are for illustration purposes only. Actual products may vary due to product enhancement.

Contents

Safety Guide 1-2
Components ····· 3
Placement 4
Installation 5
Water Filling 6
Control Panel & Remote Control 7
Maintenance 8
FAQ 9-10
Product Specifications 11
Warranty Card

Safety Guide

- Please do not disassemble or transform the machine.
- Please do not let the machine be strongly impacted.
- Please keep a distance when the humidifier spraying mist., especially for people with sensitive respiratory tract.
- Please stop the machine before moving it.
- Please do not connect the socket that exceeds the rated voltage and do not use the extension cable to avoid fire or electric shock.
- When the plug or wire is abnormally hot, please stop using it.
- Please do not unplug the power plug with wet hands, otherwise, it may cause electric shock or injury.
- Please do not block the outlet or add water to the mist outlet which may cause water leakage, deformation or failure.
- Please do not use acidic detergent in the main body. If the detergent remains, may produce toxic gas.
- Children should be used under adult supervision.

Safety Guide

- Please do not put essential oil into the main body or water tank, which may cause water leakage deformation or failure.
- Please do not insert your fingers or other things into the water inlet or air outlet or the gap which may cause damage to the machine or electric shock.
- When not in use for a long time (more than 24 hours), please pour out the water from water tank and main body to prevent mold or impurities from harming your health.
- Please leave it at room temperature for 30 minutes before the first use to avoid damage to the water tank due to sudden temperature changes.
- Please use it at normal room temperature (5°C-40°C).
- When the room temperature is lower than 0°C, please pour out the water in the water tank and sink to avoid freezing and damaging the machine.

Components



Placement

Please do not put the humidifier next to the wall, furniture, stove, household appliances and other items, and keep a certain distance, as shown below.

Please do not use it in the following occasions to avoid water leakage, signal interference or injury, etc.



Oirect sunlight.

On the unstable platform.

- With high temperatures humidity and dust.
- Near the air conditioner, furnace, heater and stove.
- Near mobile phones, computers and other precision instruments.
- Near the radio and other objects that emit radio waves.
- Under the table, or on the carpets bedding, etc.

Installation



1. Take out the humidifier and other accessories from the package.



3. Remove the protective bag from the water pump.



2. Remove the insulating plastic sheet before using the remote control.



4. Place the main body on the water tank properly.

Water Filling



1. Add water from the top without opening the lid.



- 2. Remove the main body and add water to the water tank directly.
- Distilled water or RO water is recommended.
- Please add water below 40°C.
- Please do not exceed the maximum water mark.
- Please do not allow water enter the mist outlet or water may enter the inside and cause the humidifier to malfunction.
- Please do not add mineral water, plasma water or tap water that has not been used for a long time. If mold or impurities grow, it may cause health problems.
- When the water is insufficient, the humidifier will prompt water shortage and automatically shut off. Please refill with water and turn it on.

Control Panel & Remote Control



U POWER	Touch the button to light up and the humidifier starts to work.		
() HUMIDITY	The humidity can be set between 40-90% in increments of 5%. The humidifier will automatically stop spraying mist when the surrounding humidity reaches the set value.		
() SLEEP	Touch the sleep button to enter the sleep mode, and the display will dim. Touch any button to exit sleep mode, and the display will light up.		
 MAX-MIN	The mist volume can be adjusted in three levels: low, medium, high.		
	The timer can be set for 1-12 hours in increments of 1 hour. The humidifier will shut off automatically when the time reaches the set value.		
÷ UV	Touch the UV button to turn on or off the UV sterilization function. A purple light in the water sink will appear when turning it on.		

• The operation of remote control is the same as the control panel.

Maintenance

Tilt the main body to this side and pour out the water.Take care not to wet the floor.	Clean the water tank with the sponge weekly.	Clean the water sink with the sponge weekly.

- When not in use for a long time (more than 24 hours), please pour out the water in the water tank and sink to prevent mold or impurities from harming your health.
- Be sure to pull out the power plug before maintaining the humdifier.
- Do not directly flush the whole machine with water to avoid short circuits and failure.
- With the use of tap water, minerals and organics may adhere to it, which may cause the function of humidifier to decline or malfunction. If the dirt is not easy to clean, the cloth can be soaked in neutral detergent before wiping.
- The residue of detergent in the sink and tank should be cleaned up before use.

FAQ

- Q: After the power is turned on, the display does not light up.
- A: There may be water entering the circuit board. Please air-dry the base for one day. If it still can't be turned on, please contact customer service by email.
- Q: Low mist output.
- A: When the ambient humidity exceeds the set value, the machine will stop spraying mist automatically. But if the atomizer is damaged, please contact customer service by email.
- Q: Water shortage with beeping.
- A: Please open the sink and check whether the water can be pumped up. If not, check whether the water pipe has fallen or broken. None of the above, contact customer service by email.
- Q: Interference with TV remote control signal.
- A: Keep the humidifier 1m away from the TV or other objects that emit radio waves.
- Q: Abnormal noise.
- A: There is too little water in the tank, or the platform is not stable. Please fill water and place the humidifier on a flat and stable surface.

FAQ

Q: There is white powder around the humidifier and scale in the base or tank.

- A: Distilled water or RO water is recommended. Minerals and organics may adhere to the water when using tap water, which may cause the function of humidifier to decline or malfunction. If the dirt is not easy to clean, the cloth can be soaked in neutral detergent before wiping.
- Q: The fire on the stove turned red.
- A: Because the composition of the tap water reacts with the flame (flame reaction), please keep the humidifier away from the stove.
- Q: There is water around the humidifier.
- A: Humidity is too high, or the humidifier is placed in a non-ventilated place, so the mist can not be fully evaporated.
- Q: The humidity value is not completely consistent with the room humidity.
- A: The difference of 5-10 degrees is in the normal range. If not, please contact customer service by email.

Q: Why the humidifier is turned on, but does not produce mist?

A: It takes 1 minute to pump water to the main body. Please wait patiently.

Product Specifications



Product Name: Ultrasonic Humidifier		Rated Power: 53W
Model Number: LCDJSQ-2109		Rated Voltage: 100V-240V~
Operation Mode: Low / Medium / High		Max Mist Output: 800mL/h
Noise: ≤35dB		Tank Capacity: 2.1Gal/8L
Size : 300mm × 180mm × 415mm		N.W. : 3.1Kg
	1-12 Hours Timer	
Safety Functions:	Waterless Auto Shut-off	
	Automatic Shut-off When Falling	

Warranty Card

Model Number	LCDJSQ-2109
Warranty Period	Within 1 year from the date of purchase
Purchase date	Year Month Date
	Name
Customer	Address
	Phone Number
Store	

Warranty Period

- Our company provides a one-year warranty, which starts from the date of purchase.
- When returning the product, please confirm that the product is intact, and the packing boxes and accessories are complete.

Non-Warranty Policy

The following conditions are not covered by the warranty.

- Over the warranty period.
- Damage caused by natural disasters and other force majeure.
- Any damage caused by use not in accordance with the requirements in the User Manual.
- Failure or damage caused by forced use of the product.
- The user disassembles or repairs the product without authorization.

Warranty Requirements

- 1. Please provide the warranty card and the order number.
- 2. Please describe the problems in details with pictures or videos.
- 3. Send E-mail to info@lacidoll.com

Sorry that warrant service would not be available if you are unable to provide the above information.

Lacidoll®