



WAGEN IRD ELECTRIC FOOD WARMER HOT BOX – WAG1398

IMPORTANT: This Wagen Hot Box is pre-set to 70 - 80 degrees Celsius, should you wish to adjust the temperature to suit your needs / application please see under the Hot Box for further Instructions

Please note: This Hot Box is not intended to cook raw food

Operation:

1. Place Hot Box on a flat surface
2. Plug power cord into grounded electrical outlet
3. Turn Hot Box on
4. The Hot Box will take approximately 20 minutes to reach the pre-set temperature
5. Place hot food into the Hot Box
6. Turn power off and unplug Hot Box before placing on trolley to transport

Cleaning:

1. Turn off and unplug the Hot Box, the unit must be completely cool before cleaning
2. Clean with mild detergent and a damp cloth
3. Avoid using abrasive materials including scrapers and toxic chemicals
4. Always rinse the interior of the Hot Box with a clean wet cloth and dry afterwards with a clean dry cloth