


julu® Laundry Ladder

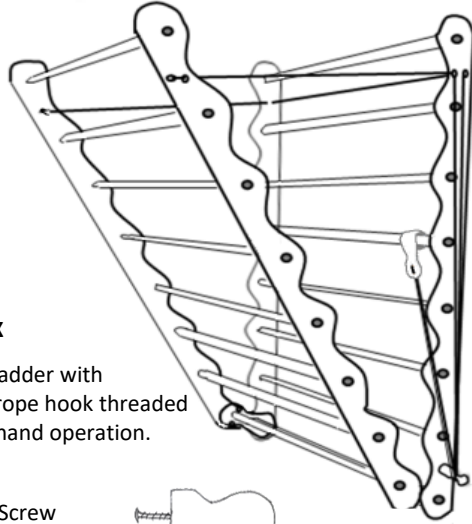


Included In the box

1 x Laundry Ladder with cord and rope hook threaded for right-hand operation.

1 x Spindle + Screw



2 x Julu Wall Brackets

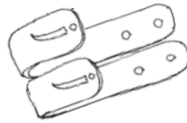

4 x Screws + Caps



4 x Raw Plugs



1 x Instruction Leaflet



Warning



Read and follow both sides of these instructions. Failure to properly assemble, install and use the Laundry Ladder could result in unforeseen risk or injury.

Always keep instructions for future reference by other users.

Your Laundry Ladder is pre threaded to use and operate from the Right-Hand side, see the reverse side of these instructions for guidance on how to re-thread the Cord and Hook to enable operation from the left-hand side if preferred.

Fixing to a Solid Wall (fixings included)


Decide on the height. Julu recommends positioning the Laundry Ladder base, at waist height to aid functionality.

Use \varnothing 7 mm drill

Brackets to be positioned:

52cm apart *Bunty* (600)

72cm apart *Doris* (800)

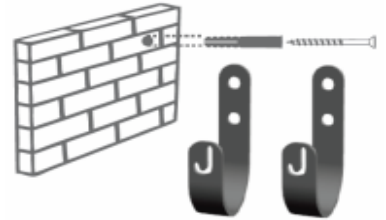

Fixings are ONLY included for solid walls. All other types i.e. Cavity, Thermolite Block etc. will require additional fixings which can be bought from good hardware stores.

Safety Instructions

Read before Assembling, Installing and Using.

For safe use:

- Laundry Ladder rope must ALWAYS be secured to the ladder using the rope hook.
- Keep fingers away from pinch points when opening or closing Laundry Ladder.
- Do not let children play on Laundry Ladder.
- Do not place objects that exceed 44 Lbs (20Kg) on Laundry Ladder
- Regularly check that all screws are securely tightened, and spindle is securely attached and replace if any signs of wear and tear.
- Check cord is securely attached and replace cord if any signs of wear and tear.

To attach to the wall:

- Do not place it in a location that will get in people's way when it is open.
- The Julu Laundry Ladder brackets must be securely fixed to a solid clean wall using the enclosed screws.
- For all other types of walls, Julu recommends you seek professional advice from your local builder or decorator. Some walls use different materials and you may need to use other attachment methods.
- Wall coverings such as wallpaper may be adversely affected through product use.

Don't leave Laundry Ladder outside when not in use as the unit will naturally deteriorate in outdoor weather conditions.

No two pieces of wood are the same and some movement should be allowed. Colour, grain and texture can vary considerably even in the same piece. The random occurrence of characteristics is an inherent part of the beauty of any natural wooden product; as are variations in colour and texture.

Whilst Julu make every effort to give high customer satisfaction, if there is an issue with the product or service, please contact us so that we can try and rectify any problems




- Do not exceed weights of 20kg/44lb



- This is not a toy. Not suitable for children.



- Be careful not to pinch fingers.

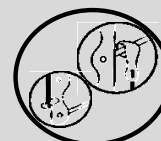


- Always secure with rope hook.




- Always read the instructions.

How to re-thread the Cord & Hook for operation from the Left Hand Side

- The Back Frame which hooks onto the wall is lower than the front.
- Lean the unit with back frame against a wall or solid surface.
- The cord and hook have been strung to the right-hand-side of the unit.

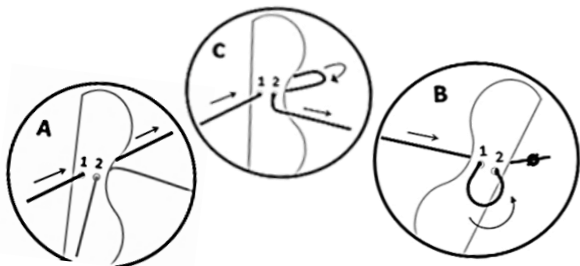


- Undo the knot on the left side of the front frame B2.
- Unthread the cord through the holes from the left side and across the back frame to the right. (starting with B2 and following on, B1, A2, A1)
- Unthread C1, you can now remove the hook and keep for the next stage.
- Thread the cord back through C1, across the back to the left-hand side through A1.
- Rethread the hook onto Cord.
- Thread the end of the cord back through A2 (outside to inside)
- Thread through B1 (inside to outside), finishing with B2 (outside to inside) and secure with a double knot.
- Finally, pull all cord tight through arm A and adjust it so that the hook is at the furthest end of the cord and taut.
- See below Spindle Attachment to use and secure your Laundry Ladder.

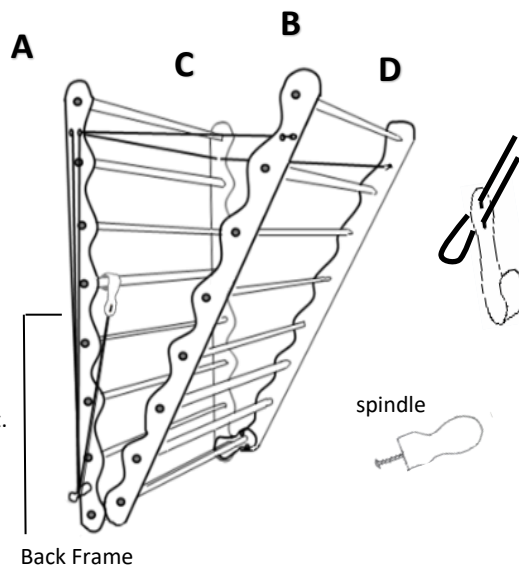

Above image shows the Laundry Ladder strung on the left.

Spindle Attachment

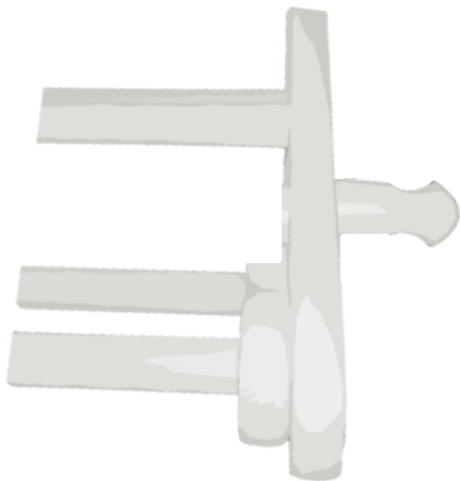

The **spindle** is included in the small box of fittings. You will need to attached this to the outside of the Laundry Ladder, at the bottom of the back frame (the frame against the wall) either right hand side or left hand side depending on the preferred side you are going to operate it from.

Secure unit by guiding the cord UNDER the spindle (Fig 1) and place hook over the highest rod the cord will allow (Fig 2) Use this position when not in use.

The back frame is lower than the front frame.

Keep all instructions for future use/reference.

A video for stringing:
'How to string your Laundry Ladder'
can be found on the website at:

www.juluhome.co.uk

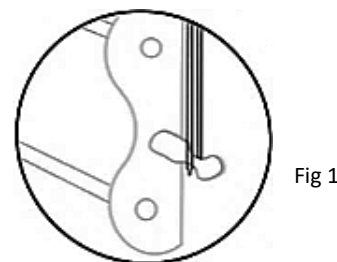


Fig 1

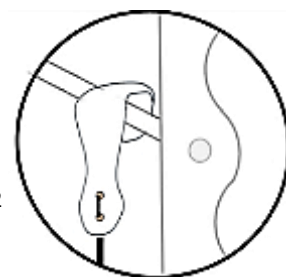


Fig 2



Please leave a review on
facebook or google, or email us
with a testimonial & photograph!

For Video Instructions
'How to restring your Laundry
Ladder' go to:

<https://www.juluhome.co.uk/wall-mounted-clothes-airer-uk/technical-information/>
plus, the latest printable
instructions!

® This product is protected by EU Design
Registration Number 002220046-0001

The Trademark JULU is protected in
other countries as well as European
Union under Trademark Number
012618674.

This product has been tested and passed
testing standards: BS EN 16121: 2013
ANSI BIFMA X5.9: 2012

Love your Laundry!

Julu Ltd, Sherridge Cottage, Sherridge
Road, Leigh Sinton, Worcesterhire
WR13 5DB

Email: info@juluhome.co.uk

Tel: 033 022 32 855

Updated: 03/11/23