




1. Remove plastic cover holding front light
 - a. 4 screws
 - b. Grab bottom of plastic cover and lightly jerk it front/up

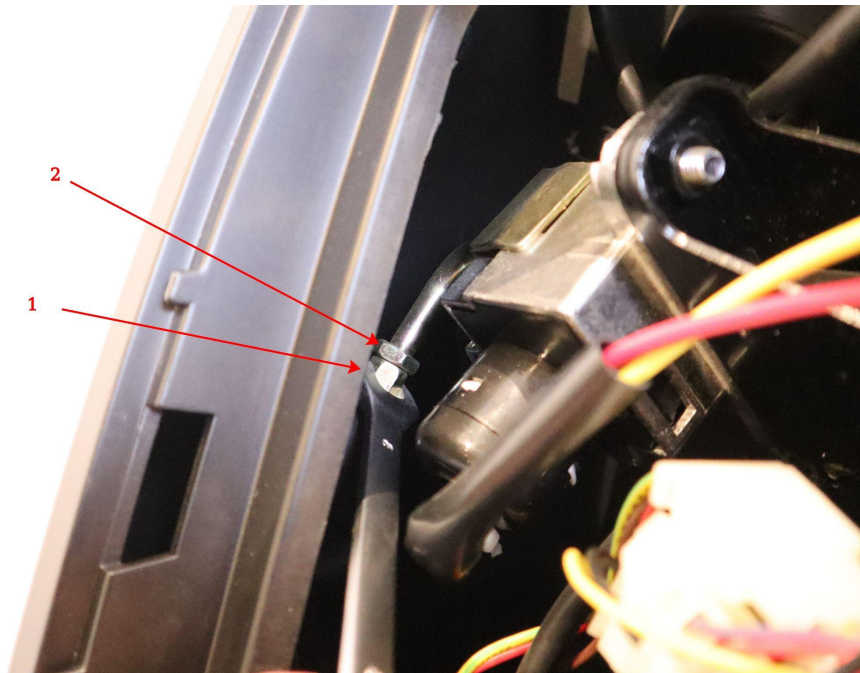

2. Adjust wire tension (1)
3. Secure tension nut (2)
4. Remount plastic cover