

**TOTAL**  *Chef*

Waffle Baker  
Open Griddle  
Sandwich Maker  
Grill Machine

**Koolatron®**



**4-in-1**  
Multipurpose  
**Grill**

**Owner's Manual**

This Koolatron appliance has been engineered and manufactured to give you dependable operation. Please carefully read this owner's manual before you start to operate your new **Total Chef 4-in-1 Grill**. It contains important information that you will need to become familiar with all of its features and to give you optimal performance and enjoyable cooking for years to come. Please keep this manual on file for future reference.

## Important safeguards:


- 1) Read all instructions completely before using the appliance.
- 2) This appliance becomes hot when in use. Use caution to reduce the risk of injury.
- 3) Do not touch hot surfaces. Always use handles with care. Hot pads or mittens are recommended.
- 4) To reduce the risk of electrical shock, do not immerse appliance, cord or plug in water or any other liquid. See instructions for cleaning.
- 5) This appliance is not for use by children.
- 6) Do not leave appliance unattended when plugged in.
- 7) When using this appliance, provide 4 to 6 inches of air space above, behind and on both sides for air circulation. Do not use on surfaces where heat may be a problem.
- 8) Unplug from mains when not in use and before cleaning. Allow to cool before putting on or taking off parts and before moving or cleaning your appliance.
- 9) To reduce the risk of fire or electrical shock, do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts.
- 10) Do not operate unless cooking plates are properly installed in both housings.
- 11) If the supply cord is damaged, it must be replaced by the manufacturer or a Koolatron Master Service Centre or a similarly qualified person in order to avoid a hazard.
- 12) Do not use any attachments or accessories not recommended by Koolatron. The use of such items may be hazardous.
- 13) Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
- 14) Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near flammable material.
- 15) Do not use outdoors or while standing in a damp area.
- 16) Do not use appliance for other than intended use.
- 17) Always allow the appliance to cool down completely before putting it away and never wind the cord around the appliance while it is still hot.
- 18) Never move the unit when it contains hot oil, liquids, or hot foods.

**IMPORTANT: Always use oven mittens to protect hands when opening a hot cooking plate, as escaping steam heat may cause burning.**

## Consumer safety information:

### Electrical cord

A short power cord is provided to reduce the hazards of becoming entangled in, or tripping over a longer cord. Using an extension cord is not recommended. If an extension cord is used it must be a VDE Listed Cord of an equal or greater rating than the rating of the appliance. Care must be taken to arrange the extension cord so it will not drape over countertop or tabletop where it can be pulled on by children or tripped over. If the appliance is of the grounded type, the extension cord should be of the same type. Do not leave this appliance unattended while in use.

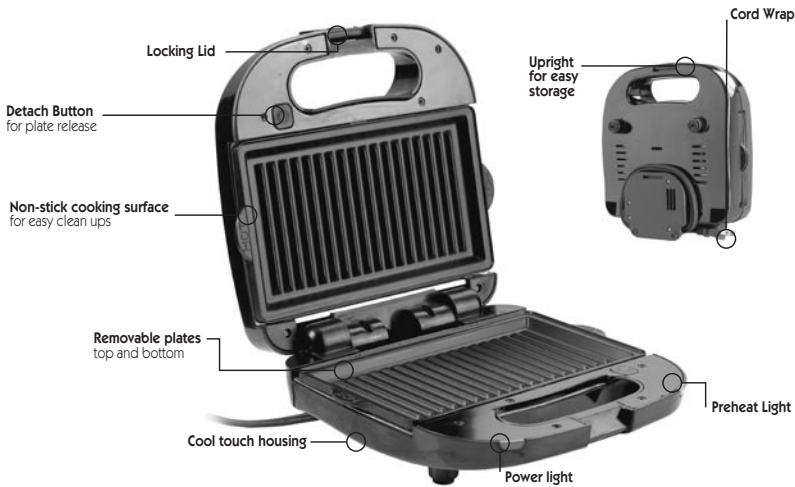

## Instructions for use:

### Before using your appliance



- 1) Cooking plates should be washed in warm soapy water, rinsed, and dried thoroughly before using.
- 2) You may also wash them in your dishwasher, as all cooking plates are totally dishwasher safe.
- 3) To remove or change cooking plates, place unit in the open position.
- 4) Press the plate release button. This will release the plate for removal and lift the plate up and out.

**CAUTION: Never place appliance housing or cord in water or any other liquid. To reduce the risk of fire or electrical shock, never operate unit unless cooking plates are securely snapped in place.**

## Inserting the cooking plates




- 1) Make sure the unit is unplugged when inserting or removing desired cooking plates.
- 2) To insert desired cooking plates, insert tabs on cooking plate into slots on unit.
- 3) Push down and snap the other side of the cooking plate into place. Repeat the same for second cooking plate.

## Cooking



- 1) Make sure the unit is unplugged from mains. Select desired cooking plates. (see previous page and above for inserting and removing cooking plates).
- 2) Plug into mains, then put power switch in "1" position before using your appliance. When not in use put power switch in "0" position before unplugging from mains.
- 3) Let the appliance preheat until the indicator light goes out, about five minutes.
- 4) Now you're ready to use your **Total Chef 4-in-1 Grill** as a waffle baker, sandwich maker, grill or griddle! You can lightly oil your cooking plates before using. When cooking is completed, unplug and let the unit cool down before removing or cleaning cooking plates.

## Care and cleaning

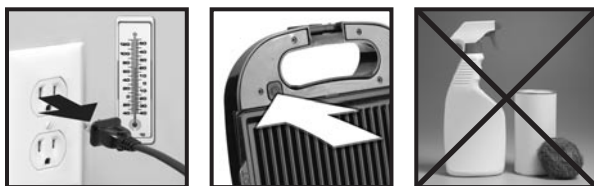

**WARNING: To reduce the risk of burns to hands and fingers, always allow the unit to cool down before removing cooking plates.**

- 1) Make sure unit is unplugged from mains and has cooled down.
- 2) Press release button to remove cooking plates. Wash plates in warm soapy water, and dry. You may also place them in your dishwasher.
- 3) If grease has dripped into the area under the cooking plates, clean with a damp cloth, and dry. Never use abrasive pads or cleaners on cooking plates or any other part of your **Total Chef 4-in-1 Grill**.

# Cooking times and recipes

## WAFFLE BAKER

### *Basic Waffle Mix:*

1 cup flour  
3 teaspoons baking powder  
1/4 teaspoon salt  
1 tablespoon sugar  
2-3 eggs (separated)  
1 cup milk  
4 tablespoons oil

*Whisk together flour, baking powder, salt, and sugar. Beat egg whites separately until stiff. Combine milk and egg yolks, then add to flour mixture. Stir mixture until smooth. Add oil to mixture and mix well. Fold egg white into mixture. Pour about 3/4 cup of batter into the middle of the cooking plate. Cook for 5 to 7 minutes, or until golden brown in color. Makes 8 to 10 waffles.*

Waffles/pancakes: You may use packaged waffle and pancake mixes. These should be done in about 5 minutes. Home made waffles or pancakes will take a few minutes more.

## SANDWICH MAKER

### *Basic Cheese or Meat Sandwich Pockets:*

To make a sandwich on your **4-in-1 Grill**, just lightly butter two slices of bread for each pocket. Place buttered side down on bottom sandwich plate. Fill with cheese and/or meat of your choice. Lay second piece of bread, buttered side up. Repeat for second sandwich. Close and lock lid. Cook about 3 to 5 minutes or until desired. Be careful the filling in your sandwich will be very hot; you may want to let it cool before eating it.

## GRILL

FOOD	SIZE	MINUTES
Steak	approx. 3 oz.	2 to 10 to desired
Burgers	approx. 3 oz. patties	2 to 10 to desired
Frankfurters	standard	3 to 6
Chicken Breast Fillets	1/2 inch thick	4 to 8
Pork Loin Chop	1/2 to 1 inch thick	4 to 12
Fish	standard	2 to 8
Shrimp	any	2 to 8

## GRIDDLE

FOOD	MINUTES	COOKING SUGGESTIONS
Eggs	3 to 5	Use butter or oil on cooking surfaces if desired.
French Toast	5 to 10	Use butter or oil on cooking surfaces. Turn when golden brown.
Bacon	8 to 15	Cook and turn.

# Warranty

This KOOLATRON product is warranted to the retail consumer for 1 year from date of retail purchase, against defects in material and workmanship.

## **WHAT IS COVERED:**

- *Replacement parts and labour.*
- *Transportation charges to customer for the repaired product.*

## **WHAT IS NOT COVERED:**

- *Batteries if included in product.*
- *Commercial or industrial use of this product.*
- *Damage caused by abuse, accident, misuse, or neglect.*
- *Transportation of the unit or component from the customer to Koolatron.*

## **IMPLIED WARRANTIES:**

Any implied warranties, including the implied warranty of merchantability are also limited to duration of 1 year from the date of retail purchase.

## **WARRANTY REGISTRATION:**

Register on-line at [www.koolatron.com](http://www.koolatron.com) AND keep the original, dated, sales receipt with this manual.

## **WARRANTY AND SERVICE PROCEDURE:**

If you have a problem with your **Total Chef 4 in 1 Multipurpose Grill**, or you require replacement parts, please telephone the following number for assistance:

**44-1634-297-383**

The Service Advisors will advise you on the best course of action. Koolatron has Master Service Centre at:

### **Koolatron U.K.**

Unit C3, Knights Park  
Knight Road, Strood  
Rochester Kent  
ME2 2LS U.K.  
44-1634-297-383

A Koolatron Master Service Centre must perform all warranty work. Service after warranty may be obtained at a Master Service Centre or at an authorized service dealer. A complete listing will be mailed on request. Purchase Receipt is required to establish warranty eligibility.