



## Sky Trainer 182 **OPERATING MANUAL**


Please visit both our <u>Facebook</u> fanpage and our homepage for updated product information





Email:info@fmsmodel.com Http://www.fmsmodel.com

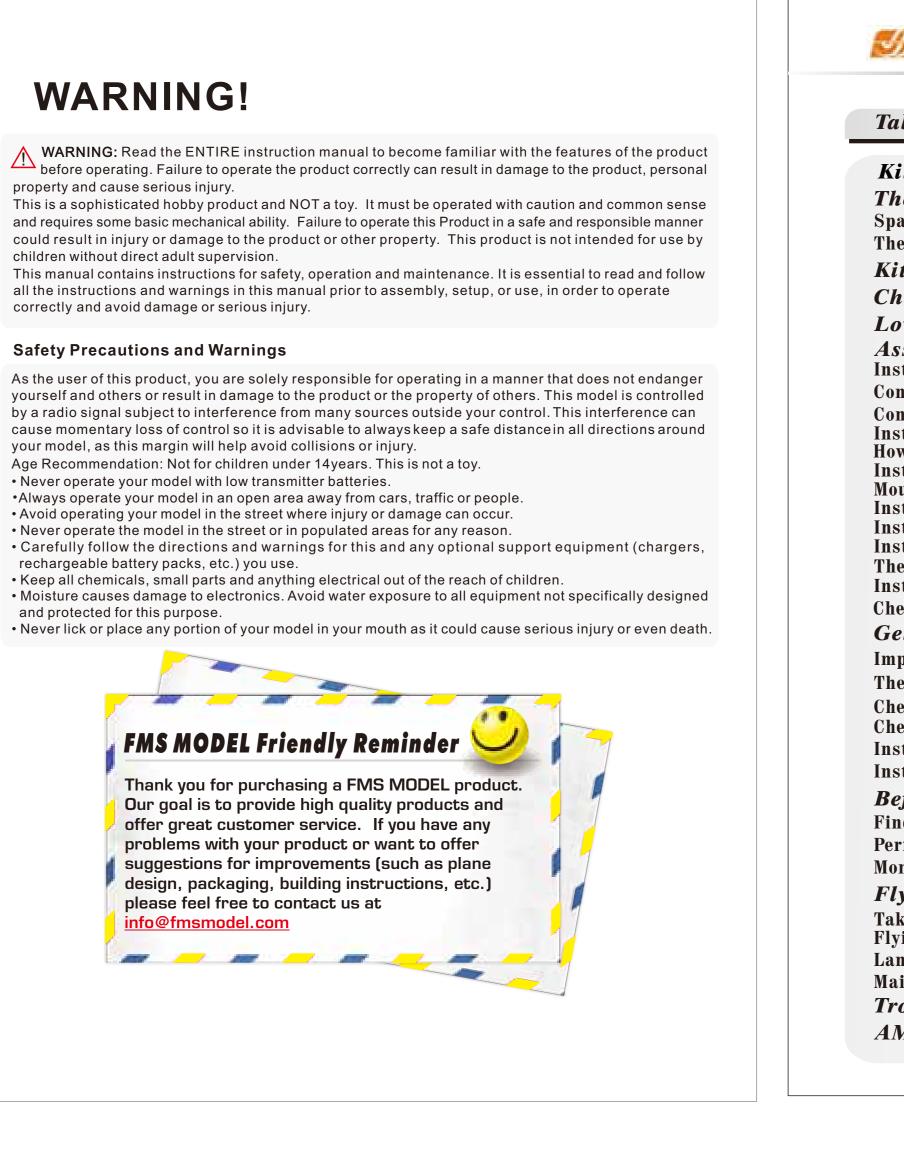


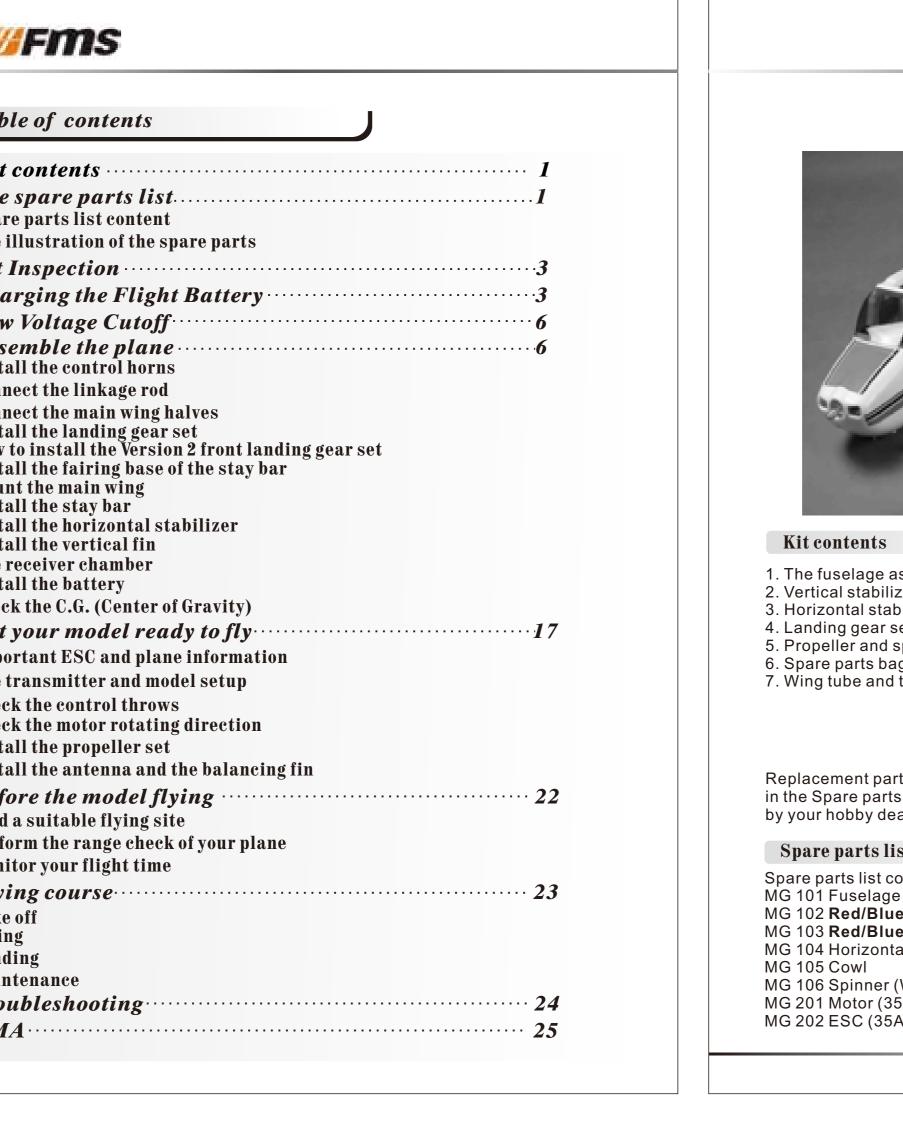


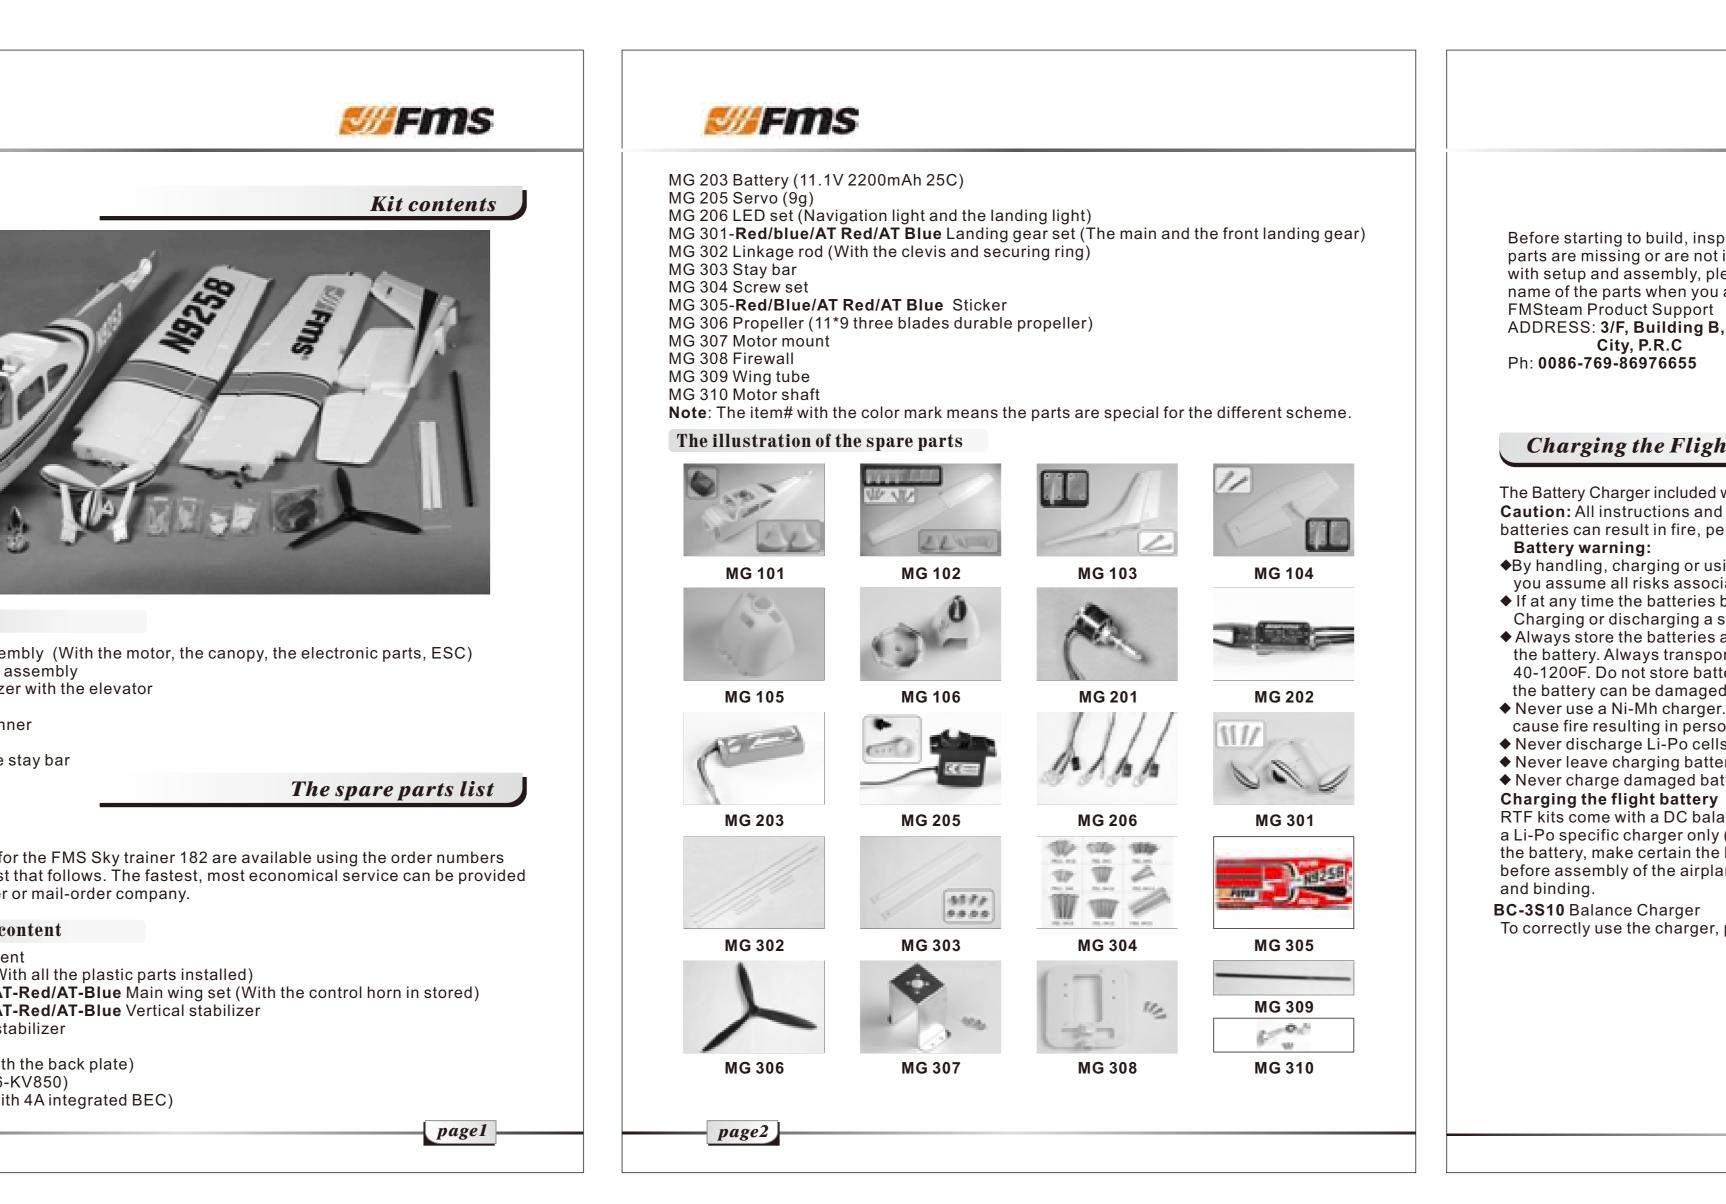


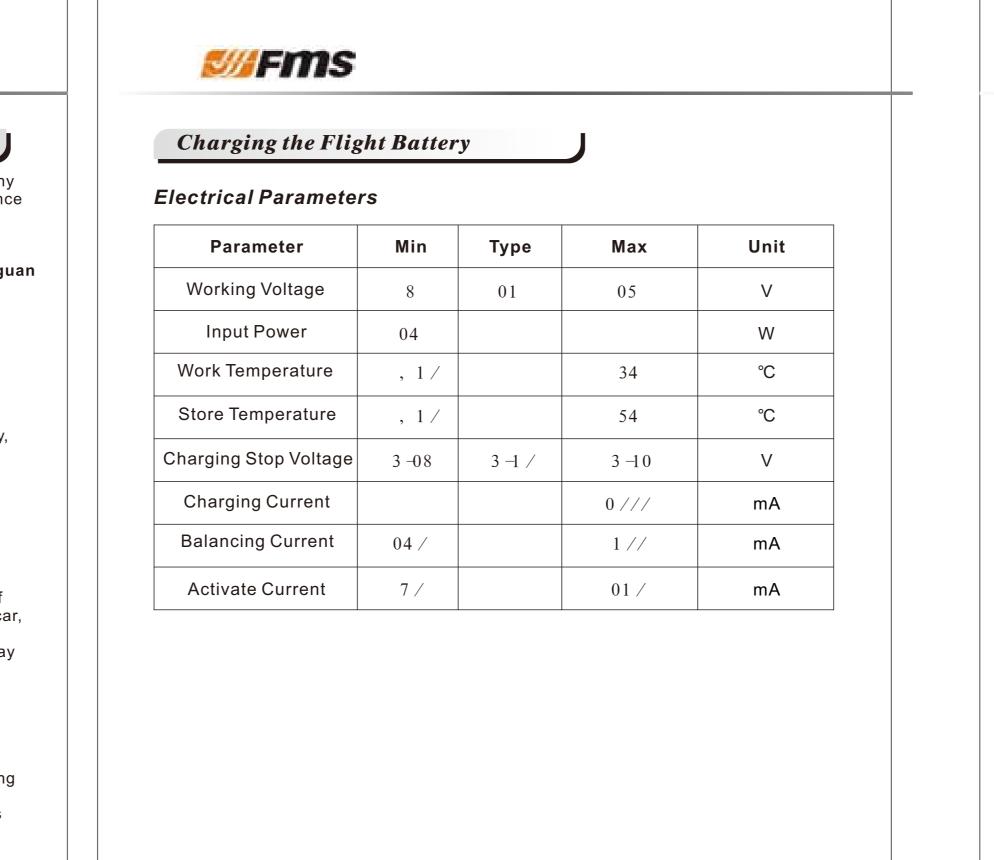


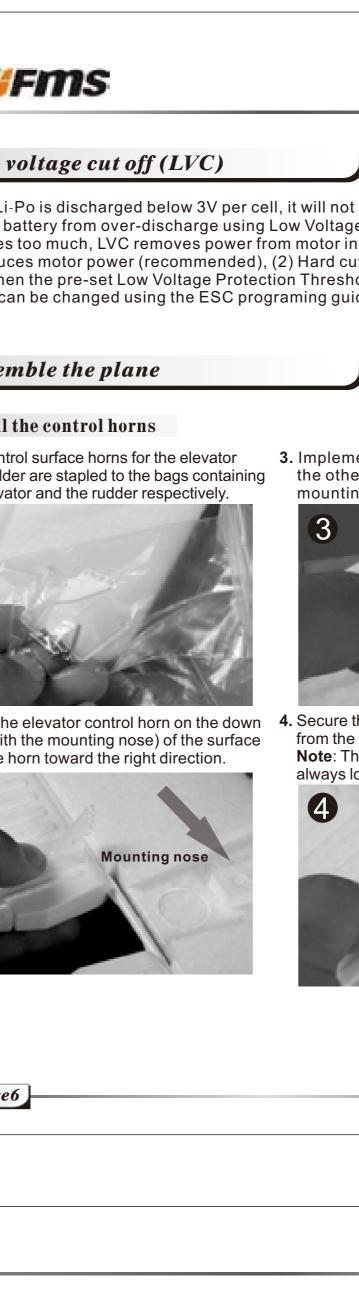


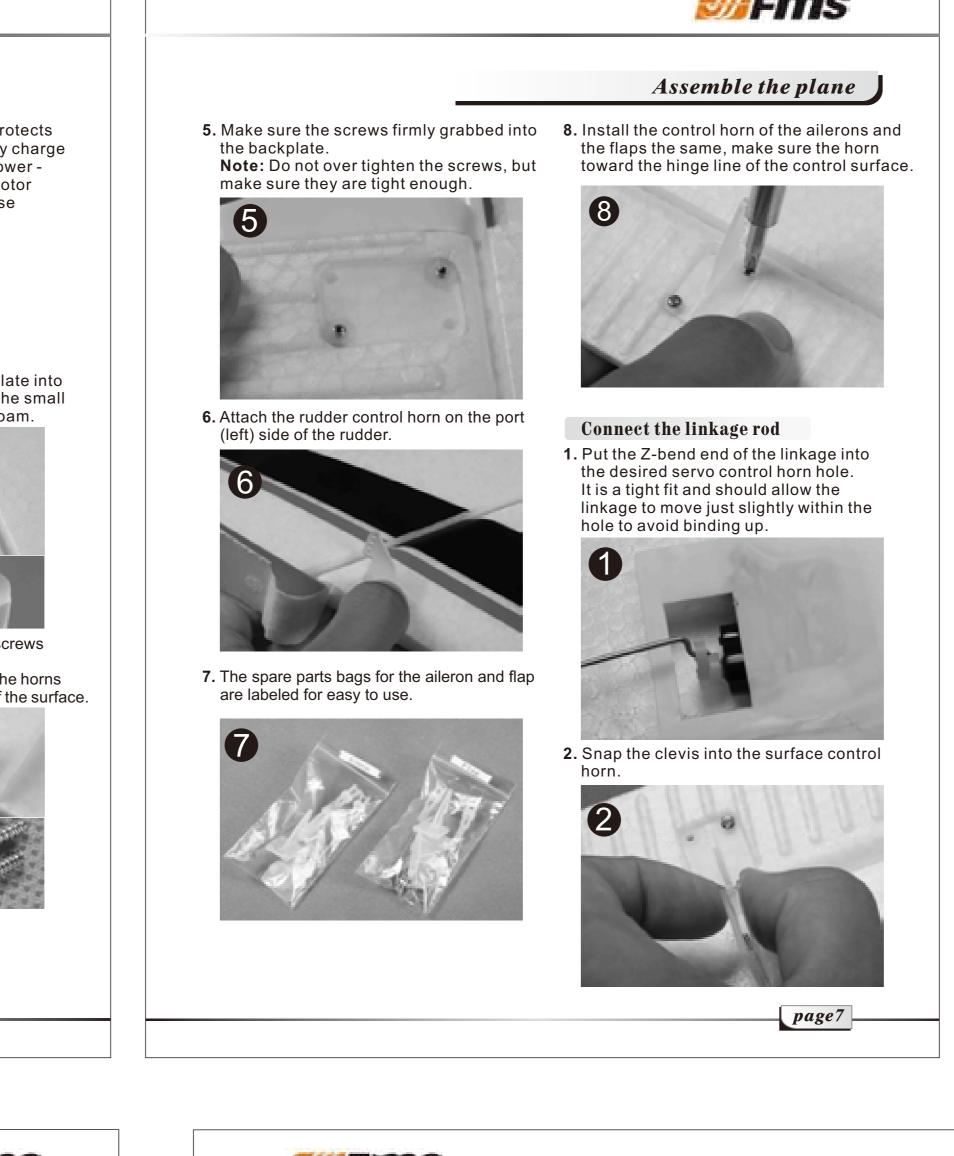


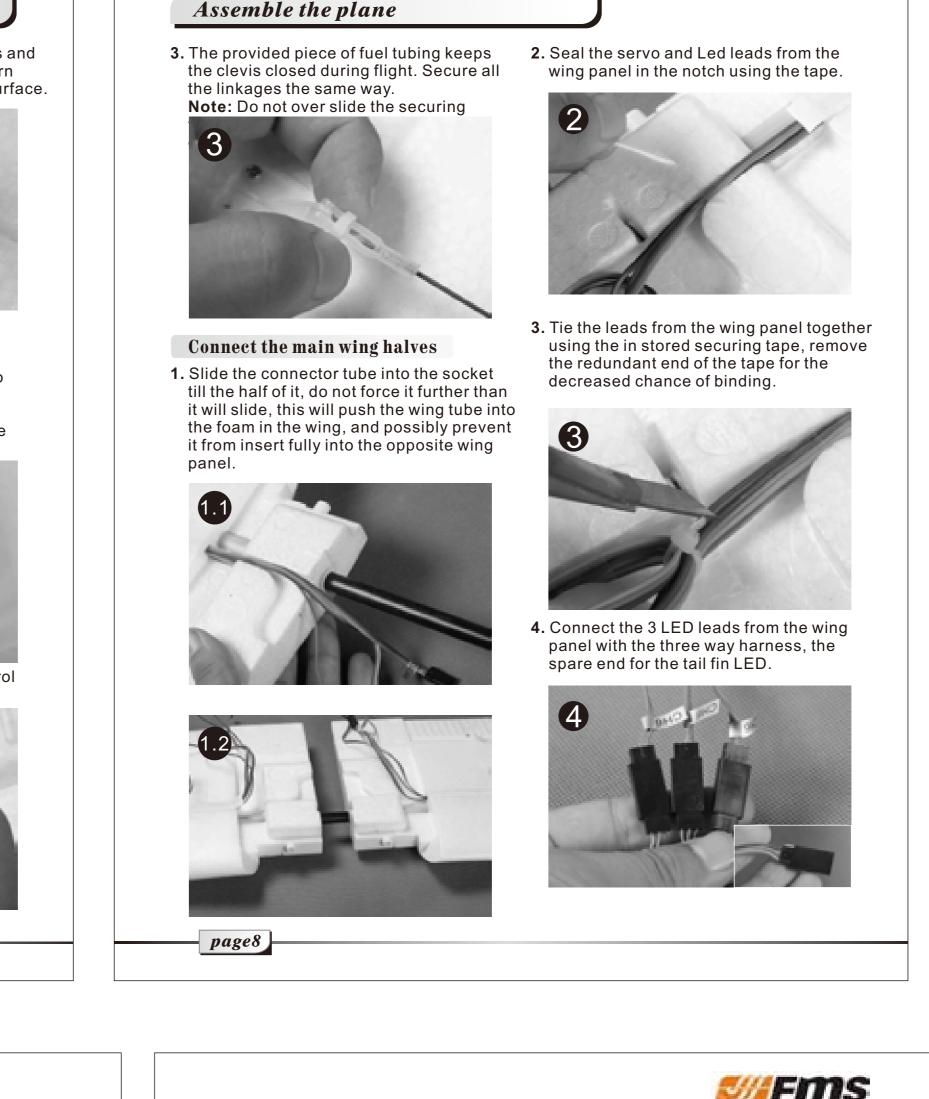


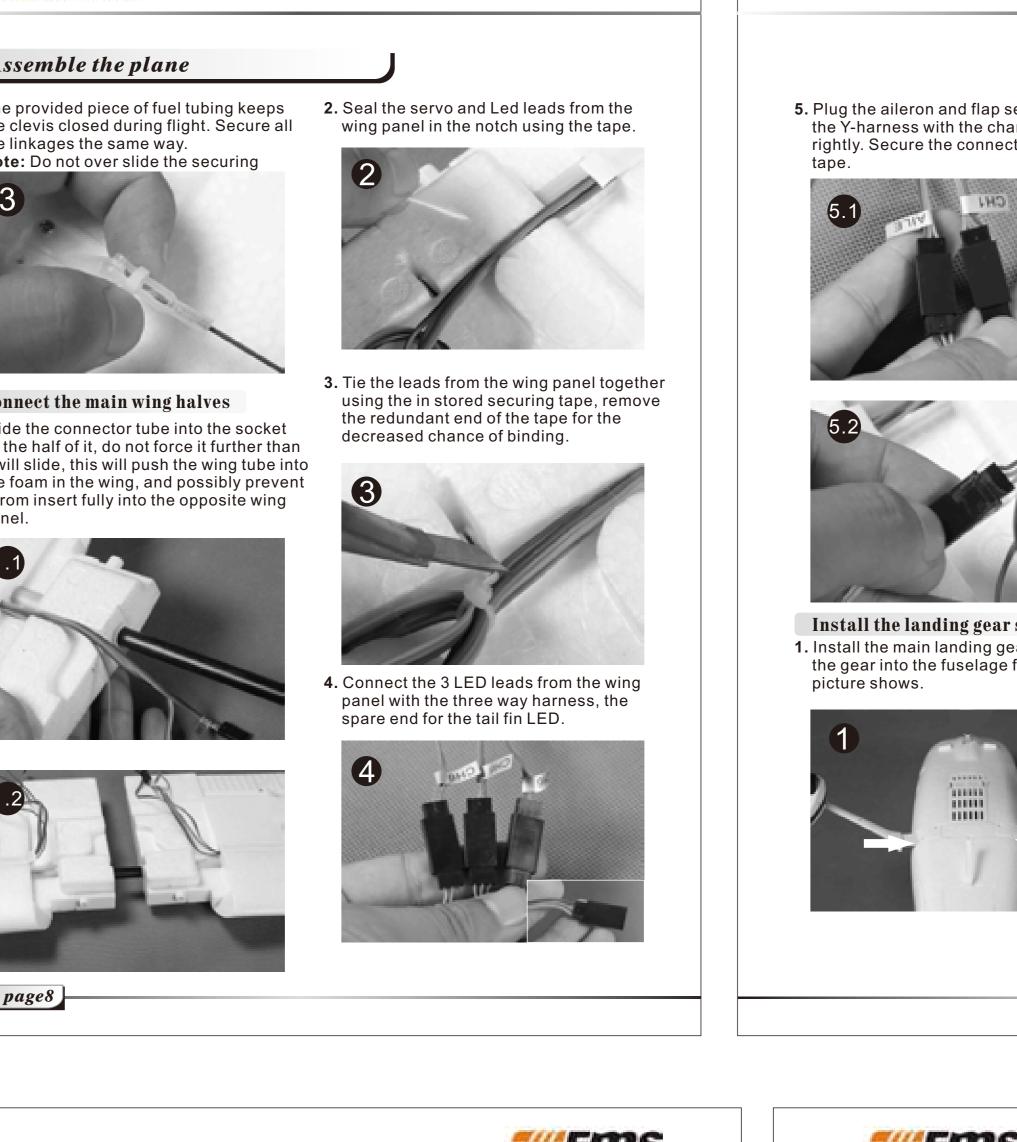


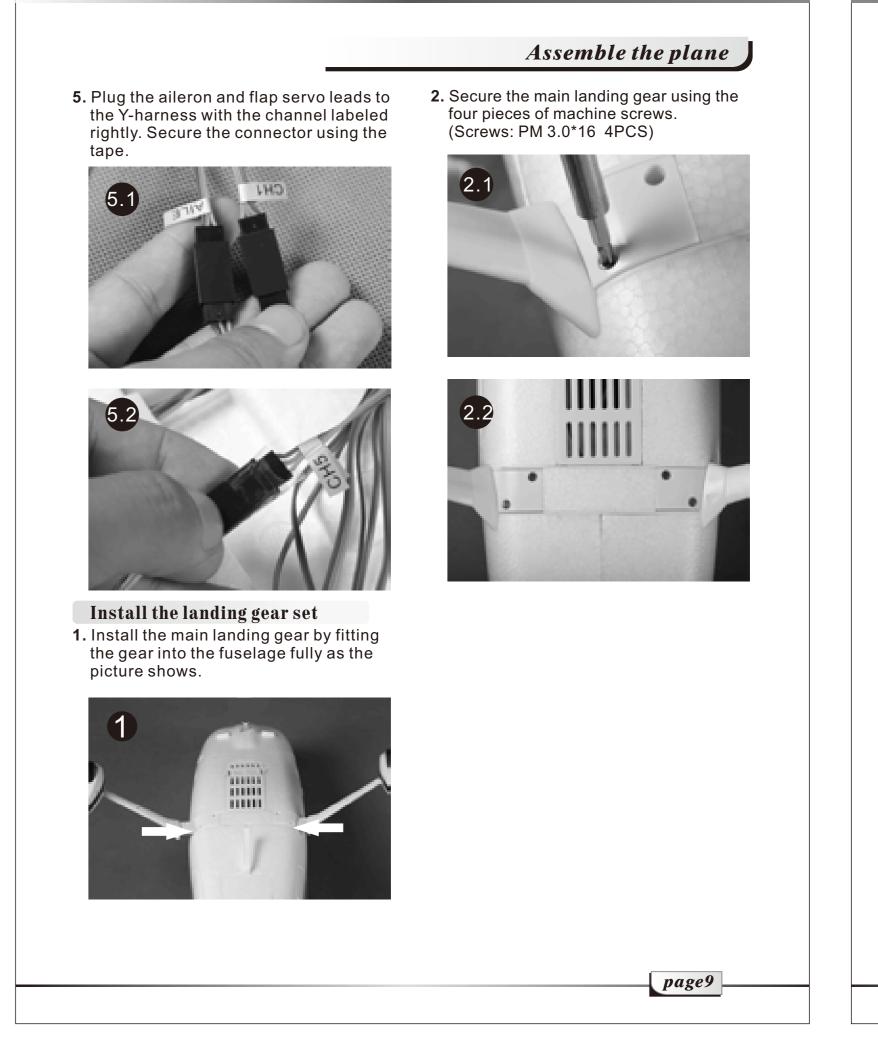


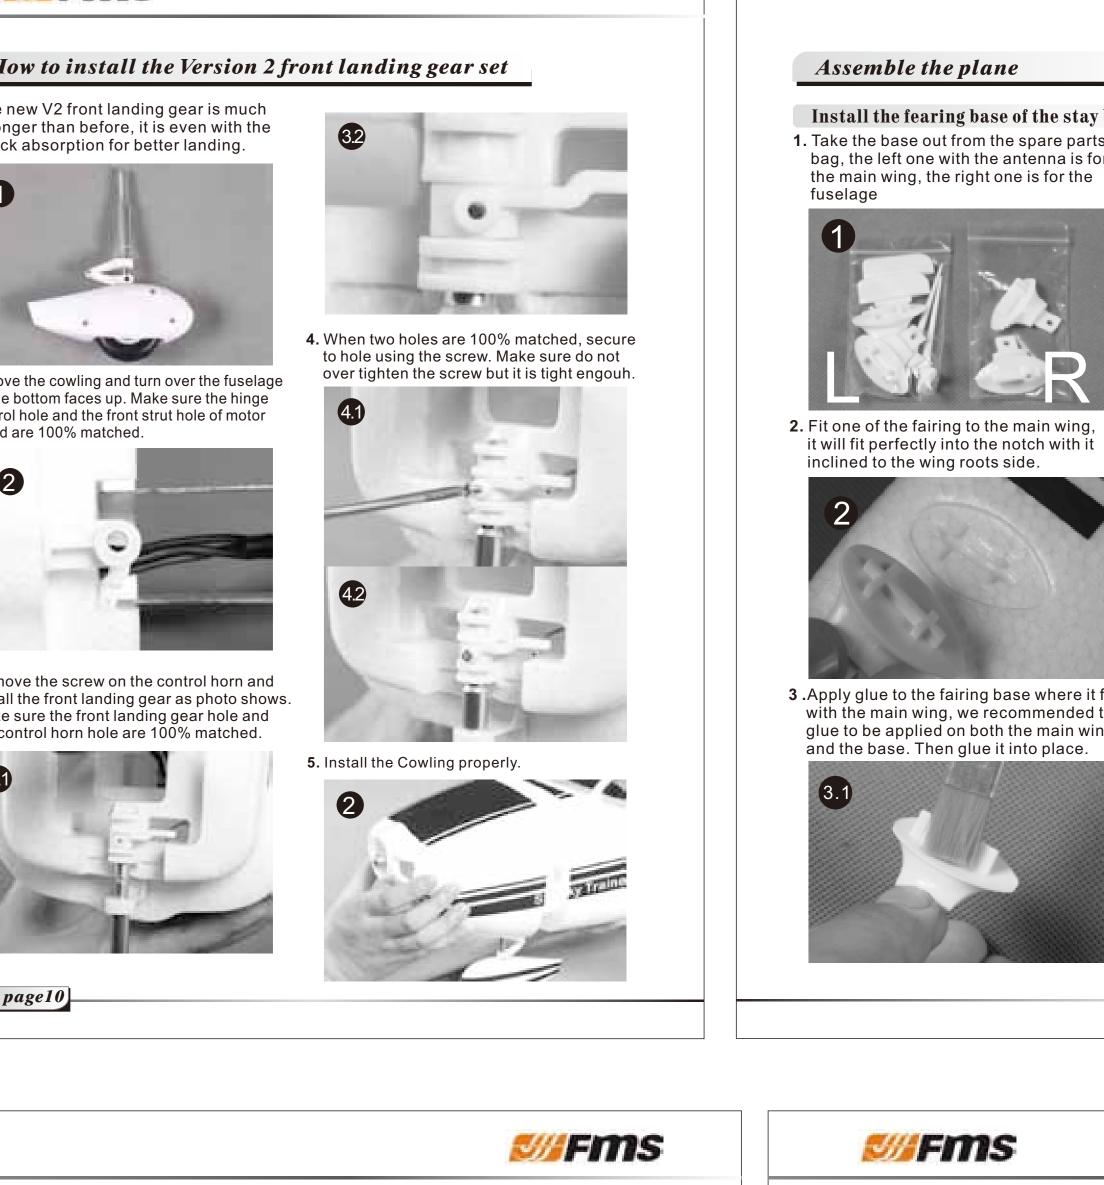


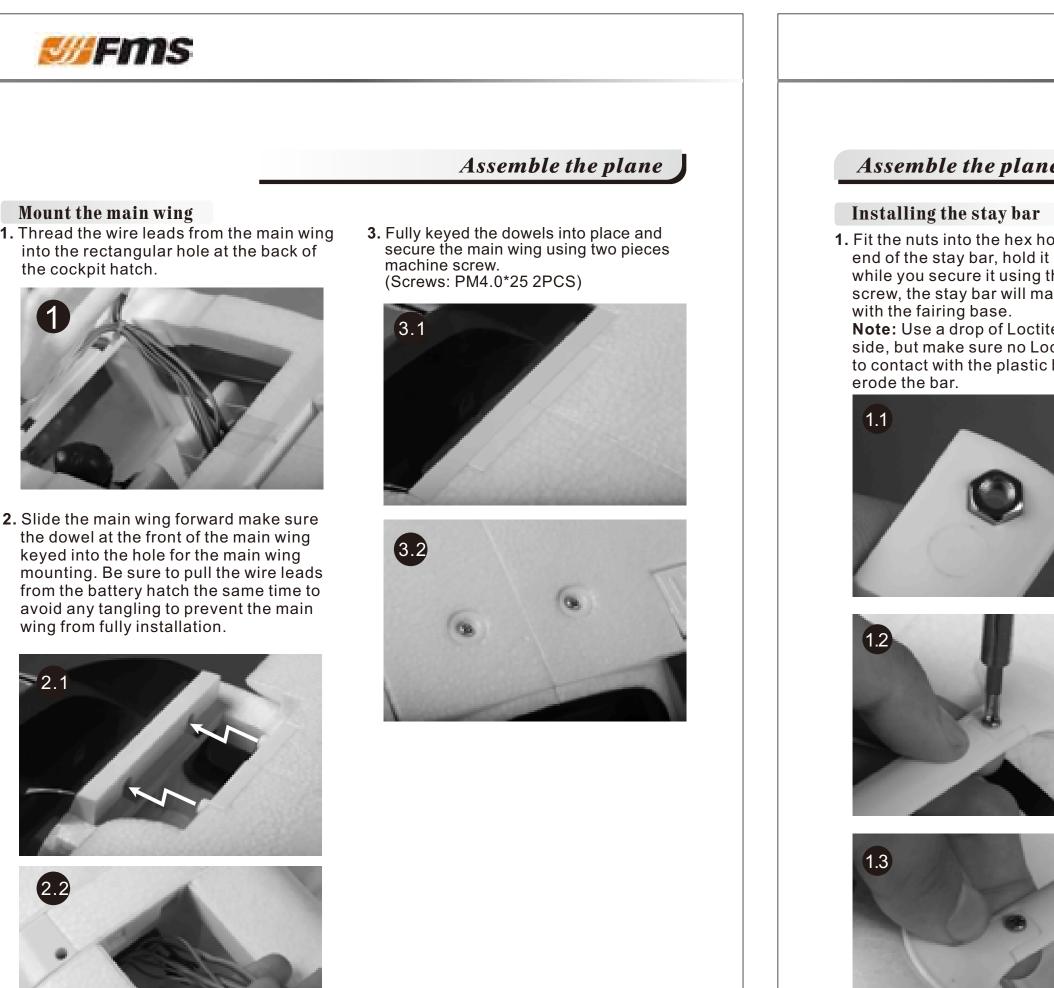


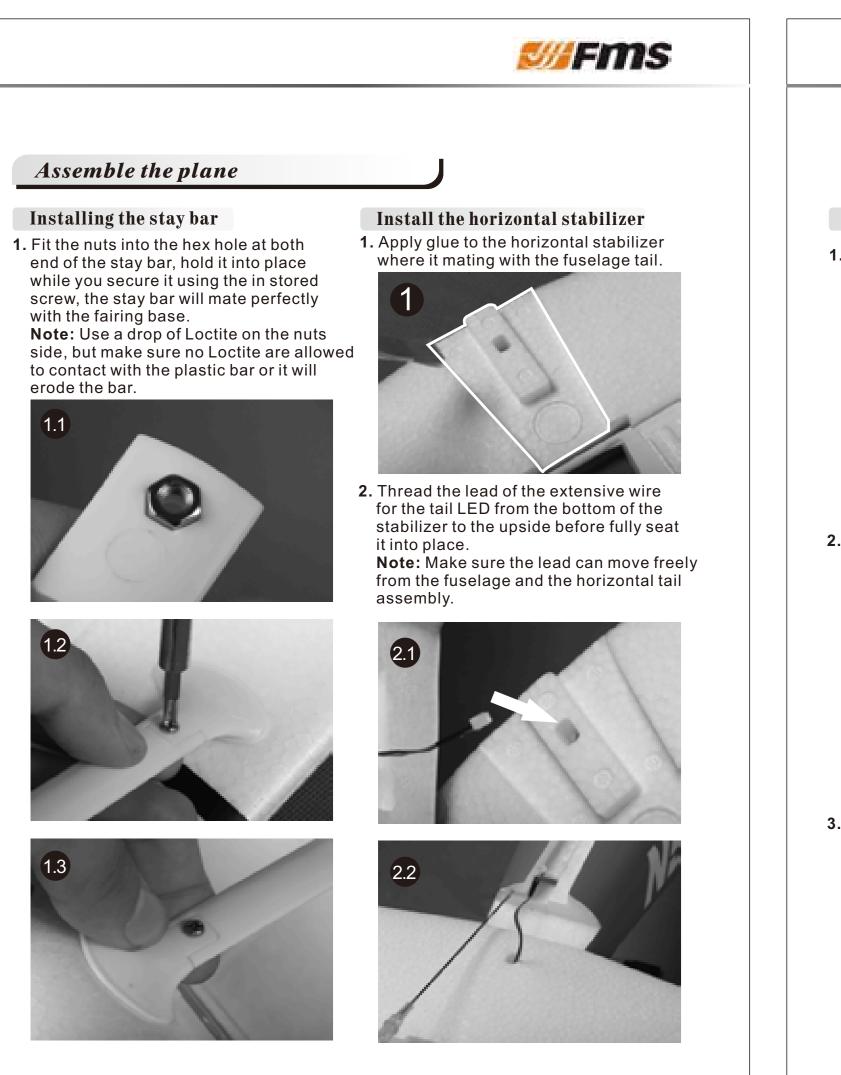


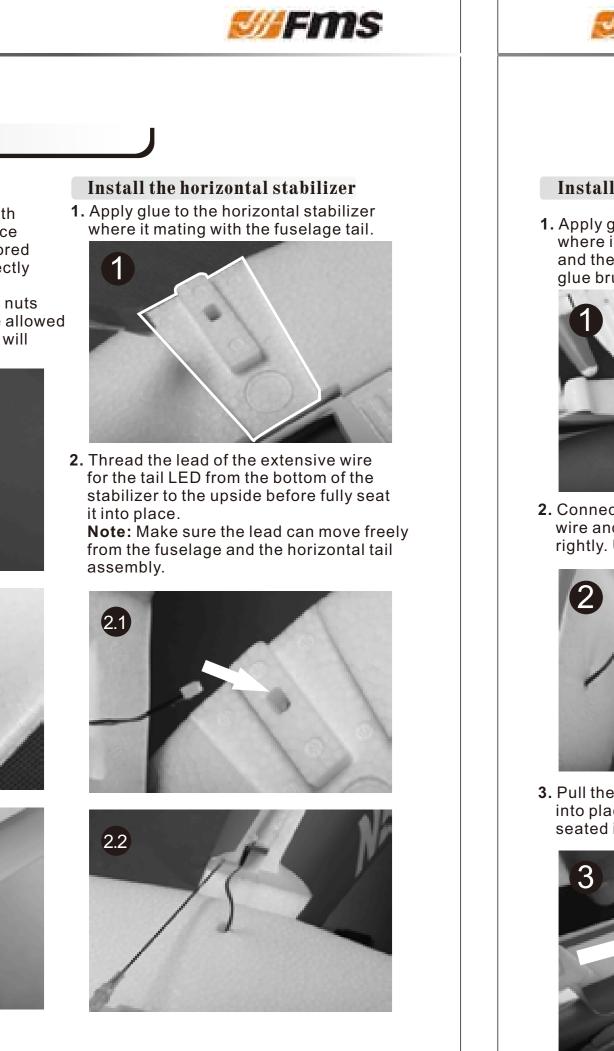

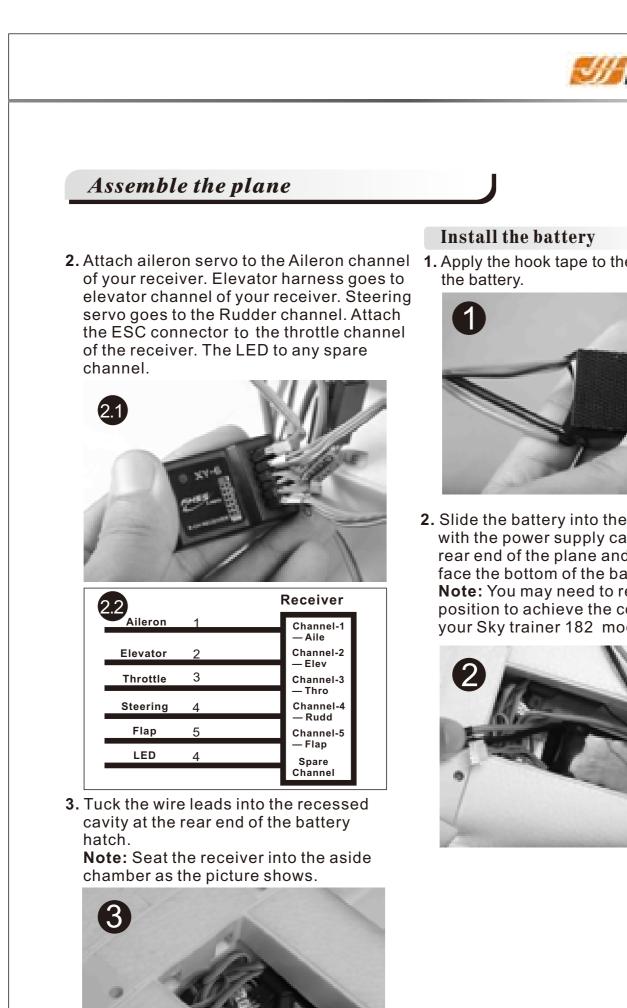

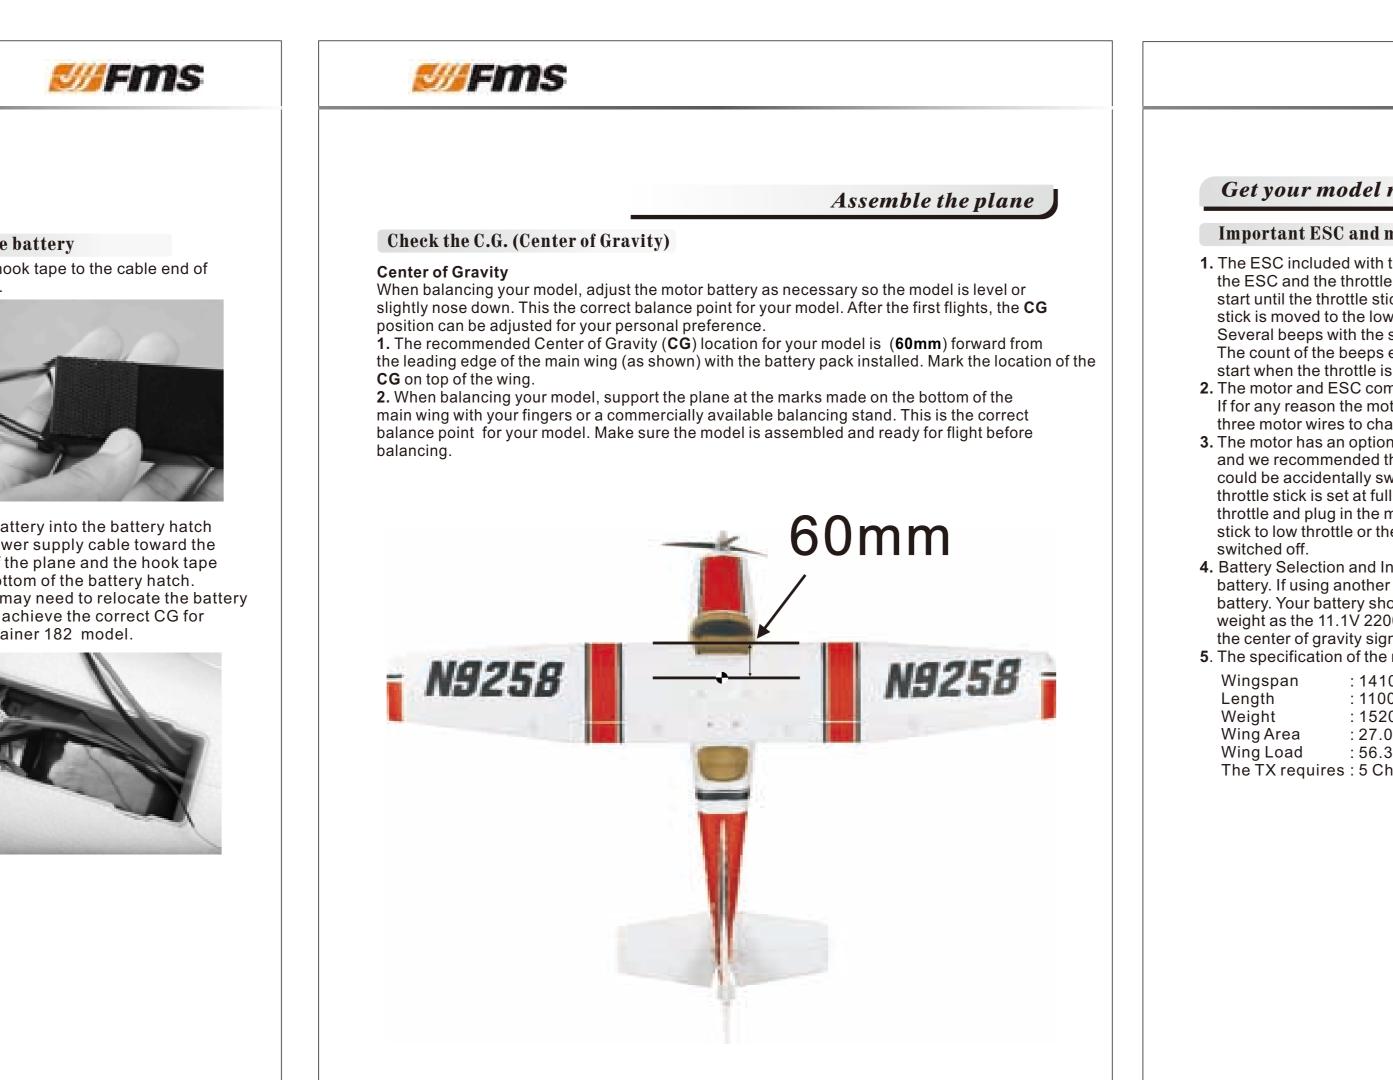

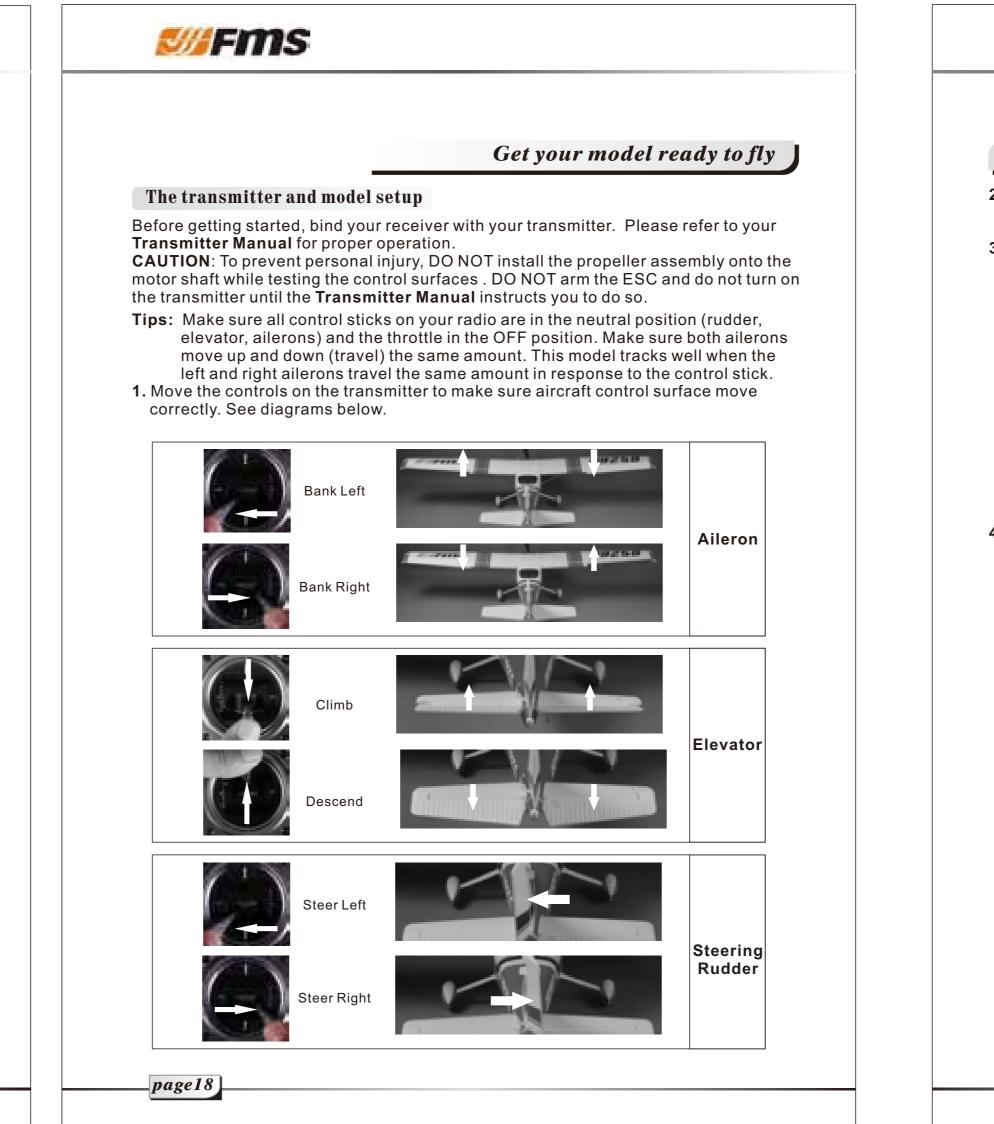

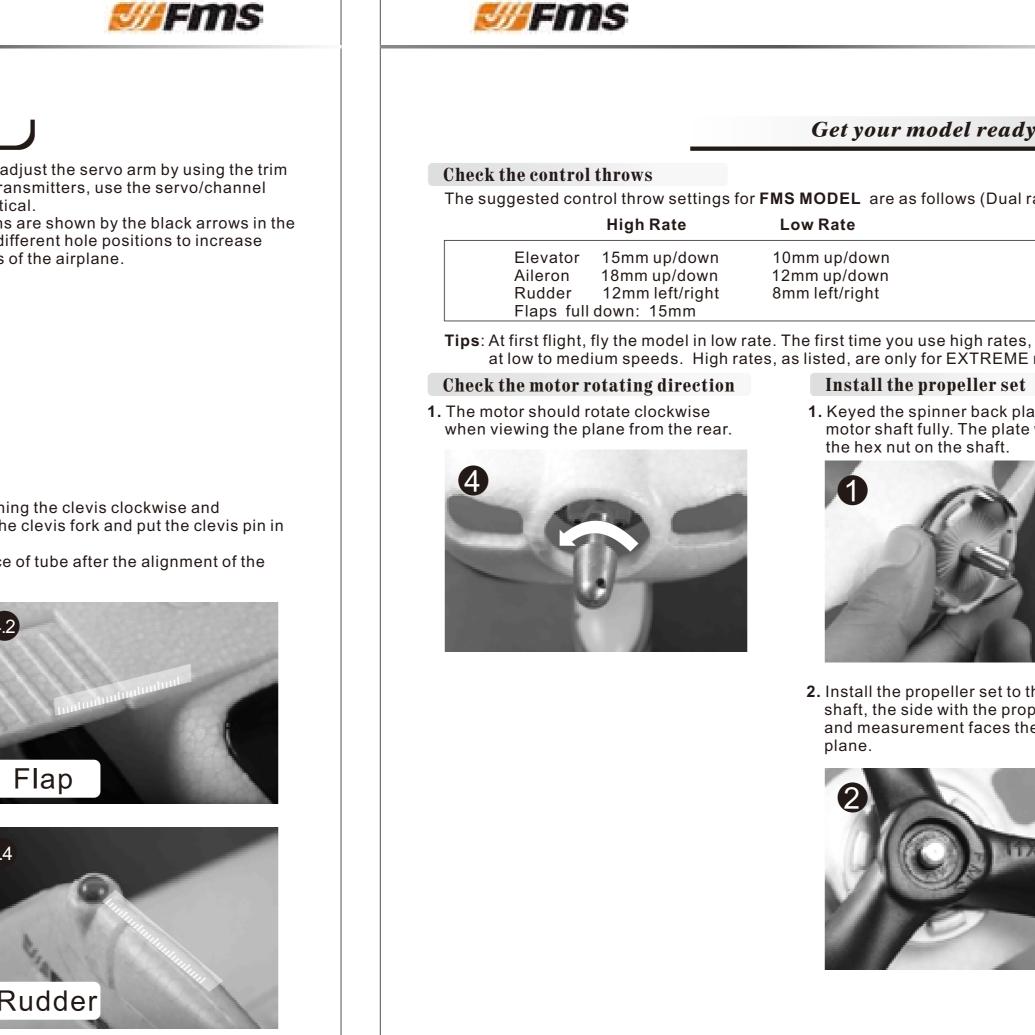

packs at the same time), then the Charge LED will flicker (1Hz) and start charging.

When the Charge LED stops flickering, charging is complete, and the batteries can be

If all voltage of the installed battery pack is higher than 4.18V, charging will not start and the

