



UltraTemp Toaster Oven

Happiness is Homemade.



MANUAL

• MODEL: MT-175 • POWER SUPPLY: 120V~60Hz • POWER CONSUME: 1100W

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
BE SURE TO SAVE THIS BOOKLET FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following.

- 1** Read all instructions.
- 2** Do not touch surfaces that may be hot. Use handles or knobs provided.
- 3** To protect against electrical shock do not immerse cord, plugs, portable appliances in water or other liquid.
- 4** Close supervision is necessary when any appliance is used by or near children.
- 5** Remove plug from outlet when the appliance is not in use, before putting on or taking off parts, and before cleaning. Allow to cool before handling.
- 6** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- 7** The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 8** Do not use outdoors.
- 9** Do not let cord hang over edge of table or counter or touch hot surfaces.
- 10** Do not place on or near a hot gas or electric burner or in a heated oven.
- 11** To disconnect, turn the control to OFF, then remove plug from wall outlet.
- 12** Do not use appliance for other than intended use.
- 13** Do not assume you know how to operate all parts of the toaster oven. Some features may work differently from those you are accustomed to.
- 14** Oversized foods or utensils must not be inserted in the appliance as they may create fire or electrical hazard.
- 15** A fire may occur if appliance is covered or touching flammable materials, including curtains, draperies, walls etc., when in operation. Do not store any item on top of the appliance when in operation.
- 16** Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, as they may creating electrical shock hazard.
- 17** Before using this appliance, move it 10 to 15cm (4 to 6 inches) away from the wall or any object on the counter top. Remove any object that may have been placed on top of the appliance. Do not use on surfaces where heat may cause a problem.

- 18 Extreme caution should be exercised when using containers constructed of other than metal or glass.
- 19 Replace cardboard lids on food containers with aluminum foil, cardboard lids may burn. When using aluminum foil, keep foil from touching heating elements.
- 20 Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- 21 Do not place any of the following materials in the oven: paper, cardboard, plastic, etc.
- 22 Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- 23 In order to turn the appliance off, press the power button in the same way as for manual use even when you use the automatic cooking menu.
- 24 Do not use water on grease fires; smother fire or use dry chemical or foam type extinguisher.
- 25 Do not put food too close to the heating elements to prevent smoking, spattering, and the possibility of fats on foods catching fire.
- 26 Always make sure the toaster oven is turned off before opening the oven door.
- 27 Always use a pot holder or oven mitt to install or remove the oven tray or any cooking container.
- 28 Do not allow food to contact heater.
- 29 Keep interior of the toaster oven and crumb tray clean.

SAVE THESE INSTRUCTIONS

- A. A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- B. Extension cords are available and may be used if care is exercised in their use.
- C. If an extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it could be pulled on by children or tripped over unintentionally.

This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Safety precautions

Please observe these precautions fully.

In order to prevent accidents or injuries to the user, other people, and damage to property, please follow the instructions below.


■ The following chart indicates the degree of damage caused by improper operation.

 WARNING: Indicates serious injury or death.	 CAUTION: Indicates risk of injury or property damage.
---	--

■ The symbols are classified and explained as follows.

 This symbol indicates prohibition.	 This symbol indicates requirement that must be followed.
---	--

WARNING

-  ■ **Do not use the toaster oven near flammable materials such as a curtain.**
There is danger of fire hazard.
- **Do not put oil into the oven tray.**
There is danger of fire hazard.
- **Do not place the toaster oven in water. Avoid water splash.**
There is danger of short circuit or an electric shock.
- **Never try to disassemble, repair or remodel the toaster oven.**
There is danger of fire or malfunction, causing injury.
- For repair, consult the store where you purchased this product.
- **Do not allow children to use the toaster oven. Do not use the toaster oven within the reach of children.**
There is danger of children getting burnt, electric shock or injury.
- **Never do anything that might cause damage to the cord or power plug.**
Do not modify it, place hot objects near it, bend it, twist it, stretch it, place heavy objects on it, or bundle it together.
If the unit is used when damaged, electrical short circuit or fire may result.
- If in need of repair, please contact an authorized Service center.
- **Do not connect or disconnect the power plug with wet hands.**
This may result in electric shock.

WARNING



- **Make sure the power plug is correctly inserted into the wall outlet.**

If the plug is inserted improperly, it may cause an electric shock or generate heat resulting in fire.

- Do not use a damaged plug or a connection in a loose outlet.

- **Clean dust from the power plug regularly.**

A build-up of dust on the plug will attract condensation, which could cause cable damage resulting in fire.

- Remove the plug and clean with a dry cloth.

- **Use a single outlet that matches the power rating of the unit.**

Heat generated when plugging in multiple appliances into one outlet may result in fire.

- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.**

(It may cause burns, injury or electric shock.)

CAUTION



- **Do not broil raw fish or meat directly.**

There is a chance the oil will catch fire.

- When grilling fish or meat, wrap in foil. (See page 12.)

- **Do not leave the toaster oven unattended, when it is in use.**

There is a chance the food will catch fire.

- When you need to leave, make sure to turn off the power button.

- In particular, when baking something that is apt to easily catch fire, do not leave the toaster oven unattended. Watch the progress of cooking.

- **Do not put flammable materials on / under the toaster oven.**

There is danger of smoking, fire or burns.

- **Do not use this unit except for cooking.**

There is danger of fire hazard.

- **Do not bake bread with butter or jam.**

There is a chance the bread will catch fire.

- **Do not heat more than necessary.**

Overheating will cause the food to catch fire.

- Set the automatic cooking keys and timer correctly.

⚠ CAUTION



▪ Always use with a crumb tray.

There is danger of fire or injury hazard.

- Make sure the crumb tray is clean and set correctly when using the appliance.

▪ Always clean the unit after use.

- Otherwise it may cause smoke or fire.

▪ If the food you are cooking emits smoke or catches fire, turn off the power button, then disconnect the power plug.

- Do not open the door until the flame dies down.

- If air enters the interior of the toaster oven, the flame will become larger.

- Do not pour water on the toaster oven. (The glass window will break.)

▪ When unplugging the unit, pull by the power plug - not the cord.

Electric shock and short circuit may result in fire.

▪ When the unit is not in use, unplug the power plug from the wall outlet.

Deteriorating insulation may result in an electric shock and/or fire.

▪ This appliance is not intended to be operated by means of an external timer or separate remote-control system.

▪ Do not use the toaster oven near wall or cabinet.

The wall or cabinet could become deformed or discolored.

- Keep the toaster oven away from flammable materials (wooden wall or cabinet) as follows:

- One side (right or left) of the toaster oven should be free from any obstacle.

- Keep the toaster oven further away from the wall than indicated above, if the wall or cabinet is coated with vinyl or resin.

▪ Do not place the unit on unstable surfaces or surfaces that can be affected by heat. It may cause fire.

There is danger of a fire hazard.

- Do not place the toaster oven on carpet.

▪ Do not touch the metallic parts or the glass window during or immediately after use.

There is danger of getting burnt.

▪ Do not heat canned or bottled goods directly.

There is danger of burns or injury.

▪ Do not stare at the near-infrared ray heater for a long time.

It could cause injury to your eyes.

▪ Do not use parchment paper or cooking sheet other than for putting it under cake molds.

 
▪ Do not use cake-mix paper molds.

The parchment paper or cooking sheet might burn or catch fire.

▪ Do not use the appliance for any purpose other than those described in these instructions.

There is danger of burns or injury.

- Müeller will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

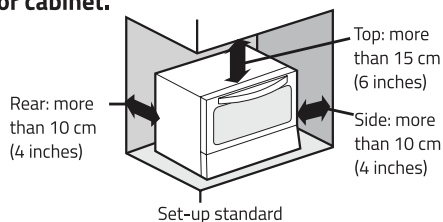


BEFORE FIRST USE

- 1 Remove all accessories and shipping materials packed inside the Oven.
- 2 Wash the Rack and Pan in warm soapy water. Wipe the inside of the Oven with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using.
- 3 Place Oven on a flat counter or other stable surface DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCE.
- 4 Make sure the Crumb Tray is properly installed before using. For the first time only, Set the Temperature Knob to MAX, the function setting on toast and the timer to 15 minutes. This will burn off any oils still on the Oven. NOTE: The oven may smoke during this process. This is normal for a new Oven and will not last more than 10-15 minutes.

NOTE: DO NOT IMMERSE THE BODY OF THE UNIT IN WATER

NAME OF PARTS

 - 1 Door Handle
- 2 Housing
- 3 Temperature Knob
- 4 Function Knob
- 5 Time Knob
- 6 Baking Rack
- 7 Baking Pan

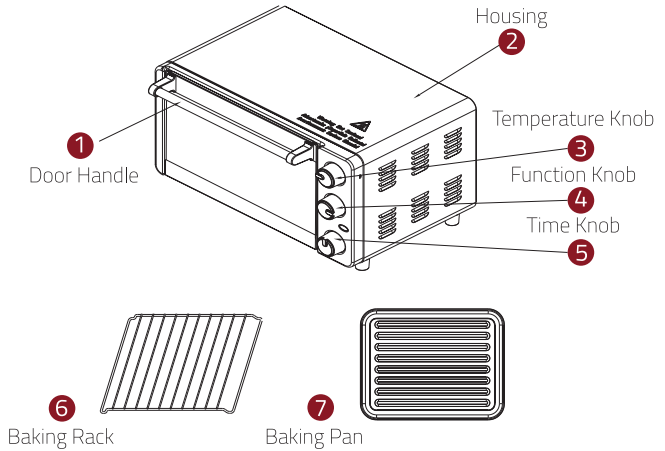

MAIN FEATURES

Fits 4 slice of bread, 9" of pizza

12L cavity size

150 - 450°F temperature

Black coating front door and handle

Painted black housing

Plastic black dial knobs

30 minutes timer with stay on

 
Rated power 1100W

Toast, broil, bake

Red power indicator

Two rack positions


1 Baking pan, 1 baking rack

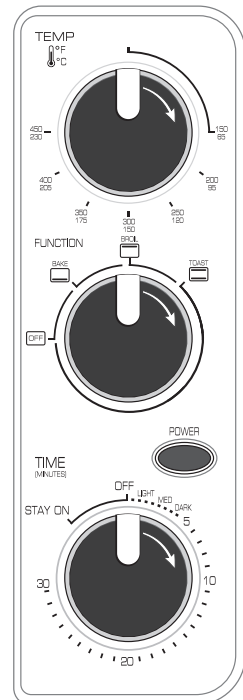

TIME SETTING

0-30 MINUTES: The timer can be set up to 30 minutes. The oven will not turn "stay on" without the timer being set. When the time knob is in the " OFF " position, the oven will not operate. To set the time, turn the knob clockwise to the desired time.

 Indicator light is lit only when time has been set. When the timer has reached the OFF position, a bell sound will be heard. Power supply will be cut off automatically.

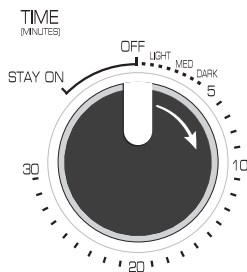


ADJUSTING TIME

Timer can be change during cooking cycle. Just turn the timer knob to the desired time and continue cooking. **NOTE:** To select the cooking time, first rotate the timer knob more than 90 degrees, and then turn the switch back to the time you require.


TEMPERATURE SETTING

 Turn the temperature knob clockwise to the desired temperature setting. The temperature can be set from 65°C to 230°C(150°F to 450°F).

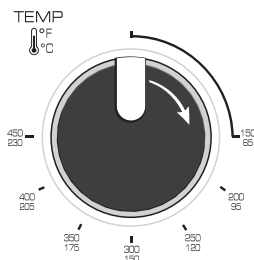




STAY ON

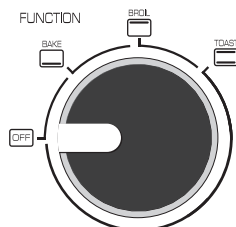 For use the toaster without time control, turn the timer knob to position "STAY ON". In this case, the toaster will work until the timer knob is set to "off" position. **Note:** The food may catch fire if the cooking time is setting too long. Close supervision is necessary during cooking and the timer do not being set too long.



FUNCTION SETTING

This Oven offer three different functions for versatile cooking all in one appliance.

- Bake:  The lower heating elements are working during this function.
- Broil:  The upper heating elements are working during this cycle.
- Toast:  The upper and lower heating elements are working during this function.

HOW TO USE

 
⚠ CAUTION: THE OVEN SURFACES ARE HOT DURING AND AFTER USE GENERAL INSTRUCTIONS

- 1 Place the baking rack in position that will accommodate the height of the food to be cooked.
- 2 Set the food on the rack. Make sure that you always use an ovenproof container in the oven, never use plastic or cardboard containers in the oven
- 3 Never use glass or ceramic pans or lids.
- 4 Do not let juices run to the bottom of the oven.
Use the crumb tray when cooking.
- 5 Set the temperature as suggested by the recipe or as desired.
- 6 Securely shut the door and set the cooking time to begin operating the oven.

BAKE FUNCTION:

Use the bake function for foods such as less tender cuts of meat, soups and stews.


- 1 Place the baking rack to the desired height.
- 2 Set the function knob to "BAKE"
- 3 Select the length of time you want to bake the food.
- 4 Rotate the temperature knob clockwise to desired temperature.
- 5 Continuing baking for desired length of time.
- 6 Check food temperatures before moving to ensure that proper internal temperatures have been reached.
- 7 Always remove food with oven mitts. Food and oven are very hot.

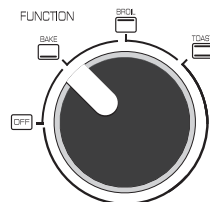

BROIL FUNCTION:

The Broil Function is ideal for fish, beef, steak, vegetables, etc.

 
- 1 Place the baking rack to the desired height.
- 2 Set the Function Knob to "BROIL"
- 3 Select the length of time you want to broil the food.
- 4 Rotate the temperature knob clockwise to desired temperature
- 5 Continuing broiling for desired length of time.
- 6 Check food temperatures before moving to ensure that proper internal temperatures have been reached.
- 7 Always remove food with oven mitts. Food and oven are very hot.

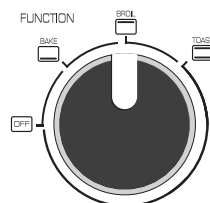

TOAST FUNCTION:

Use the Toast function for foods such as corn, bread, cookies and heating food.

 - 1 Place the baking rack to the desired height.
- 2 Set the Function Knob to "TOAST"
- 3 Rotate the time knob clockwise to desired cooking time.
- 4 Rotate the temperature knob clockwise to desired temperature.
- 5 Continuing toasting for desired length of time.
- 6 Check food temperatures before moving to ensure that proper internal temperatures have been reached.
- 7 Always remove food with oven mitts. Food and oven are very hot.

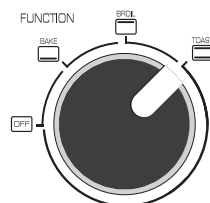

USEFUL TIPS

- 1 Condensation will appear on the GLASS DOOR for some foods and then disappear. This is normal.
- 2 Cook food immediately after defrosting.
- 3 Frozen foods and thick meats will take longer to cook.
- 4 Avoid opening the GLASS DOOR too frequently to prevent heat loss.
- 5 When toasting frozen bread or more than one fresh slice, the toast preference should be at a darker setting than if you were toasting one regular slice.
- 6 When broiling, smoke will likely appear. Removing excess fat prior to broiling can reduce this. Always use the multi-purpose pan.
IMPORTANT: When setting the timer for less than 5 minutes, always rotate the timer past 5 minutes and then rotate back to your chosen time. This will ensure a safe and accurate time.

COOKING TIME AND TEMPERATURE

FOOD	QUANTITY	COOKING INSTRUCTIONS
Frozen Pizza	2-4 Slices	Bake on multi-use pan at 450° F for 15 – 20 minutes.
Bacon	4-6 Strips	Bake on multi-use pan at 450° F. Use timer set to 7 – 12 minutes according to taste preference.
Hot Dogs	4-8 Hot dogs	Broil on multi-use pan. Set timer to 15 minutes and add time according to taste. Turn hot dogs often.
Hamburgers	Up to 4 pieces	Bake on multi-use pan at 450° F for(1/4 lb. each) 20 minutes.
Frozen French	Fill Baking Pan	Bake in “Stay On” mode for 20 Fries one layer only minutes, then broil for 5 minutes or more according to taste preference.
Chicken	Fill Baking Pan	Bake at 450° F for 35 minutes or one layer only until juices run clear with the “Stay On” setting.

COOKING TIME AND TEMPERATURE

FOOD	QUANTITY	COOKING INSTRUCTIONS
TV Dinners		Place foil container directly on Baking rack. Follow package directions.
Baked Potato	1-5 Potatoes	Wash and pierce with a fork. Option – brush on olive oil. Bake at 450° F for 60 – 95 minutes with "Stay On" setting.
Pork Chops	Up to 4 chops	Place on multi-use pan and broil for 35 min.

CARE AND CLEANING

- 1 Always unplug the oven from the electrical outlet.
- 2 Do not use abrasive cleaners, as they will damage the finish. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply the cleaning agent to a cloth, not to the toaster oven, before cleaning.
- 3 To clean interior walls, use a damp cloth and a mild liquid soap solution or a spray solution on a sponge. Never use harsh abrasives or corrosive products. These could damage the oven surface. Never use Brillo pads, etc. on interior of oven.
- 4 To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. To remove baked-on grease, soak the tray in hot sudsy water with nonabrasive cleaners. Never operate the oven without the crumb tray in place.
- 5 Wire rack, baking/drip pan, broiling pan and crumb tray should be hand-washed in hot sudsy water or use a nylon scouring pad or nylon brush. To extend the life of your accessories, we do not recommend that these be placed in the dishwasher.
- 6 Pizza stone should be cleaned by rinsing with hot water. Do not use any soap or detergent on the stone. And before heating the stone, let it air dry for at least 30 minutes to avoid pizza sticking to the surface during the first use.
- 7 Never wrap the cord around the outside of the oven. Use the cord storage cleats on the back of the oven.
- 8 Any other servicing should be performed by an authorized service representative.

IMPORTANT:

After cooking greasy foods and after your oven has cooled, always clean top interior of oven. If this is done on a regular basis, your oven will perform like new and help to keep toasting consistent, cycle after cycle.

Storing Your Toaster Oven

Allow the appliance to cool completely before storing. If storing the toaster oven for long periods of time make certain that the toaster oven is clean and free of food particles. Store the toaster oven in a dry location such as on a table or countertop or cupboard shelf.

Other than the recommended cleaning, no further user maintenance should be necessary.

HELPFUL TIPS / TROUBLESHOOTING

Problem	Potential Cause	Solution
Overcooked /undercooked foods.	Incorrect Temperature or Time setting /Rack placement.	You may have to adjust the time and temperature to desired taste. Because your Toaster Oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time.
Burnt smell.	Food buildup inside oven, on heating elements or in crumb tray.	Refer to Care and Cleaning.
Only one heating element is heating up.	Function setting selection determines which heating element will operate.	Check to see if Broil/Bake/Toast setting is selected, which turns only that heating element.
Toast is black and smoking or too light.		Adjust temperature after first toasting. Oven is hot, so it might need less time to bake/broil/toast.
Unit smokes during baking or broil function.	Initial start up operation may result in minimal smoke or smell (about 15 minutes).	Clean per instructions. Smoke almost always appears in broiling and is normal. Cut off excess fat prior to broiling to reduce smoking. Stop using the appliance if smoke source is the power cord. Unplug immediately.

HELPFUL TIPS / TROUBLESHOOTING

Problem	Potential Cause	Solution
Unit is not heating or stops heating.	Electrical outlet is not working or oven is unplugged.	Check to make sure outlet is working. Both the temperature control and the timer must be set in order for the oven to function.
Food is overcooked or undercooked.	Temperature and cook time may need to be adjusted.	As your toaster oven is much smaller than a regular oven, it may heat up faster and cook faster. Try lowering the temperature 25 degrees from the suggested temperature in a recipe or on a label.
There is burnt food odor or smoking when oven is being used.	There are remnants of food in crumb tray or on the walls of the oven.	Refer to the directions in the Care and Cleaning. Make sure all parts of the oven, baking pan and rack are clean.
Moisture forms on the inside of the glass door during toasting.	The amount of moisture differs in different products, whether bread, bagels or frozen pastries.	The moisture that forms on the oven door is quite common and will usually disappear during the toasting cycle. Since the oven is closed the moisture cannot evaporate as it would in a toaster.
Heating elements do not seem to be on.	Check the oven to make certain th function desired is being used.	If still not working, please contact the support.

Warning: Hot Surface!
Advertencia: Superficie Caliente!
Avertissement: Surface Chaude!

If you experience any problem with the appliance, please DO NOT return the product to the retail store or online merchant. For technical assistance and product information contact us via:

E mail: support@muellerdirect.com or

Call us on: (888) 632-9981 For Müller Customer Care

The cases in the tables do not always indicate a faulty cooker.

Please, examine cooker carefully before contacting Customer Support.

LIMITED WARRANTY

Müller Company (the "IPC") warrants this appliance to be free from defects in workmanship and material, under normal residential use, for a period of two (2) year from the date of purchase. This warranty extends only to the original purchaser and use in USA and Canada. A purchase receipt, purchase order number or other proof of date of original purchase is required before warranty service is performed. IPC's obligation under this warranty is limited to replacing or repairing, or assisting in the repair at IPC's option. All repairs for which warranty claims are made must be pre-authorized by IPC.

This appliance comes equipped with many safety features. Any attempt to interfere with their operation may result in serious injury/damages and void this warranty. No warranty service will be provided to any appliance that has been tampered with, unless directed by an IPC representative.

This warranty does not cover normal wear of parts or damage resulting from negligent use or misuse of the appliance, use contrary to the operating instructions, failure to provide reasonable and necessary maintenance, or disassembly, repair or alteration by anyone unless directed by an Instant Pot Representative. This warranty does not cover units that are used outside of US and Canada. Further, the warranty does not cover damage resulting from Acts of God, such as fire, flood, hurricanes and tornadoes. IPC is not responsible for shipping cost for warranty service.

LIMITATION AND EXCLUSIONS

To the extent permitted by applicable law, the liability of IPC, if any, for any allegedly defective appliance or part shall be limited to repair or replacement of the appliance or part and shall not exceed the purchase price of a comparable replacement appliance or part.

THE PROVISIONS OF THIS WARRANTY ARE YOUR SOLE AND EXCLUSIVE REMEDY WITH RESPECT TO THE PRODUCT(S) COVERED BY THIS WARRANTY. ALL IMPLIED WARRANTIES WITH RESPECT TO THE APPLIANCES(S) INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY EXPRESSLY EXCLUDED.

IPC is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the appliance or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature. Some provinces/ states do not allow the exclusion or limitation of incidental or consequential damages.

Accordingly, the above limitation may not apply to you.

You, the buyer, may have other rights and remedies under your state's or province's applicable laws, which are in addition to any right or remedy which may be available under this limited warranty.

If the appliance should become defective within the warranty period, please contact the Müeller support Customer Service team by:

- ▶ E mail: support@muellerdirect.com or
- ▶ Call us on: (888) 632-9981 For Müeller Customer Care

To facilitate speedy service, please provide:

- Your name, email address or phone number
- A copy of the original purchase receipt with order number, the model and serial number
- Description of the product's defect, pictures or videos if possible

All contents in this document have been checked carefully. Müeller Company reserves the right to interpret any printing mistake or misunderstanding of the content.

For any technical improvement or change in appearance or name plate, changes shall be placed in the revised manual without further notice. In case in appearance and color, please refer to the actual product for detailed information.

Standards: UL 1026 Fifth Edition

CAN/CSA-C22.2 No. 1335.1-93 CAN/CSA-C22.2 No.1335.2.15-93



Müller Company



515 HARAM AVE
OPA LOCKA, FL 33054



(888)-632-9981



support@muellerdirect.com



www.muellerdirect.com

Made In PRC

© 2017 Müller USA, All Rights Reserved.