

- WARNING: Adult assembly only.
- WARNING: Once product is used, returns are not accepted.
- WARNING: Keep instructions for future use.
- WARNING: Failure to follow instructions when assembling can result in serious injury or death.
- CAUTION: Electronically operated product. The blower must be operated by adults only. As with all electronic products, precautions should be taken during handling to prevent electrical shock. Do not use this product with an extension cord.
- CAUTION: Electrocutation risks. Keep all electrical lines, radios, speakers, and other devices away from the inflatable. Use only GFCI-protected receptacles. Use standard grounding to prevent electric shock.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception will occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

What’s in the box?

- 1

10ft Christmas Inflatable
- 1

Neutral Colored Blower
- 4

Tether Ropes
- 8

Inflatable Stakes
- 2

Blower Stakes
- 2

Repair Kits
- 1

Product Manual
- 1

Storage Bag

Warning: Failure to follow these instructions could result in serious injury or death.

Caution: Use only GFCI-protected receptacles. Do not use extension cords.

Blower Maintenance

- Check blower periodically for any damage or potential hazards.
- Do not attempt to service the blower.
- Keep away from water, traffic, fire hazards, or debris, including but not limited to leaves and dirt.
- To clean, make sure the unit is unplugged and wipe with a damp cloth, but never immerse in water.
- When not in use, store the blower inside, unplugged, on a flat stable surface.
- Store blower with cord loosely coiled.
- Do not operate blower with a damaged cord or plug.
- Do not use an extension cord.
- Do not cover the cord and be aware of tripping hazards.

Warning

- Electrocutation risk. Keep all electrical lines, radios, speakers, and other electrical devices away from the constant air inflatable. Do not place the constant air inflatable near or under overhead electrical lines.
- Use only on GFCI-protected receptacles. Use standard grounding procedures to prevent electrical shock.
- Adult operation only. Keep children away from the blower at all times.

Caution

- Electrically operated product.
- To reduce risk of fire or electric shock, do not use this blower with any solid states or speed-controlled devices.
- DANGER: To prevent electric shock, do not immerse in water. Unplug the unit and wipe down with a damp cloth.



Do not use or leave out in rain, wind, or extreme weather



Adult supervision required at all times, do not leave children unattended



Keep children away from blower at all times



This product must be effectively anchored to the ground using the provided anchoring equipment



Enjoy!

Questions about your Smol product?
Email us at hello@playsmol.com



WARNING
Electrocutation Hazard. Do not use extension cord with this product.



playsmol.com @playsmol

User Manual

10ft Christmas Inflatables

Warning

- Read all instructions before assembling this unit.
- Adult setup only.
- Failure to follow these instructions could result in serious injury or death.
- Do not use in rain, windy conditions, or extreme weather.
- CAUTION! Sudden gusts of wind may lift product off the ground.
- Follow all anchoring instructions. User must read and follow anchoring instructions to ensure the proper soil conditions, stake installation, and number of anchors are used.

Caution

- Electronically operated product.
- Blower must be operated by adults only.
- As with all electronic products, precautions should be taken during handling to prevent electrical shock.
- Do not use this product with an extension cord.
- 10ft inflatable electrical rating: AC120V, 60HZ, 2.2A.



Need help with setup?

A big welcome to the world of





Read all instructions before setting up this unit.


Adult supervision required. Keep instructions for future reference.

Safety Instructions

- 1. This product is for temporary use only. Turn blower off after 12 hours of use.
- 2. Do not inflate during snowfall. Inflatable may not rise if already covered in snow.
- 3. Check to ensure the blower is clear of snow before inflating.
- 4. Do not hang ornaments or attach foreign objects to this unit.
- 5. Do not close windows or doors on electrical cords to avoid damage.

Troubleshooting

If the blower motor is not working, check if the power source is active or plug is secure. Inspect the blower for debris.

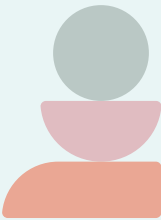

Operating Rules

- 1. Adult supervision is required at all times, including setup and takedown.
- 2. Ensure proper setup prior to use. Adult setup only.
- 3. Do not place the product near potential fire hazard areas.
- 4. Keep children away from the blower at all times.
- 5. Check the product periodically for any damage or potential hazards.
- 6. When moving product, do not drag across any surfaces.
- 7. Keep pets away from inflatable.
- 8. Do not use in rain, windy conditions, or extreme weather. CAUTION! Gusts of wind may lift product off the ground.
- 9. Intended for domestic family use only. Not for use in public areas or as a rental.
- 10. Place on a dry and level ground, at least 6.6 ft (2 meters) away from any other objects. Objects to be avoided include but are not limited to: walls, furniture, sources of water, and ceilings.
- 11. Set up as close to power source as possible. Keep the blower and power cord away from water and children. The electrical cord should not be passed under the product and interfere with its operation. Do not use an extension cord.
- 12. Electrocution Hazard. Do not use an extension cord with this product.

User must read and follow all instructions to ensure use of product.

Inflating, Staking, and Setup

Read warning label on inflatable and blower before setup and use.

ADULT SET UP ONLY

- 1. Remove the inflatable from the box or storage bag and unfold completely onto a flat surface at least 6.6 ft (2 meters) away from other objects.
- 2. Check the bottom of the inflatable to make sure the blower tube is clear of any debris.
- 3. Attach the blower tube to the blower, ensuring it is positioned upright and free from any twists or obstructions. Once connected, use the attached strings to securely fasten the tube in place.
- 4. Take the tether string and securely tie it to each loop located at the midpoint using a strong, reliable knot.
- 5. Secure the four (4) stakes on the blower by hammering into firm soil or grass. Stakes should go in straight, not at an angle, to prevent tripping.
- 6. Before inflating, close the horizontal zipper found on the bottom of the inflatable. Plug the blower into a GFCI-protected outlet.
- 7. While securely holding the tether strings, fully inflate the product. Immediately after inflation, insert four (4) stakes through the loops located at the base of the inflatable. For optimal positioning and ease of setup, a two-person team is recommended.
- 8. Attach the four (4) remaining stakes to the ends of the tether strings. Pull each tether diagonally away from the inflatable to create tension. Drive the stakes down to ground level by hammering into firm soil or grass. Stakes should go in straight, not at an angle, to prevent tripping. For ease of adjustment, use a taut line hitch knot.
- 9. The blower should remain on and continuously inflate the product while in use and occupied. Airflow through seams is normal.
- 10. Do not run the blower for more than 12 hours continuously.

Deflating and Storage

ADULT DEFLATION ONLY

- 1. Turn blower OFF. Untie fabric tube from blower.
- 2. To accelerate deflation, find the horizontal zipper located on the bottom of the inflatable at the base. Unzip the zipper to release air. Product will deflate quickly.
- 3. Allow inflatable to deflate completely before rolling up and storing.
- 4. Store inflatable in the provided storage bag in a cool, dry place away from direct sunlight.

Repair

WARNING: Repair patches must be applied by an adult only

Keep out of reach of children. Repair patch is not a toy.

Airflow through seams is normal. Do not try to repair seams.

Repair Patch Instructions:

- 1. Deflate the inflatable, clean the area, and allow it to dry thoroughly.
- 2. Cut a portion of the patch to the size needed and round the corners into a circle or square with 4 rounded edges.
- 3. Peel the backing off the adhesive repair patch.
- 4. Position the patch over the damaged area and remove any air bubbles. Press firmly from the center and push outward to remove air bubbles and secure the patch.



Maintenance

- Store in a cool, dry place in the provided bag, away from direct sunlight or extreme weather.
- Check product periodically for any damage or potential hazards, including but not limited to: damaged cord, plug, housing, parts, and worn or deteriorated fabric. In the event such damage is found, the product should not be used until properly repaired.
- Cleaning: Use dry or damp cloth with a non-flammable, non-toxic cleaner or water.
- Allow product to fully dry before rolling up and storing.
- Store blower with cord loosely coiled.

