
# Air Pump Info

- CAUTION: Electrically operated product.
- DANGER: To prevent electric shock, do not immerse in water. Wipe clean with a damp cloth after unplugging.
- WARNING: Use only on GFCI protected receptacles. Use standard grounding standards to prevent electric shock.
- WARNING: Electrocution risk—keep all electrical lines, radios, speakers, and other electrical devices away as you inflate the bounce house.
- Keep away from water, traffic, fire hazards, and debris, including but not limited to: leaves and dirt.
- Check the air pump cord and plug periodically for any damage or potential hazards.
- Do not use the air pump if the cord or plug is damaged.
- Do not attempt to service the air pump.
- Adult operation only.
- Do not use an extension cord.
- To reduce the risk of fire or electric shock, do not use the air pump with any solid-state or speed-controlled devices.

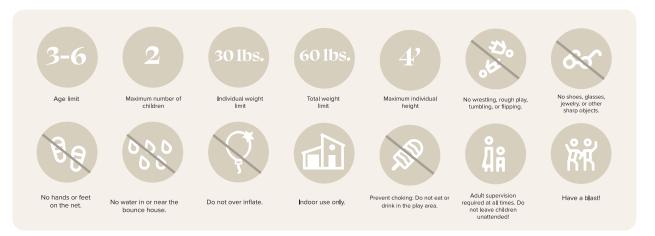

# FCC Statement:


NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to audio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures :

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receive is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## User Manual

# **MiniTumble** 48" x 54"

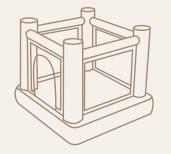

#### Warning

- Failure to follow these instructions could result in serious injury or death.
- Read all instructions before assembling and using this unit.
- Adult setup only.
- Indoor use only.

#### Caution

- Electrically operated product.
- Air pump must be operated by adults only.
- As with all electronic products, precautions should be observed during handling to prevent electrical shock.
- Do not use this product with an extension cord.

## A big welcome to the world of



# **Read all instructions before** playing on or setting up this unit.

#### **Operating Rules**

Adult setup only. Never leave children unattended. Do not use outdoors. Note: For fabric tears, use the included repair patch kit.

- Adult setup only.
- 2. Indoor use only.
- 3. Ensure proper setup prior to use.
- **4.** Adult supervision is required at all times, including setup and takedown.
- 5. Do not place this product near potential fire hazard areas.
- 6. To avoid injury, please ensure that the maximum occupancy is observed and controlled.
- 7. Check the product periodically for any damage or potential hazards.
- 8. When moving the product, do not drag across any surface.
- Keep pets away.
- 10. Intended for domestic family use only. Not for use in public areas or as a rental.
- **11.** Instruct children on proper use of this product. Do not use for any reason other than its intended purpose.

- 12. Toys and other objects should never be allowed inside the unit.
- 13. Bounce away from others and sides, especially the opening.
- 14. Keep your hands and feet away from netting at all times.
- **15.** Do not jump onto or off the product, including sides and support. No water in or near the bounce house.
- 16. Place on dry, level ground at least 6.6 ft. (2 meters) away from any other objects. Objects to avoid include but are not limited to: walls, furniture, shelving, and ceilinas.
- **17.** Keep the power cord away from water and traffic. Electrical cord should not be passed under the product. Do not use an extension cord.
- 18. Product is heavy. Use caution when lifting.
- 19. Store in a cool, dry area away from direct sunlight.

## Inflating and Setup

#### Read the warning label on the bounce house before setup and use. Adult setup only.

- 1. Remove the bounce house from the box and unfold completely onto a dry, flat surface, 6.6 ft. (2 meters) away from any objects.
- 2. Pull the power cord out from the back compartment of the bounce house and plug into a GFCI protected receptacle
- 3. On the air pump, turn the knob to INFLATE.
- 4. Once fully inflated, turn the knob back to OFF. Do not over inflate.
- 5. Unplug the cord and put it back in the compartment.
- 6. Ensure the bounce house is still 6.6 ft. (2 meters) away from any objects on all sides.
- 7. Have a blast!

## **Deflating and Storage** Adult Deflation Only

- Ensure the bounce house is unoccupied
- 2. Pull out the power cord and plug back in.
- Turn the knob to DEFLATE.
- 4. Once the bounce house is completely deflated, turn the knob back to OFF.
- 5. Unplug the cord and put it back in the compartment.
- 6. Fold up the bounce house.
- 7. Store in the provided bag in a cool, dry place away from direct sunlight.

### Repair

#### WARNING: Repair patches must be applied by an adult only.

#### Keep out of reach of children. Repair patch is not a toy.

- 1. Deflate the bounce house, then clean the area and allow it to thoroughly dry.
- 2. Cut a portion of the adhesive patch to the size needed. Round the corners into a circle or a square with four rounded corners.
- Peel off the back, then stick the patch over the damaged area.

#### If you have any issues with your product, please email us at hello@playsmol.com. We'd love to help you!

### Maintenance

- 1. Store in a cool, dry place in the provided bag, away from direct sunlight or extreme weather.
- 2. Check the product periodically for any damage or potential hazards, including but not limited to: damaged cord, plug, housing, parts, worn or deteriorated fabric. In the event such damage is found, the product should not be used until properly repaired.
- 3. Cleaning: Use a dry or damp cloth with water or a non-flammable, non-toxic cleaner.

Questions about your Smol product?

## Email us at hello@playsmol.com



Once product is used, returns are not accepted.

# **Keep instructions** for future use.

WARNING: Read all instructions before assembling this unit.

WARNING: Failure to follow these instructions can result in serious injury or death.

CAUTION: Electrically operated product. Air pump must be operated by adults only. As with all electronic products, precautions should be observed during handling to prevent electric shock. Do not use an extension cord with this product.

WARNING: Electrocution risks. Keep all electrical lines, radios, speakers, and other electrical devices away from the bounce house. Do not place the bounce house near or under overhead electrical lines.

Use only on GFCI protected receptacles. Use standard grounding standards to prevent electric shock.

# What's in the box?

- 1 Mini tumble bounce house
- user manual
- storage bag
- repair kit

Warning: Failure to follow these instructions could result in serious injury or death.

Warning: Falls onto hard surfaces can result in head or other serious injuries.