Product Maintenance

- Put product in provided storage bag after each use.
- Store in a cool, dry place.
- Check product periodically for any damage or potential hazards. If the product is damaged, stop using it.
- To clean, use a dry or damp cloth with water or a non-flammable, non-toxic cleaner. Do not use chlorine-based or bleach-based cleaners to avoid deteriorating the fabric.

Fan Maintenance

- Do not attempt to service the fan.
- Keep away from water, traffic, fire hazards, or debris.
- Do not use an extension cord.
- Do not operate the fan with a damaged cord or plug.
- Do not cover the cord and be aware of tripping hazards.

WARNING

- Use only on GFCI protected receptacles. Use grounding standards to prevent electric shock.
- Adult operation only. Keep children away from the fan at all times.

CAUTION

- Electrically operated product
- To reduce the risk of fire or electric shock, do not use the fan with any solid states or speed controlled devices.

DANGER

• To prevent electric shock, do not immerse the fan in water. Unplug the unit and wipe down with a damp cloth.

Play by the Rules



Maximum number of



No pets near the







No hands or feet on wa**ll**s





Do not allow children to touch fan or electrical cord; long cords and wires present a risk of strangulation accidents







Do not eat or drink in play area

Questions about your Smol product?


Email us at

hello@playsmol.com



User Manual

SmolSpace

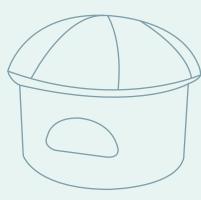


- Failure to follow these instructions could result in serious injury or death.
- Read all instructions before assembling and using this unit.
- Adult setup only.
- Fan must be operated by adults only.



Ready to Play?

 
First, read all of the instructions before setting up or using your Smol Space.



WARNING! Failure to follow the installation and operating instructions presents a risk of serious injury or death.

CAUTION! Do not use outdoors. The Smol Space is an indoor only product.

 Set up on even ground 4 ft. away from other objects on all sides.



Do not set up next to potential fire hazard areas.

What's in the box?

- Inflatable Smol Space
- Storage Bag

fan not included

Keep instructions for future use.

Once product is used, returns are not accepted.

Operating Requirements

Setup Rules

- 1. Remove all packaging prior to use. Do not allow children to play with packaging, including the storage bag.
- 2. Ensure proper setup prior to use. Adult setup only.
- 3. Adult supervision is required at all times, including during setup and takedown.
- 4. Must use recommended box fan. Fan not included.
- 5. Product must be fully inflated before use.
- 6. Keep pets away from product.
- 7. Check the product periodically for any damage or potential hazards.
- 8. Set up product indoors on dry, level ground 4 feet away from any objects on all sides.
- 9. Set up as close to the power source as possible. Keep the fan and power cord away from water, children, and traffic. Electrical cord should not be passed under the product.. Do not use an extension cord.
- 10. Intended for domestic family use only. Not for use in public areas.

Inflation Rules

WARNING! Electrocution Hazard: To avoid circuit overload, do not use extension cord while operating fan.

WARNING! To reduce the risk of fire or electric shock, do not use the fan with any solid-state speed control device. Unplug or disconnect the fan from the power supply while it is powered off.

As with all electrical products, operating and moving electrical equipment requires a more detailed set of instructions. Strictly observe all the rules and instructions to avoid electric shock and severe injury.

- Use a standard 20" box fan that is stable, certified by an electrical testing lab, and safe for children.
- 2. Keep fan away from water.
- Keep fan away from fire.
- Do not immerse the fan in water.
- 5. Do not run cord under carpeting, furniture, or appliances. Keep cord away from walking areas where people can trip over it.
- 6. Do not unplug the fan or disconnect it from the product during use.
- 7. Check the general condition of the fan and power source before using. Do not operate with a damaged cord or plug. If you notice a defect, do not use it under any circumstances.
- Discard fan or return to an authorized service facility for examination and repair.
- 8. Fully inflate the product before use.

Fan Rules

- Follow setup instructions to connect fan to inflation tube.
- Keep objects and debris away from the fan.
- Do not allow children near the fan.
- Do not use an extension cord or allow any cords to go inside the product.

Play Rules

- Adult supervision is required at all times.
- To avoid injury, ensure the maximum occupancy is observed and controlled.
- Up to 5 children may play inside at a time.
- Do not allow pets in or around the product.
- Do not jump or climb on the product while it is inflated.
- Do not run in or around the product.
- Do not play with sharp objects while using this product.
- Do not throw objects in or around this product.
- Do not attach items, including leashes, jump ropes, clothes lines, cables, wires, or chains, to the inflatable as they may cause serious suffocation accidents.
- Do not rough house in or around the product.

Deflation Rules

- Do not deflate product while occupants are inside.
- 2. Turn the fan off before unplugging the electrical cord.

Adult setup only.

Never leave children unattended.



WARNING!

Read the product and fan warning labels before setup and use.

SmolSpace setup

Inflation Instructions

ADULT SET UP ONLY

Step 1: Find a dry, flat, firm area indoors that's free from hard objects and debris.

Step 2: Lay out the inflatable structure, with the roof on top, and place it on the ground about 4ft (1.2 meters) away from any object on all sides.

Step 3: Connect the inflation tube to the box fan by inserting the fan into the tube. Make sure the tube is smooth, untwisted, and positioned correctly with the Smol logo centered in the middle of the top of the fan. The tube should wrap around the fan leaving some of the fan still visible. Fasten the two straps together around the fan.

Step 4: Plug the fan into an electrical outlet and turn it onto any setting. The higher the setting, the faster it will inflate. Inflation may take up to 10 seconds. Keep the fan on to maintain inflation while the product is in use. If needed, turn the fan setting down slightly once the product is inflated to minimize air flow.

Step 5: To enter, lift up the bottom edge of the product on any side and crawl inside. To exit, do the same. If the product is off center at any point, straighten by adjusting the center of the roof

Deflation Instructions

ADULT TAKEDOWN ONLY

Step 1: Make sure occupants have exited the product before deflating.

Step 2: Turn the fan off and unplug the electrical cord. The structure will collapse quickly.

Step 3: Detach the inflation tube from the fan by sliding the fastened straps off of the fan.

Step 4: Place the product in the provided storage bag and store in a cool, dry place.

Once the product is used, returns are not accepted.

Keep instructions for future use.