


## User Manual

# Tumble Walled

## *12' x 12'*

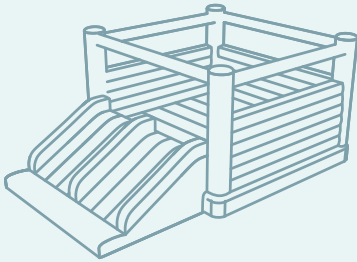

### Warning

- Failure to follow these instructions could result in serious injury or death.
- Read all instructions before assembling and using this unit.
- Adult setup only.

### Caution

- Electrically operated product. Not recommended for children under 3 years of age.
- Blower must be operated by adults only.
- As with all electronic products, precautions should be observed during handling to prevent electrical shock.
- Do not use this product with an extension cord.
- Electrical rating: AC 110-120V, 60HZ, 6.5A

A big welcome to the world of





# Read all instructions before playing on or setting up this unit.

## Operating Rules

1. Adult supervision is required at all times, including setup and takedown.
2. Ensure proper setup prior to use. Adult setup only.
3. Do not place product near potential fire hazard areas.
4. To avoid injury, please ensure that the maximum occupancy is observed and controlled.
5. Keep children away from the blower at all times.
6. Check product periodically for any damage or potential hazards.
7. Outdoor use only.
8. When moving the product, do not drag across any surface.
9. Keep pets away.
10. Do not use product in rain, windy conditions, or extreme weather. **CAUTION!** Sudden gusts of wind may lift the product off the ground.
11. Go down the slides feet first only; no more than 1 rider per slide at a time. No climbing up the slide the wrong way. No jumping onto the slide area.
12. Do not push or rough house in product.
13. Intended for domestic family use only. Not for use in public areas or as a rental.
14. Instruct children on proper use of this product. Do not use product in a manner other than intended.
15. No toys or other objects inside the product.
16. Bounce away from others and sides, especially the opening.
17. Keep hands and feet away from netting at all times.
18. Do not jump onto or off of the product, including sides.
19. Store in a cool, dry area away from direct sunlight.
20. Place on dry and level ground, at least 6.6 ft. (2 meters) away from any other objects. Objects to avoid include, but are not limited to: fences, buildings, trees, branches, walls, furniture, sources of water, ceilings.
21. Set up as close to the power source as possible. Keep the blower and power cord away from water, children, and traffic. Electrical cord should not be passed under the product and interfere with its operation. Do not use an extension cord.
22. Product is heavy. Use caution when lifting.
23. Stakes should be placed straight into the ground (not at an angle) and driven to ground level to prevent tripping.
24. If using indoors, anchor with at least 120 lbs, evenly distributed and tied down to stakes
25. Product should be fully inflated and anchored before use.
26. Do not install inflatable devices over concrete, asphalt, packed earth, carpet or any other hard surface. A fall onto a hard surface can result in serious injury to the user.

### **Adult setup only.**

**Never leave children unattended.**

**Do not use in windy conditions.**

**Note:** Air leakage from product is normal to prevent from overinflating while under constant airflow. Do not try to seal or repair seams. For fabric tears, use included patch kit.

### **WARNING**

Follow Anchoring Instructions. User must read and follow anchoring instructions to ensure the proper number of anchors used, soil conditions, and stake installation.

# Inflating, Staking, and Setup

Read warning label on bounce house and blower before setup and use

## ADULT SETUP ONLY

1. Remove product from box or storage bag and unfold completely onto a flat surface, 6.6 ft. (2 meters) away from any objects.
2. Tie fabric tube securely to blower. Make sure the fabric tube isn't obstructed or twisted in any way and that the cord is not under the product.
3. Plug blower into GFCI protected receptacle.
4. While the product is unoccupied, ensure the blower is away from any debris and switch power ON. Blower should remain on and continuously inflate product while in use and occupied. Airflow through seams is normal.
5. Inflate the product only with the blower provided.
6. After fully inflated, ensure the product is still 6.6 ft (2 meters) away from any objects on each side before you begin staking/anchoring.\*

\*If using outdoors, use the included mallet to secure the 4 provided stakes on the blower and the 6 provided stakes on the product, hammering into firm soil or grass. Stakes should be driven to ground level to prevent tripping. Drive stakes straight into the ground, not at an angle. If using indoors, fill each of the included sandbags with 25 lbs of sand, then clip the bags to the side and back of the bounce house. You can also use the sandbags to anchor for outdoor use.

# Deflating and Storage

## ADULT DEFLATION ONLY

1. Ensure bounce house is unoccupied, then turn blower OFF. Untie fabric tube from blower.
2. To accelerate deflation, find the horizontal zipper located on the back of the bounce house at the base. The back side is opposite to the slides. Unzip the zipper to release air. Product will deflate quickly.
3. Once bounce house is deflated completely, remove stakes if outdoors, or sandbags if indoors. Unclip the sandbags and save for future use. Don't dump the sand!
4. If wet, allow bounce house to dry completely before rolling up and storing.
5. Store bounce house in provided storage bag in a cool, dry place away from direct sunlight.

# Repair

**WARNING:** Repair patches must be applied by an adult only. Keep out of reach of children. Repair patch is not a toy. Airflow through seams is normal. Do not try to repair seams.

Repair Patch Instructions:

1. Deflate the product, clean the area, and allow it to dry thoroughly.
2. Cut a portion of the patch to the size needed and round the corners into a circle or square with four rounded corners.
3. Remove paper backing when ready to stick patch to product surface.
4. Position patch over the damaged area and press down until smooth and sealed.



# Maintenance

- Store in a cool, dry place in the provided bag, away from direct sunlight or extreme weather.
- Check product periodically for any damage or potential hazards, including but not limited to: damaged cord, plug, housing, parts, and worn or deteriorated fabric. In the event such damage is found, the product should not be used until properly repaired.
- Cleaning: Use a dry or damp cloth with a non-flammable, non-toxic cleaner or water.
- Allow product to fully dry before rolling up and storing.
- Store blower with cord loosely coiled.



# FCC Statement

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Once product is used,  
returns are not accepted.**

**Keep instructions  
for future use.**

WARNING: Read all instructions before assembling this product.

WARNING: Failure to follow these instructions can result in serious injury or death.

WARNING: Electrocuting risks. Keep all electrical lines, radios, speakers, and other electrical devices away from the product. Do not place the product near or under overhead electrical lines.

CAUTION: Electrically operated product. Blower must be operated by adults only. As with all electronic products, precautions should be observed during handling to prevent electric shock. Do not use an extension cord with this product.

Use only GFCI protected receptacles. Use standard grounding standards to prevent electric shock.

## What's in the box?

- 1 Smol bounce house
- 1 storage bag
- 1 blower
- 4 blower stakes
- 6 bounce house stakes
- 1 repair kit
- 1 mallet
- 3 sandbags (sand not included)

**Warning: Failure to follow these  
instructions could result in  
serious injury or death.**

**Warning: Falls onto hard  
surfaces can result in head  
or other serious injuries.**

## Blower Maintenance

- Check product periodically for any damage or potential hazards.
- To clean, make sure the product is unplugged and wipe with a damp cloth but never immerse in water.
- When not in use, store the blower inside, unplugged, on a flat stable surface.
- Store cord loosely coiled next to blower.
- Do not operate blower with a damaged cord or plug.
- Do not cover cord and be aware of tripping hazard.

## WARNING

Electrocution Hazard.

Do not use extension cord with this product.

Keep children away from deflation zipper at all times.

Do not enter deflation zipper opening while unzipped

## Blower Info

- Do not attempt to service the blower.
- CAUTION: electrically operated product.
- WARNING: use only on GFCI protected receptacles. Use standard grounding standards to prevent electric shock.
- Keep away from water, traffic, fire hazards, or debris including but not limited to leaves and dirt.
- Adult operation only. Keep children away from the blower at all times.
- Do not use an extension cord.
- To reduce the risk of fire or electric shock, do not use this blower with any solid states or speed controlled devices.
- Do not drop or hit the blower, this may result in malfunction.
- WARNING: electrocution risk - keep all electrical lines, radios, speakers and other electrical devices away from the constant air inflatable. Do not place the constant air inflatable near or under overhead electrical lines.
- DANGER: to prevent electric shock, do not immerse in water. Wipe clean with a damp cloth after unplugging product.
- Ensure deflation zipper located on the back of the bounce house is closed before beginning to inflate.



Maximum number of children



Total weight limit



Individual weight limits



Maximum individual height



Age limit



No wrestling, rough play, tumbling or flipping



No head first sliding



No shoes, no glasses, no jewelry or other sharp objects



No hands or feet on walls



Do not use or leave out in rain, wind or extreme weather



Do not allow children to touch blower or electrical cord



Prevent choking: do not eat or drink in play area



Adult supervision required at all times, do not leave children unattended



This product must be effectively anchored to the ground using provided stakes when used outdoors, and/or with proper anchoring equipment when used indoors

Questions about your Smol product?

Email us at

[hello@playsmol.com](mailto:hello@playsmol.com)



[playsmol.com](http://playsmol.com) @playsmol