

PAYLESSLEDS UFO HIGHBAY INSTRUCTION MANUAL

- Thank you for purchasing our UFO highbay. Please read below items carefully for using this product safely.
- Warning and attention contents related to products use, please be sure to follow them.

⚠ Warning

- This UFO High bay within the input voltage range: 100-277V, 50-60HZ.
- If input voltage exceeds this range, it may cause tube failure. Please be sure to operate under correct input voltage.
- Ensure ambient operating temperature of -30 to 45°C (-22 to 113°F).
- Using this UFO High bay in temperatures outside of this range will reduce the UFO High bay lifespan.
- Make sure to turn off power before starting the installation of this product.


⚠ Attention

- IP rating IP65, can work under wet location.
- Please keep the UFO High bay from any corrosive substance. Please use damp or dry cloth when you clean it.

Model No.	TL-5165	TL-5196		
Power	100W	150W		
Input Current	1.8A	2.5A		
Input Voltage	AC100-277V			
Frequency	50-60Hz			

Installation Instruction

Hang up the light (The ring has been locked on the light, and the screw tighten already, so that you need do is to hang up the light directly.)

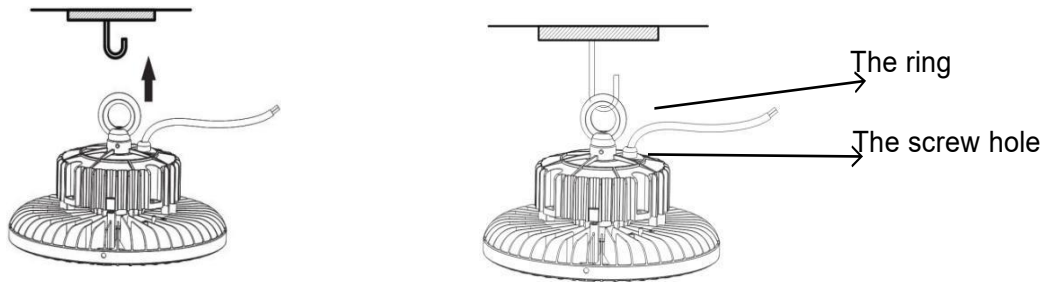

Wiring Connection

Turn off the power, connect Brown wire to L, Blue wire to N, and Yellow wire to G (details as below), then turn on the power.

