

Goldair™



Operating Instructions

10L Evaporative Cooler



Model: GCEV100

READ ME FIRST

Evaporative Cooler

Please read these instructions & user manual carefully.

It is important to note that Evaporative Coolers are fans that pass the room air through a filter that has water pumped over it in order to create a cooler air flow.

You can add ice to the water to help cool the air more but there is no refrigeration system in the unit so the water in the tank will eventually come up to room temperature.

Unlike a portable air conditioner, it will not expel the hot air from the room so will not dramatically bring the air temperature in the room down.

Do not place the unit in wardrobes or other enclosed spaces as this may cause a fire hazard.

It is recommended that this appliance is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.

A correctly specified, undamaged extension cord may be used with this Evaporative Cooler provided it is used in a safe manner.

Do not dispose of packaging until completely satisfied with your purchase.

Please refer to your user manual for operating instructions, further information or trouble shooting before you call the Customer Service number listed within the user manual.

General Care and Safety Guide

Thank you for choosing this Goldair product. This Goldair appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully and keep them for future reference.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Ensure that the fan is switched off from the supply mains before removing the guard.
5. Use only the voltage specified on the rating plate of the appliance.
6. Keep all objects at least 1 Metre from the front, sides and rear of the appliance
7. This appliance is intended for household use only and not for commercial or industrial use.
8. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
9. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
10. Always unplug appliance when not in use.
11. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team.
12. If your appliance does not work, or is not working properly, contact the place of purchase. Repair work on the appliance by unqualified persons can cause serious risk to the user.
13. Ensure hands are dry before handling the plug or the main unit.
14. Carry out regular checks of the supply cord to ensure no damage is evident.
15. Ensure that the cord is fully extended (not coiled) while in use.
16. Avoid contact with the moving parts. Keep hands, hair, clothing, away from blade of the fan during operation to reduce the risk of injury to person and/or damage to the unit.
17. Switch off and use handles provided when moving.
18. It is recommended that this fan is plugged directly into the wall socket.
19. A correctly specified, undamaged extension cord may be used with this fan provided it is used in a safe manner.

General Care and Safety Guide

20. Never place appliance close to radiant heat source.
21. Never operate in areas where petrol, paint or other flammable liquids are used or stored.
22. Never use the appliance to dry clothes.
23. Never insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
24. Never use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
25. Never connect the appliance to mains supply until completely assembled and adjusted.
26. Never remove plug from power socket until the appliance has been switched off.
27. Never remove plug from power socket by pulling cord – always grip plug.
28. Never twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
29. Never use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
30. Due to the risk of injury, never use this appliance for any purpose other than its intended use. This appliance is intended for use in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses, by clients in hotels, motels, bed and breakfast type environments and other residential type environments
31. Never use this appliance outdoors.
32. Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner. Have the appliance checked and repaired by a qualified electrician if repair is necessary.
33. Never place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.



Operating your Fan

Always choose a safe location for the appliance, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the appliance before use. This appliance requires no installation, it should be used solely as a portable appliance.

WARNING: keep all objects at least 1 metre from the front, sides and rear of the appliance.

For best operating performance, position the appliance in a location that will create a “flow through” air effect. The greatest cooling effect will be felt if the appliance is operated in a partly opened doorway or window with the “cool” conditioned air directed into the room to be cooled.

It is important to also have a door or window partly opened away from the cooler to create this “flow through” effect.

On days of high humidity, the cooling effect may be reduced as the air entering the filter may already be saturated with moisture. On days like this it may be better to switch the cooling feature OFF and operate the appliance as a fan only.

Filling water tank

Ensure that the cap on the water drainage outlet of the appliance is tight.

Pour clean cold water into the water filler area on the top of the appliance, observing the water level indicator in the bottom front panel.

CAUTION: do not spill or allow water to come in contact with the control panel.

Do not overfill past the MAX water indicator mark. If desired, place ice in the ice tank in the top of the appliance.

Do not pour water into the ice tank.

Do not allow the combined use of water and ice to overfill the water reservoir.

When moving the appliance, do so with extreme caution, so as not to spill any water in the reservoir. The appliance should be moved slowly and in a sideways direction. Always keep the appliance upright.

Place the fan on a dry, level and sturdy surface.

Check that the fan control switch is set to the off position before plugging into the mains supply.

The appliance ON/OFF LED for the power will light to indicate that there is power to the appliance.

Operating your Fan

On/Off

Turn the appliance ON by pressing the ON/OFF button. The appliance will start in the default mode of normal/low speed setting.

Speed

Press speed to change fan speed from “high-mid-low”, the relevant speed indicator LED will light up.

Timer

If you wish to turn the appliance off at a pre-determined time press the timer button. The appliance can be set to turn off at any time between 0.5 hours and 7.5 hours.

To set the timer, turn the appliance on at the desired speed, press the timer button until the desired run time is illuminated. The fan will turn off once the time has expired. If no time is selected, the appliance will operate continuously.

Cool Mode

To initiate the cooling function press the cool button. This function blows normal air through a water curtain to cool the air. Press the button again to switch this function off and the appliance will operate in fan only mode.

Note: It will take a few minutes for the cooler air to come out of the appliance.

Note: You must have water in the water tank for this function to work.

Swing

The horizontal louver can be shifted manually for the air outlet to blow up or down to suit.

The vertical louvres can be set to your desired direction or allowed to oscillate by pressing the swing button.

Modes

There are 3 Mode functions:

Normal, Natural or Sleep.

- Normal Mode: Constant air flow which can be adjust by pressing the speed function button. For example, normal LOW or normal MEDIUM or normal HIGH.
- Natural Mode: Programmed to simulated natural air flow (wind) as if it was entering via the window. Natural mode can be operated in high, medium or low speed.
- Sleep Mode: Programmed to provide comfort while the user is asleep. This mode is similar to the natural mode and can operate with speed mode HIGH or MEDIUM or LOW.

Operating your Fan

Remote control

The remote requires a line-of-sight path to allow for the signal to be received by the appliance. Position the appliance so the receiver lens is visible from the remote control.

The symbols on the remote correspond to the symbols on the main appliance.
Remove battery cover and install two “AAA” batteries (not included).

CAUTION do not leave the appliance operating unattended.

IMPORTANT! NEVER COVER THIS APPLIANCE!

Cleaning and Maintenance

Care and cleaning

When not in use disconnect the appliance from the power outlet and drain all water from the water reservoir.

To ensure effective humidifying and filtering, it is recommended that the filtering system be cleaned once every 1-2 weeks.

Before cleaning the appliance, disconnect the appliance from the mains supply.

Empty the water reservoir by loosening the plug of the water drainage outlet. Make sure you have a container under the drain to collect the water or empty the appliance outside. You may have to empty the water collector a few times, finally replace the plug of the water drainage outlet.

The air filter is connected into the back cover via two clips at the top. To clean the air filter release by pressing the two clips down and give it a little push. Be careful not to damage the filter.

Note: Never use appliance without the air filter.

CAUTION: do not immerse or allow the motor or electric cables to come in contact with any liquid.

To clean the exterior surfaces simply wipe over with a soft damp cloth. Should it be necessary, greasy marks may be removed from the surfaces by using mild soap and a cloth dampened in hot water. Avoid all other types of detergents, cleaners, or solvents that may contain chemicals which could damage parts of the appliance. Thoroughly dry all parts before storage.
Store in a Cool dust free location for next use.

Do not use this appliance with a programmer, timer, separate remote-control system or any other device that switches the appliance on automatically.

Do not attempt to dismantle the appliance. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase. (Refer to back of booklet).

Goldair™

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand
Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@cdb.co.nz

Goldair – Australia
Monday – Friday 8am-5pm
Phone +61 (0)3 9365 5100
Phone 1300 465 324
info@cdbgoldair.com.au



One Year Warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **one year**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand

CDB Goldair
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
www.goldair.co.nz

Goldair – Australia

CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9365 5100
Phone 1300 GOLDAIR (1300 465 324)
www.goldair.com.au

Goldair One Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name _____

Address _____

Place Of Purchase _____ Date Of Purchase _____

Name Of Product _____ Model Number _____

Attach a copy of the purchase receipt to this warranty card

Goldair™



CDB  **Goldair™**

New Zealand
PO Box 100707,
North Shore Mail Centre,
Auckland, 0745
www.goldair.co.nz

Australia
PO Box 574,
South Morang,
Victoria, 3752
www.goldair.com.au