

# Goldair™



## Operating Instructions

### Rechargeable Fan with Light



Model: GCRF200



 
# General Care and Safety Guide

**Thank you for choosing this Goldair product. This Goldair appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully and keep them for future reference.**

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
4. Ensure that the fan is switched off from the supply mains before removing the guard.
5. Use only the voltage specified on the rating plate of the appliance.
6. Keep all objects at least 300mm from the front, sides and rear of the appliance
7. This appliance is intended for household use only and not for commercial or industrial use.
8. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
9. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
10. Always unplug appliance when not in use.
11. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team.
12. If your appliance does not work, or is not working properly, contact the place of purchase. Repair work on the appliance by unqualified persons can cause serious risk to the user.
13. Ensure hands are dry before handling the plug or the main unit.
14. Carry out regular checks of the USB supply cord to ensure no damage is evident.
15. Ensure that the cord is fully extended (not coiled) while in use.
16. Avoid contact with the moving parts. Keep hands, hair, clothing, away from blade of the fan during operation to reduce the risk of injury to person and/or damage to the unit.
17. Switch off when moving.
18. Never place appliance close to radiant heat source.
19. Never operate in areas where petrol, paint or other flammable liquids are used or stored.
20. Never insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.

# General Care and Safety Guide

21. Never use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove The USB plug from the power supply before cleaning.
22. Never connect the appliance to USB power supply until completely assembled and adjusted.
23. Never remove plug from the USB power supply until the appliance has been switched off.
24. Never remove plug from the USB power supply by pulling cord – always grip plug.
25. Never use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
26. Due to the risk of injury, never use this appliance for any purpose other than its intended use. This appliance is intended for use in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses, by clients in hotels, motels, bed and breakfast type environments and other residential type environments
27. Never use this appliance outdoors.
28. Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner. Have the appliance checked and repaired by a qualified electrician if repair is necessary.
29. Never place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
30. This fan includes a Li-Ion battery. NEVER remove the battery for charging. ONLY use the hardware provided to recharge the fan.
31. Before disposing of this product, the Li-Ion battery must be removed.
32. The appliance must be disconnected from the power supply before removing the battery.
33. The Li-Ion battery must be disposed of safely. Contact your local council for details for safe disposal.

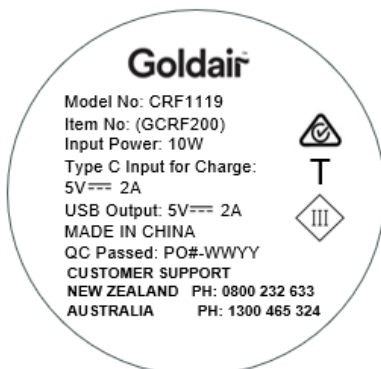


# Operating your Fan

Always choose a safe location for the fan, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

**WARNING:** Keep all objects at least 300mm from the front, sides and rear of the appliance

 **IMPORTANT! NEVER COVER THIS APPLIANCE!**

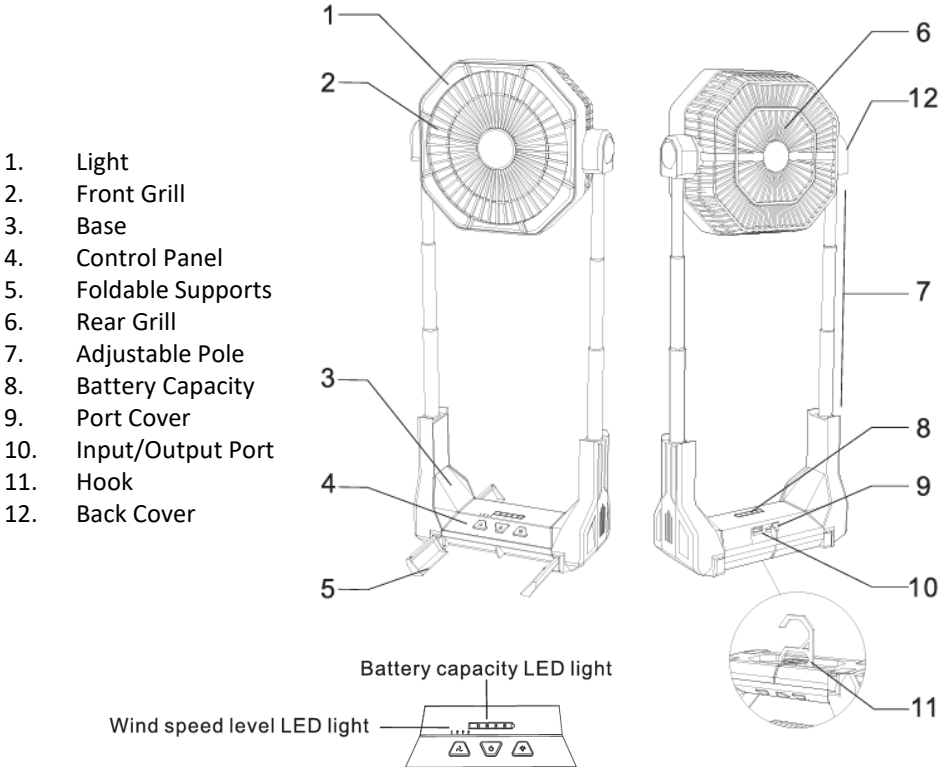

# Operating your Fan

Always choose a safe location for the fan, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

**WARNING:** Keep all objects at least 300mm from the front, sides and rear of the appliance

 
## IMPORTANT! NEVER COVER THIS APPLIANCE!

Ensure the unit is OFF before plugging the power cord into the USB power supply.

Fully charge the Built-in lithium battery before use. Connect the USB cable to the fan body by removing the port cover and inserting the cable to charge. The device will begin charging and the Battery Capacity lights will flash.

A full charge will take approx. 2-3 hours.

### Fan control switch

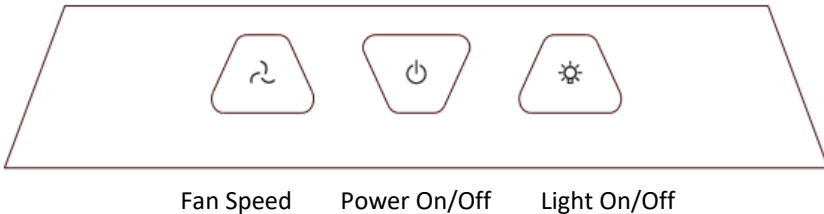

### POWER ON/OFF

Press the Power On/Off button to turn the appliance on; the fan speed will start on level 1. Press the button again to turn the appliance off.

### FAN SPEED

When the appliance is on, press the Fan Speed button to change the fan speed to the desired level. There are 4 fan speeds, and each press of the button will change the level.

### LIGHT ON/OFF

Press the Light On/Off button to turn on the light. Pressing the button again will change the light brightness; Low-Medium-High-Flash-Off. Each press of the button will change the light brightness and the light can be operated independently.

### WIND SPEED LEVEL LED LIGHT

 
 
 
When the appliance is off and not charging, all of the LED lights will be off. When the appliance is on, the wind speed level LED light status is shown as below

● ○ ○ ○	Speed Setting 1
● ● ○ ○	Speed Setting 2
● ● ● ○	Speed Setting 3
● ● ● ●	Speed Setting 4

# Operating your Fan



## ADJUSTING THE ANGLE

You can adjust the up/down angle by holding the head and moving up or down (-30 degree, +90 degree range).

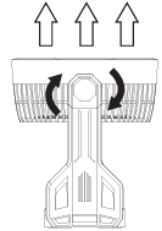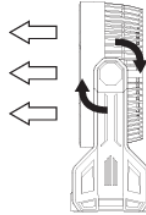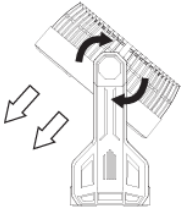


## ADJUSTING THE HEIGHT

  You can adjust the height up/down angle holding the head and moving up or down. When adjusting the height up, please open the foldable supports to ensure that the appliance is more stable.

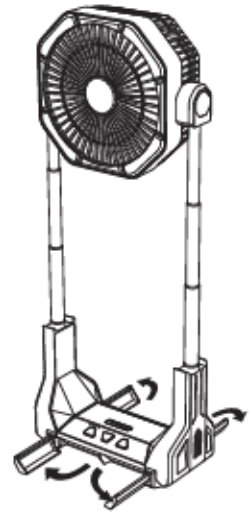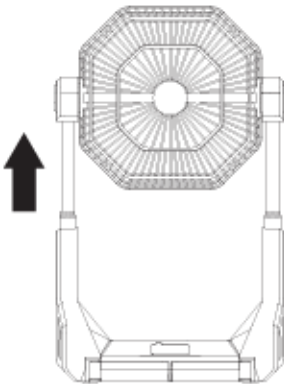

## CEILING FAN HOOK

 Your appliance is fitted with a foldable hook, which allows you to hang the fan. This hook is located on the bottom of the base.

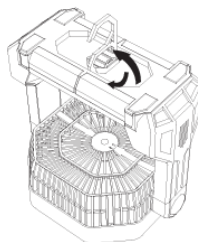

# Operating your Fan

## **REVERSE CHARGING**

Your appliance can be used for supplying power to other electronic equipment, such as a mobile phone. To use this function, connect the USB cable from your electronic equipment to the fan body by removing the port cover and inserting the cable to charge.

## **CHARGING MODE**

When plugged into charge, and the battery capacity is less than 25%, one LED light will be on and will flash.

When plugged into charge, and the battery capacity is between 25%-50%, two LED lights will be on and one will flash.

When plugged into charge, and the battery capacity is between 50%-75%, three LED lights will be on and one will flash.

When plugged into charge, and the battery capacity is between 75%-99%, four LED lights will be on and one will flash.

When plugged into charge, and the battery capacity is at 100%, all LED lights will be on. The lights will turn off after 30secs of removing the plug.

## **NON-CHARGING MODE**

When the appliance is switched on and not plugged into charge:

One flashing LED light indicates that the battery capacity is less than 5%

One LED light indicates the battery capacity is less than 25%

Two LED lights indicate the battery capacity is between 25%-50%

Three LED lights indicate the battery capacity is between 50%-75%

Four LED lights indicate the battery capacity is between 75%-100%

## **USAGE and CHARGING TIMES**

Full charging time: approx. 2-3 hours

Usage time: between 2.5hours – 8.5 hours, depending on operation



# Cleaning & Maintenance

The fan requires regular cleaning to ensure trouble free operation.

Ensure that the fan is switched off before cleaning.

Unplug the fan from the power supply before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the fan to remove dust and dirt.

Use a vacuum cleaner to remove dust and fluff from around the grills.

Ensure the fan is dry before plugging back into the mains supply.

Do not attempt to dismantle the fan. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

## PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase. (Refer to back of booklet).

**Goldair**<sup>™</sup>

### SUPPORT AND TECHNICAL ADVICE

**Goldair – New Zealand**  
Monday – Friday 8am-5pm  
Phone +64 (0)9 917 4000  
Phone 0800 232 633  
info@cdb.co.nz

**Goldair – Australia**  
Monday – Friday 8am-5pm  
Phone +61 (0)3 9365 5100  
Phone 1300 465 324  
info@cdbgoldair.com.au



# One Year Warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **one year**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits to you given by this warranty are in addition to other rights and remedies available to you under a law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

**Goldair – New Zealand**

CDB Goldair  
PO Box 100-707  
N.S.M.C  
Auckland , 0745

Phone +64 (0)9 917 4000  
Phone 0800 232 633  
[www.goldair.co.nz](http://www.goldair.co.nz)

**Goldair – Australia**

CDB Goldair Australia Pty  
PO Box 574  
South Morang  
Victoria, 3752

Phone +61 (0)3 9365 5100  
Phone 1300 GOLDAIR (1300 465 324)  
[www.goldair.com.au](http://www.goldair.com.au)

**Goldair One Year Warranty** (IMPORTANT: Please complete and retain this warranty card)

Name \_\_\_\_\_  
\_\_\_\_\_

Address \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Place Of Purchase \_\_\_\_\_ Date of Purchase \_\_\_\_\_

Name Of Product \_\_\_\_\_ Model Number \_\_\_\_\_

Attach a copy of the purchase receipt to this warranty card



# Goldair™



CDB  Goldair™

New Zealand  
PO Box 100707,  
North Shore Mail Centre,  
Auckland, 0745  
[www.goldair.co.nz](http://www.goldair.co.nz)

Australia  
PO Box 574,  
South Morang,  
Victoria, 3752  
[www.goldair.com.au](http://www.goldair.com.au)