

# Goldair™



## Operating Instructions

### Convactor Heater



Model: GCV370



# General Care and Safety Guide

**YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.**

**CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**WARNING:** You must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse; permanently disabling the unit.

**WARNING:** Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

**WARNING:** To reduce the risk of fire, keep textiles, curtains, or any flammable material a minimum distance of 1 metre from the air outlet.

- Use only the voltage specified on the rating label of the appliance.
- Keep all objects at least 1 metre from the front, sides and rear of the appliance.
- This appliance is intended for household use only and not for commercial or industrial use.
- Indoor use only.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- Do not use the appliance if it has been dropped or damaged.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.

# General Care and Safety Guide

- Never use the appliance to dry clothes.
- Always unplug appliance when not in use.
- When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Customer Services Team.
- Do not use if there are visible signs of damage to the appliance.
- Do not connect the appliance to mains supply until completely assembled and adjusted.
- Ensure hands are dry before handling the plug or main unit.
- Ensure appliance is on a flat, stable, heat-resistant surface.
- Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
- Carry out regular checks of the supply cord to ensure no damage is evident
- Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Take to a qualified electrical person for examination, electrical service or repair.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
- It is recommended that this appliance is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
- A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling cord; always grip plug.
- Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
- Don't place appliance on bedding or on thick & long carpet where the openings may get blocked.
- Switch off and use handle provided when moving
- Do not place appliance close to radiant heat source.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not sit on the appliance.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
- Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids.

# General Care and Safety Guide

- The appliance must not be immersed in any liquids.
- There are no user serviceable parts installed in the unit.
- Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
- This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc. are stored.
- If your appliance does not work, or is not working properly, contact the place of purchase or the Customer Services Team.

The remote control supplied with this appliance uses a **CR2032** coin type battery.

## **DANGER IF SWALLOWED**

Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns.

If swallowed, go straight to a hospital emergency room.

Dispose of used batteries immediately.

# **WARNING!**



## **DANGER IF SWALLOWED**

Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns.

**If swallowed, go straight to a hospital emergency room.**

Dispose of used batteries immediately.

# Components

**WARNING:** Heater must not be used without the feet fitted.

This appliance has been supplied with '1 way screws' for permanent installation of the feet. This is a safety requirement for the New Zealand and Australian market.

## ASSEMBLY

**Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. The screw pack to attach the feet to your heater will be taped to either one of the feet for your heater, or taped to the plug.**



- 1 Power cord
- 2 Control panel
- 4 Air outlet
- 5 Display
- 6 Air inlet
- 7 Feet
- 8 Temperature sensor
- 9 Mains switch
- 10 Handle

Carefully turn the Main Body upside-down on a scratch-free and stable surface. Be careful to prevent damage to the cosmetic finish or your floor surfacing.

Before the appliance can be used, the feet must be screwed on as follows:

- 1 Unpack the appliance from the packaging.
- 2 Remove the transport packaging.
- 3 Check that the appliance shows no signs of damage.
- 4 Slide the feet from the outside into the corresponding supports on the underside of the heater.
- 5 Secure the feet firmly using the screws supplied.

**WARNING:** Operate the heater in the normal upright position only with the feet attached to the bottom. Any other position could create a hazardous situation.

# Operating your Appliance

Always choose a safe location for the appliance, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

**WARNING:** THIS IS A DOUBLE SIDED HEATER. Keep all objects at least 1 metre from the front, sides and rear of the appliance.

**WARNING:** In order to avoid overheating or risk of fire, do not cover the heater.

**WARNING:** Never leave this appliance unattended when in use.

 
 
**WARNING:** Do not use this appliance with a programmer, remote-control system, separate timer or any other device that switches the appliance on automatically.

**Note:** When the appliance is turned on for the first time, it may release a slight odour or smoke. This odour or smoke is a normal occurrence caused by the initial heating of the internal heating elements and should not occur again.

## HEAT CONTROLS

Check that the Power Switch on the side of the heater is set to the Off position before plugging the heater in and turning on the mains supply. Turn the Power Switch at the side of the heater to the "I" position. You will hear a beep.

## CONTROL PANEL

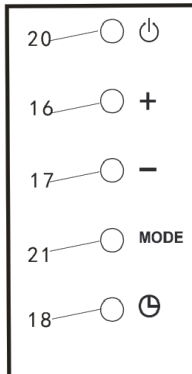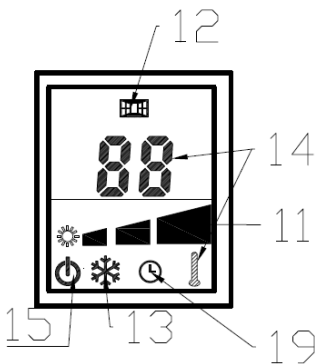

11. Selected heating level display
12. Infrared reception
13. "Frost protection" symbol
14. Set temperature display
15. On/Off display
16. Increase temperature
17. Reduce temperature
18. Timer button
19. Running time display
20. On/Off button
21. Button for selecting the heat setting

Press the On/Off button "20" to switch the appliance on. The display lights up. The appliance is now ready for use and can be operated by means of the remote control or control panel

## HEAT SETTINGS

The appliance has three heat settings: 900 watts, 1,300 watts & 2,200 watts

Press button "21" repeatedly until the desired heat setting is set.

Selected heating level is shown in the display.

# Operating your Appliance

## THERMOSTAT

Selected your desired temperature by pressing either button “16” to increase temperature up to 32 °C or button “17” to decrease temperature down to 16 °C.

The selected temperature will be displayed on the control panel. measurement 14 is shown in the display 5.

After a few seconds the display will change back to showing the current room temperature but the set temperature will be stored and the heater will continue to run until that temperature is reached.

Temperature is measured directly at the appliance using temperature sensor “8”. It may be some time before the entire room has also reached this temperature.

## TIMER

The appliance has a timer for setting the heating time to between 0.5 and 24 hours. The appliance switches off automatically once the heating time has expired.

Press timer button “18” repeatedly until desired running time is shown in display 5.

To switch off the timer, press timer button “18” repeatedly until running time is no longer displayed.

## FROST PROTECTION

To prevent the temperature in a room falling below 0 °C proceed as follows:

Press the button for selecting heating level “21” repeatedly until "Frost protection" symbol “13” appears in the display.

As soon as the temperature in the immediate vicinity of the appliance drops significantly below 7 °C, the heating automatically switches on.

 
As soon as the temperature rises to above 9 °C, the heating switches off and the display shows room temperature again.

To switch off frost protection, press the button for selecting heating level “21” repeatedly until "Frost protection" symbol “13” in the display disappears.

## REMOTE CONTROL

All functions that can be operated on the heater can be operated from the remote control.

The remote control takes a CR2032 coin type battery. Remove the battery compartment cover and change batteries observing the correct polarity.

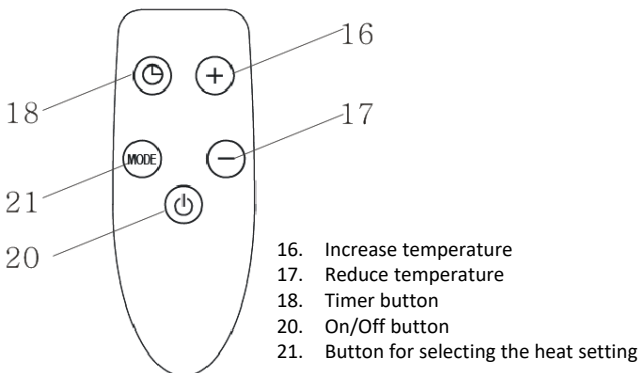



# Operating Your Heater

## SAFETY DEVICES

This appliance has two protection devices:

- Resettable Thermal Link - this will automatically disconnect the power to the appliance at a pre-set overheat temperature. After cooling down it will reset and power on again. If this occurs, investigate what is causing the appliance to overheat.
- Thermal Fuse - this disconnects the appliance permanently in case of overheating. (It is non resettable).

**CAUTION:** The appliance generates heat during use. Precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

## CARE AND CLEANING

- The heater requires regular cleaning to ensure trouble free operation:
- Unplug the heater from the mains supply before cleaning.
- Ensure that the heater has been allowed to cool down completely before cleaning.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
- Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.
- Never use solutions such as petrol, thinners or polishing agents.
- Ensure the heater is dry before plugging back into the mains supply.
- Do not attempt to dismantle the appliance.
- There are no user serviceable parts. For service or repair, contact an authorised electrical service technician

## PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase.

### TECHNICAL SPECIFICATION

Model No: GCV370  
Supply: 230-240VAC 50/60Hz  
Wattage: 2200W

# Goldair™

### SUPPORT AND TECHNICAL ADVICE

**Goldair – New Zealand**  
Monday – Friday 8am-5pm  
Phone +64 (0)9 917 4000  
Phone 0800 232 633  
info@cdb.co.nz

**Goldair – Australia**  
Monday – Friday 8am-5pm  
Phone +61 (0)3 9365 5100  
Phone 1300 465 324  
info@cdbgoldair.com.au



# Two Year Warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **two years**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

**Goldair – New Zealand**

CDB Goldair  
PO Box 100-707  
N.S.M.C  
Auckland

Phone +64 (0)9 917 4000  
Phone 0800 232 633  
[www.goldair.co.nz](http://www.goldair.co.nz)

**Goldair – Australia**

CDB Goldair Australia Pty  
PO Box 574  
South Morang  
Victoria, 3752

Phone +61 (0)3 9365 5100  
Phone 1300 GOLDAIR (1300 465 324)  
[www.goldair.com.au](http://www.goldair.com.au)

**Goldair Two Year Warranty (IMPORTANT: Please complete and retain this warranty card)**

Name \_\_\_\_\_

Address \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Place Of Purchase \_\_\_\_\_ Date Of Purchase \_\_\_\_\_

Name Of Product \_\_\_\_\_ Model Number \_\_\_\_\_

Attach a copy of the purchase receipt to this warranty card



# Goldair™



CDB  Goldair™

New Zealand  
PO Box 100707,  
North Shore Mail Centre,  
Auckland, 0745  
[www.goldair.co.nz](http://www.goldair.co.nz)

Australia  
PO Box 574,  
South Morang,  
Victoria, 3752  
[www.goldair.com.au](http://www.goldair.com.au)