

2 YEARS

car socket

WARRANTY

PRE-CAUTIONS BEFORE TESTING

- . Please wear work gloves during installation
- Do not touch the LED lamp beads directly or prevent any dirt or moisture from adhering to the LED.
- . Do not look directly at the operating bulb since the light with high intensity will cause eye injury at a
- 4. Do not touch the bulb body with hands or allow any skin contact since the bulbs reach to very high temperature may result in severe burns.
- . Do not disassemble or modify the product in any way, as this may damage the product or cause fire, personal injury.
- 6. Do not wash the vehicle when the bulbs are on. Changes in the temperature of the LED bulbs may

PRE-INSTALLATION TESTING

- . Remove the original bulb from the vehicle connector
- Connect the LED bulb to the vehicle connector.
- Turn on the LED bulb and test for correct lighting.


4. Check if any warning signs show up on the vehicle dashboard. If no warning occurs, the test is finished.

If one of the LED bulbs does not work, it could be attributed to poor contact. Make sure the connection is good. If the problem cannot be solved, swap the left side bulb with the right side bulb and test again. (Remind: The socket has a polarity, please connect it correctly)

WARNING:


- 1. Do not switch on the LED bulb until the connection is finished.
- $2. \ \text{If the LED bulb flashes or warnings show up on the dashboard, please connect the extra CANBUS to} \\$

If any problems still cannot be resolved under the guidance of this manual, please feel free to contact our customer support team.

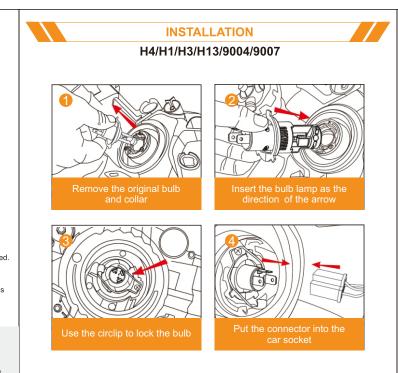


REMIND:

 Please keep the led chip symmetric and hood upward as the photoshow. If light pattern is not good, please rotate the body by tool.









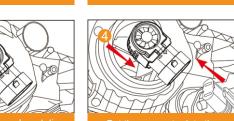

car socket

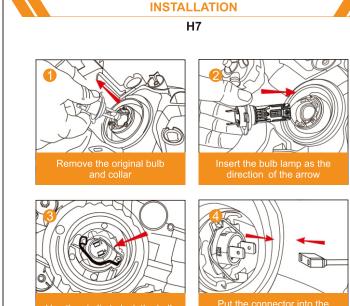

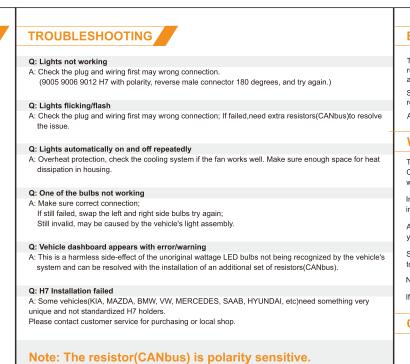

If the LED bulbs do not function properly after installation, please reverse the resistor(Canbus) male

connector 180 degrees and try again.



