

BATTERY NOTICE

We recommend FULLY charging the MINI before using it for the first time.

Random Bluetooth Disconnects: When the internal battery of the MINI starts to get weak and the music volume is at full volume, certain songs and bass notes will cause the voltage to drop below the operating range of the Bluetooth module causing it to disconnect. Turning the music volume down a couple clicks will allow you to continue listening or you can plug in the charger. The green charging LED will remain ON while the battery is still charging, and it will turn OFF when it is completely charged. It can take up to 8 hours to fully charge the internal battery and the green LED to turn off. We also recommend turning the master power OFF when you are NOT listening to the MINI for faster charging and to insure that there is no battery draw from the Bluetooth module when the speaker is not in use.