




PARTY BAR G3 (MINI)

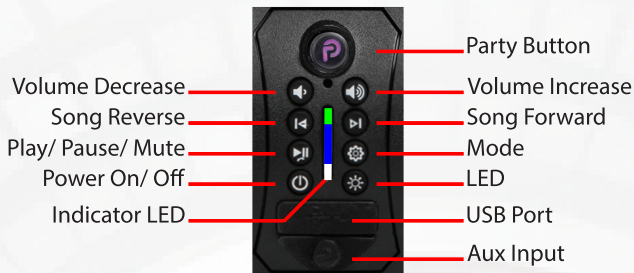

Mode Button: Click-press the mode button to toggle between Bluetooth/Aux/USB listening modes. Press-hold to turn off.

*Button will not work if Party Button is in DJ Listening mode

* USB will only be available if USB drive is inserted in bar

Power On/Off Button: Click-press turns bar on and off (using this button will turn off all power drain on battery)

LED Button: Press and hold to turn on/off, Click-press to cycle through stored LED sequences.

Indicator Led Status:

Lower section:

White - power is on

Middle section:

Flashing Blue - Bluetooth pairing mode

Solid Blue - Bluetooth is paired to a device

Purple - Auxiliary input mode

Red - USB mode

Top section:

Green - Battery charging

OFF - Battery fully charged

Detailed instructions can be found at www.bazooka.com

Unleash the Sound and Illuminate Your Adventure

Party Button: Click-Press cycles through the below modes.

Blue: Single Listener Mode

Purple: DJ Broadcast Mode

Red: DJ Listening Mode (rejoins previous "Party" if available).

SETTING UP A PARTY:

- 1 Decide who will DJ the Party and who will Listen
- 2 DJ: Click the Party button on the designated DJ bar until it turns PURPLE and then long-press the Party button to enter "Broadcast Pairing" mode (Party button will blink while in Broadcast Pairing mode. Multiple Listener bars can join simultaneously while the DJ bar is in Broadcast Pairing mode and the Party Button is still blinking.)
- 3 Listeners: Click the Party Button on the Listener bar until it turns RED and then long-press the Party button to enter "Broadcast Pairing" mode.
- 4 The bars will automatically sync and all Listener bars will yield music and LED lighting control to the DJ bar.
- 5 Repeat steps above for any NEW "Listener" that wants to join an ongoing party. Only the DJ will need to enter Broadcast Pairing mode while a Party is in progress to allow the Listener to join. All other Listeners will remain in the Party while the new Listener joins.



Listeners can leave an existing Party by switching to **Single Listener Mode**, as well as rejoin the Party by switching back to DJ Listening Mode.

Listeners can control the local volume on their bar using the Vol +/- buttons or mute their bar by clicking the Play/Pause (=/>) button. However, anytime the DJ adjusts the volume of the DJ bar it will reset all Listener bars to the current volume of the DJ bar.

All G3 Party Bars remember their last Party. Once a Party has been established it can easily be recreated provided the original DJ bar is going to be the DJ again. To recreate the last Party simply turn the bars ON and click the Party Button on each bar to put that respective bar back into DJ Broadcast or DJ Listening mode. The last Party will automatically be recreated provided the original DJ bar is present and turned ON in DJ Broadcast Mode.