Homeart

PANDA COLLECTION EGG BOILER INSTRUCTIONS FOR USE

- Pierce the larger end of each egg (use the pin at the botton of the measuring cup) and place each egg in a slot making sure that the punctured holes point up.
- Use the measuring cup to pour the appropriate amount of cold water directly into the egg cooker heating plate.
- Cover the egg boiler with its lid, plug it in and press the power button.

MEASURING CUP

The water measuring cup has three different lines – for soft, medium, and hard. You fill up the egg boiler with the amount of water that you need and that will determine how long your eggs boil for, and therefore what their consistency will be.

 
- When the eggs are finished an alarm will sound.
- When you hear the alarm, press the power button to turn it off and lift the lid by using the handle.
- Remove the eggs.
 Warning they will be HOT!

PRO TIPRemoving the eggs and putting them directly into ice cold water will stop the cooking process and make them much easier to peel.



Soft Boiled

1-3 eggs will take about 7 minutes4-6 eggs will take about 10 minutes



Medium Boiled

1-3 eggs will take about 9 minutes4-6 eggs will take about 12 minutes



Hard Boiled

1-3 eggs will take about 12 minutes4-6 eggs will take about 16 minutes