

**BAREBONES**

**Call**

1-855-895-7040

**Email**

info@barebonesliving.com

00920

**BAREBONESLIVING.COM**

**RAILROAD LANTERN**

*User Guide*

**BAREBONES**

**QUICK USE**

**Be sure to install the battery before use!**

1. Turn the lower housing **H** counter clockwise to unlock and expose the battery slot.
2. While holding the lantern upside down insert the battery **B** top down into the battery slot. The top of the battery is marked with a (- + -) icon.
3. Reattach the lower housing **H** by pressing down and turning clockwise until it locks.
4. For optimal performance charge fully before first use.

## KEY FEATURES

### Key Features

**Charging** - Plug your lantern into any a USB power source with the supplied cord. **A E**

**Battery / Charge Indicator** - LED lights will indicate battery level. **C**

### Dimmer Key **G**

**Turn on Lantern** - Clockwise

**Dimmer** - Low to High Clockwise

**Turn off** - Counterclockwise

### Tech Specs

**LED:** 3.2 Watt Warm Edison - Style LED Bulbs

**Light Spectrum:** 3000k

**Lumens:** Low: 35 High: 200

**Input:** 5 V USB

**Battery:** 3.7 V, 4400 mAh Lithium Ion


**Run Time:** Low:100+ Hrs High: 3.5 Hrs

### Handling, Maintenance & Care

Your lantern is designed to be weather resistant with use under regular conditions. Wipe your lantern Clean with soft microfiber cloth.



## ITEMS INCLUDED

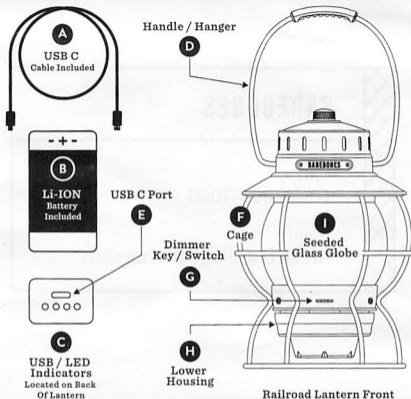

## CERTIFICATION & COMPLIANCE



### Warning

Avoid shining light directly into eyes. This product is not intended for use by children.