
2023-4-12

Dear Customers

Thanks for purchasing our steam cleaner. Please read the instruction carefully and retain for future use.

Due to our on-going improvement programmes, some specification may be changed.

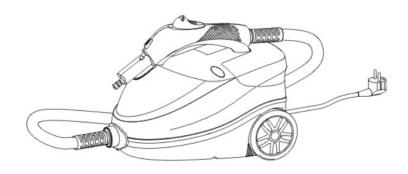

Please kindly keep this manual in a place which is easy to take.

Product Features

Advantage

With Unique patented technology by using high temperature and steam pressure to clean floor, Windows, lampblack machine, air conditioner and microwave oven. No chemical reagent, almost zero injury of cleaning items

Safety

High sensitivity of the temperature and pressure control system, can provide 135 $^{\circ}$ C steam.

Automatic power off when water used up.

With the function of automatic pressure relief valve, if steam pressure in the boiler is too high, it will be released directly.

Durable

Super thick aluminum boiler with die-casting design can make quick heating up time and long life usage.

Energy saving

Special heating pipe with the boiler integration design make it complete heating with high efficiency & energy conservation.

Safety Guards

The below notice is to prevent harm and damage to the user and others. [Forbidden] & [Attention].


O Forbidden			
Please do not use with	Please do not put		
wet hand to pull out the plug	heavy weight on power cord		
O not unplug the	O not touch steam		
power plug if power is on	within 20cm from gun		
Do not open the	O Don't damage the		
pressure relief valve when	power cord. Do not use		
usage. Must turn off and	broken power cord or		
wait until cooling	switch		
O _{Do not pour any other}	Please do not let		
liquid except clean water	children play.		
O _{Do not put machine in}	O not use water to		
not smooth & heat surface	rinse or put in a damp place		
O Do not use when no	O Do not dump when		
water.	power is on in case of burns		

Attention			
Turn off the power: Power failure, machine failure	Please using the machine must be in ventilated room		
This product is suitable for family, do not used for industrial purposes	please be sure to lock children's lock when stopped using		
please check whether damaged before use or stopped when find abnormal	The steam will be ready after 1-2mins.Green light show on		
There may some water in the steam for first usage.	Do not change, replace or remove any parts until cool		
If temperature is lower than 0 °C, please do not clean window	Do not spray the steam to clean glass in the same position more than 2 seconds		
Please make sure the plug on the socket on its	When not in use or leave, turn off the power		
Any failure must send to professional service centre	Please pour out the water when finished using every time		

Unit and Accessory


Unit×1		Measuring cup×1	
Extension tube×2	3	Ironing brush×1	
Glass brush×1		Big nozzle×1	
Floor brush×1		Carpet glider×1	
Round brush×1 (Stainless)		Hanger×1	
Towel of floor brush×1		Round brush×1 (Nylon)	
Cord rewinder×1		Ironing brush×1	

Structure of Unit

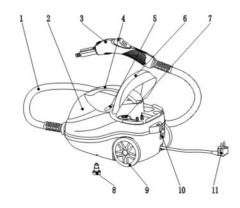

No.	Name	Function
1	Soft pipe	Deliver the steam
2	Unit	Produce the steam
3	Steam gun	Connect with accessories
4	Handle	Pick by hand
5	Led light	Display the steam states.
6	Cover	Store small accessories
7	Water tank	Fill water directly
8	Valve	Cleaning boiler
9	Wheel	Easy for moving
10	Power switch	Unit connect with power
11	Power plug	Connect with electricity

Structure of Steam Gun

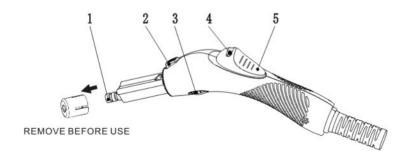

No.	Name	Function
1	Steam nozzle	Output of steam
2	Accessory lock	Fixed when connected with accessories. Remove the accessories when pressed down
3	Adjustable button	Adjustable the steam amount
4	Steam lock	Lock steam/ Auto steam
5	Steam trigger	Control the steam on/off.

Operation Instruction

1. Fill water

Please kindly using the measuring cup to fill water before using. Max water can be filled 1.5L.



Remark:

★please make sure that no residual water in the water tank after using every time. Besides, make sure you have also pour out the water in the boiler since there may any calcification later.

★Method of pour out water in the boiler:

Waiting for 60mins after power off. Using one coin to Unscrew the valve counterclockwise at the bottom of the unit. Then turn the machine and poured out of the water in the boiler. The residual water in the boiler may still remaining hot, please pay attention to prevent any burn.

If some impurities in the water, suggest you can add some water in the boiler and repeat to pour out.

O Do not inject any liquid except clean water

2. Power on

Put the plug into socket and open the power switch. If the power is on, the red light will on.

O Do not use wet hand to touch the power

O Do not use any power cord, power socket in broken status.

3. Operation

If green light show on at the first time, means steam is ready. Normally it cost only 1-2mins.

Hold on the steam gun by hand and move the steam trigger ahead. Steam will come out directly.

If you need automatic steam without hand, just turn the steam lock to the right side when in using.

There will be some water in the steam first. Do not use to clean carpet, ironing clothes etc. Suggest you can spray to some container. It will be normal after 2-3seconds

Here is steam adjustable button in the gun. Please kindly adjust the steam amount accordingly to actually situation. For a long time of using, you can turn the

steam lock to the right side and than steam come

out without the hand touch. For stopping, just turn the steam lock to the left side.

Any temporary leave (get a call), please stop the steam and turn the steam lock to the right side . , and than you can not trigger the steam anymore.

★Please choose the appropriate accessories according to the actual situation. Detailed please refer to the accessories instructions.

OIf the user left for a long time, please shut off the power.

★Red light show on it means short of water.

If you want to continue use, just add water in the tank directly

★Some noisy is the sound of working for water pump.

4. Storage & Cleaning

After use, please turn the power off.

If the steam has not fully released, please keep your thumb on the steam button until no steam can be released.

★If there is dirt on the surface of body, please use dry

dishcloth with some water to wipe gently.

Opo not use water to spray the machine.

Opon't placen it under damp which may cause short circuit.

You can install the cord rewinder on the back of unit and assemble the power cord on it.



 
The steam gun can be put on the handle directly.

After cleaning please keep it in a dark and dry place.

Instruction Using For Accessories


1. Extension tube

Mount the extension tube to use the steam cleaner to clean the floor, high windows or inaccessible areas. Place the open end of tube on the steam gun until the steam gun release button clicks in the place. Use one or two extension tube, as necessary. To remove the extension, press the release button and pull the tubes apart with a downward motion.



2. Big nozzle

This nozzle makes it perform a deep cleaning and easily reach places such as corners, junctions or bathrooms. Simply push the nozzle firmly and adjust the gun directly.

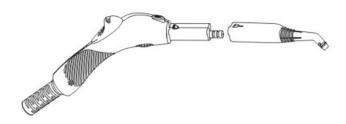

3. Round brush

Round nylon and metal brushes are inserted firmly into big nozzle until a click is heard. You can even eliminate stubborn dirt from blinds, radiators, etc. Use the small metal brush. The nylon brush is suitable for heavier stains on less sensitive materials such as stainless steel. To remove it, you just have to push it down and remove it directly.






4. Ironing brush

To iron a chair, sofa, bed, etc, place the white ironing towel on

ironing brush and connect with the steam gun.

In addition, you can adjust the extention tube in the middle of unit hole. You can put the clothes on it directly. We suggest you using a small amount of steam when using this function.

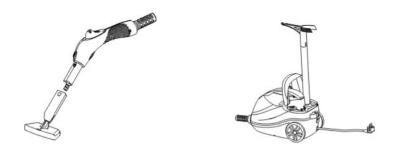

5. Window brush

To clean window, mirrors, or tiles or objects with smooth surface, use the window brush, which has a rubber for cleaning. When installed, set in the two prominent parts of the hook scraper; then place the glass brush cover for iroing; an audible click will sound, and the installation is complete.



 \bigcirc If temperature is lower than 0 $^{\circ}$, please do not use this product to clean glass


Opo not placed in the same position more than 2 seconds

6. Floor brush

Connect the nozzle on the floor brush to the end of extension tube. Make sure that the nozzle fits properly in place. The floor brush is ideal for cleaning washable walls and floor coverings. It can be used with or without the mop. Press on the inside of the handle, open the latches to attach the mop.

As for towel, please first fold in half, and than clamp in the brush directly.

Add the carpet glider if you need to clean the carpt. open the clips to hold the towel.

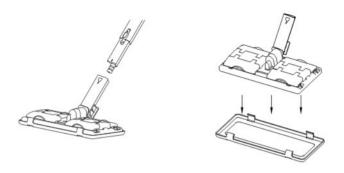

Trouble shooting

Situation	Please check to the following points	Solution
No	Plug not insert to the power socket tightly	Insert again or change the socket
	Switch indicator light off	Turn on the switch
spray	No water	Fill water
steam	Not press the steam button	Press on children's lock
	Other questions	Ask professional service
Water is flowing from	There may some water in the steam for first usage or stopped for a while.	normal phenomenon. Will disappear quickly
nozzle	Influence the normal use	Ask professional service
	Steam come out besides the nozzle	
Others	plastic deformation and softening phenomenon Other electric	Ask professional service
	equipment cannot be used	

Manufacturer: Shenzhen Aspiron Technology Company Limited Address: Room 2803B,Building C,Galaxy World Phase Π , Minle Community, Minzhi Street,Longhua District,Shenzhen, Guangdong,China www.aspiron.com Made in China





Questions or Concerns?

support@aspiron.com