

Brio®

 
WATER COOLER USER'S MANUAL

Thank you for purchasing a Brio water cooler. Please read this user's manual thoroughly for using the water coolers safely and appropriately.

CL805 Signature Series Room Temperature & Cold Cooler

Stainless Steel

SIGNATURE
COOLER SERIES

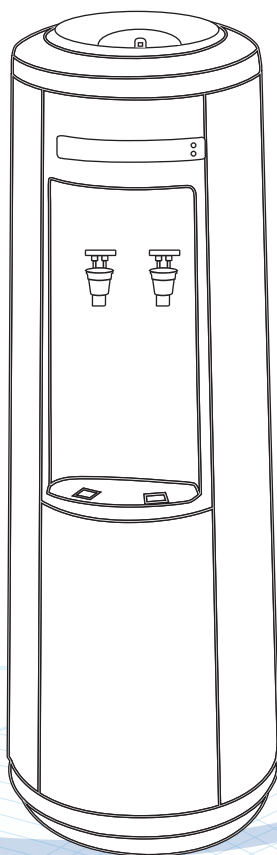

SAFETY PRECAUTIONS

- Plug in the dispenser in the way described in this manual.
- In accordance with these instructions, the dispenser must be properly located and installed before use
- Use only water. Do not use coffee, tea or other beverages.
- Dispenser must be unplugged before cleaning, sanitizing or repairing. Regular cleaning is advised to ensure satisfactory water quality.
- Wipe any water spills after loading or unloading water bottles.
- Do not use with water that is microbiologically unsafe or of unknown quality periodically remove dirt and lint from the condenser on the back of the cooler.
- Ensure the dispenser stands upright for 2 hours before loading water bottle, plugging in or turning the unit on.
- Always lift dispenser by handle located on rear of unit. DO NOT Lift dispenser by the faucets, this part of the cooler may break and cause leaks if pulled by force.
- Supervise children when using the dispenser.
- The recommended placement of the water dispenser is indoors. Keep away from direct sunlight and excessive moisture

WARNING: The dispenser must be grounded – if the appliance is improperly grounded, it may result in an electric shock

IMPORTANT: To provide additional protection from the risk of shock, the dispenser MUST be connected to a ground fault circuit interrupter (GFCI) outlet at all times. Use of an extension cord will void any warranties. See warranty document for complete terms and conditions.

Cautions

- Do not connect the dispenser to the power outlet yet. Install the dispenser on a flat and secure place approximately 4 inches (10cm) from the wall.
- If you need to move the dispenser, wait approximately 1 hour after turning off the power. Upon moving, do not tilt the dispenser more than 45 degrees.
- Make sure that the electric socket is correctly grounded to prevent electric shock.
- Check If the Water Levers are firmly closed.
- This dispenser is intended for indoor use only.
- Do not expose to direct sunlight.

■ Cold Water Faucet (Blue Lever)

Press the blue lever for cold water and white lever for room temperature water, respectively. Place a cup directly below a faucet and depress the correct lever. Even when a bottle is empty, Cold Water is available, for a small volume.



RECEIVING

Inspect the dispenser box carefully for any evidence of shipping or handling damage before signing to receive goods. In case of shipping damage, claims should be filed immediately with the carrier

 
 
 
 
HOW TO INSTALL AND USE

1. Keep cooler unplugged until water flows all the way through faucets
2. Ensure dispenser stands upright for a minimum of 2 hours before loading water bottle.
3. Place dispenser a minimum of 4 inches away from the wall to ensure ventilation.
4. **Install dispenser on a level floor strong to support it when fully loaded.**
5. Do not install dispenser where it will be subject to direct sunlight, heat or moisture.
6. Wipe down the water bottle cap and neck to ensure there is no debris.

PREPARE WATER BOTTLE

Remove the Cap Seal on the top of the bottle cap (if necessary).

* Make sure not to remove the plastic cap of bottle.

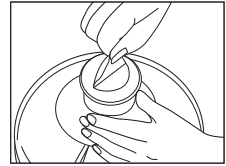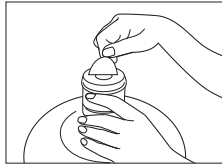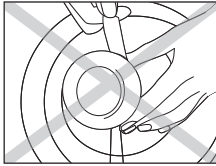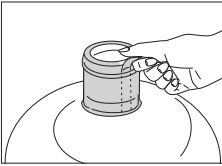

INSTALL BOTTLE IN NO-SPILL SYSTEM

Invert the bottle and place it into the top of the No-Spill System. As the water fills the reservoirs inside the machine, the water leaving the bottle will be replaced with air seen as bubbles rising in the bottle. This is normal and will stop when the reservoir is filled. This process will repeat itself each time water is drawn from the dispenser.

 


Case / Drip Tray

Case: Clean the dispenser using a soft damp cloth. At all times, do not use abrasive cleaning materials or implements.


Once the soiled parts of the dispenser have been cleansed, dry using a soft cloth.

Drip Tray: Clean the Drip Tray and then wipe off with a neutral detergent and a soft cloth.

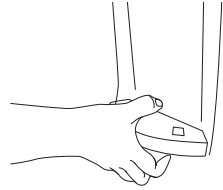


Radiator Condenser

 A radiator is mounted on the back of Dispenser. If it is too close to a wall, or when the radiator gets covered in dust, the cooling efficiency will be impaired. Please clean the dust off with a soft brush or vacuum cleaner. This should be done regularly.

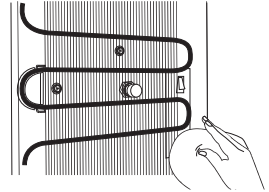


Check the Power Cord / Plug

 Check to see that the power cord is not damaged or overheating, and also that no heavy objects are placed on it. Failure of the power cord could lead to fire or shock hazards. Please frequently check.

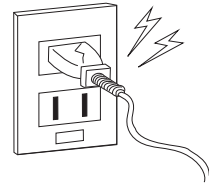

Check the Leakage

 If the bottle is not firmly fixed to the No-Spill System, or when the Drain Cork is not closed completely, leakage may occur. Check if there are any leakages on the back or bottom by moving the dispenser.

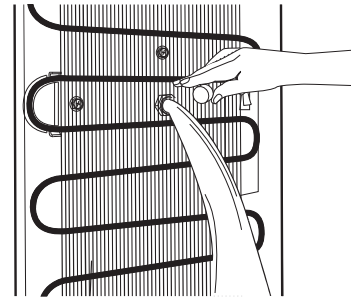

Leakage of Tank

If there are any leakages, drain the Cold Water through Water outlet.

Drain the hot water by removing the cap of Hot Water Drain Valve.



Cautions

Before draining hot water, wait one hour after turning power off to allow water to cool down. Otherwise, you may be burnt by hot water.

TROUBLESHOOTING

Please check the following items prior to asking for repair


Troubles	Things to check	Troubleshooting
Water does not come out (Cold Water & Room Temperature Water)	Is the bottle empty?	Replace with a new bottle.
	Is the air inside the Tank removed completely?	Press and hold the lever until the water comes out through Hot Water Faucet.
Cold water does not come out	Is the power cord unplugged?	Check the power cord.
	Is the power appropriately supplied? Has the circuit breaker tripped?	Check the Distribution board.
	Is the capacity for producing cold water exceeded by your demand? Is the remaining cooling time too short?	Reduce consumption to within capacity specified for the dispenser.
	Is the temperature too high?	Install in a place where the air is well circulated. Do not expose to direct sun light.
	Are there dust on the radiator condenser?	Clean the radiator condenser mounted on the back.
	Is the back of the dispenser too close to a wall?	Install with 15cm separated from a wall. Reinstall to allow the radiator condenser to be cooled down.
Dispenser is leaking	Is either the Room Temperature or Cold faucet leaking?	If the faucets are loose, firmly fasten them.
	Is the Hot Water Drain leaking?	Firmly fasten the cap of Hot Water Drain.
	Is the water condensing on the surface of Tank?	Install the dispenser in a cool place.
Bottle is leaking	Is the Tank leaking?	Take off the bottle and then drain the water (contact the shop you purchased the dispenser from).
	Is the bottle correctly inserted in the No-Spill System?	Put in the bottle correctly.
	Is the bottle broken or cracked?	Replace with a new bottle.
Noise	Is the dispenser making a vibrating noise?	Make sure that it is installed on a level solid horizontal surface.
	Is the dispenser in contact with a wall or other products?	Keep the designated space away from a wall or other products.

Repair & After Sales Service

Unplug the power cord and then contact our representative from whom you purchased the dispenser.


● Please inform us of following information ●

 - (1) Name (Company Name) and Address
- (2) How to contact the staff in charge of the dispenser
- (3) Details of problems encountered.

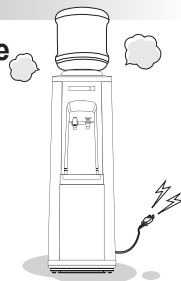

COOLER, PARTS AND ACCESSORIES

 Names of Each Component

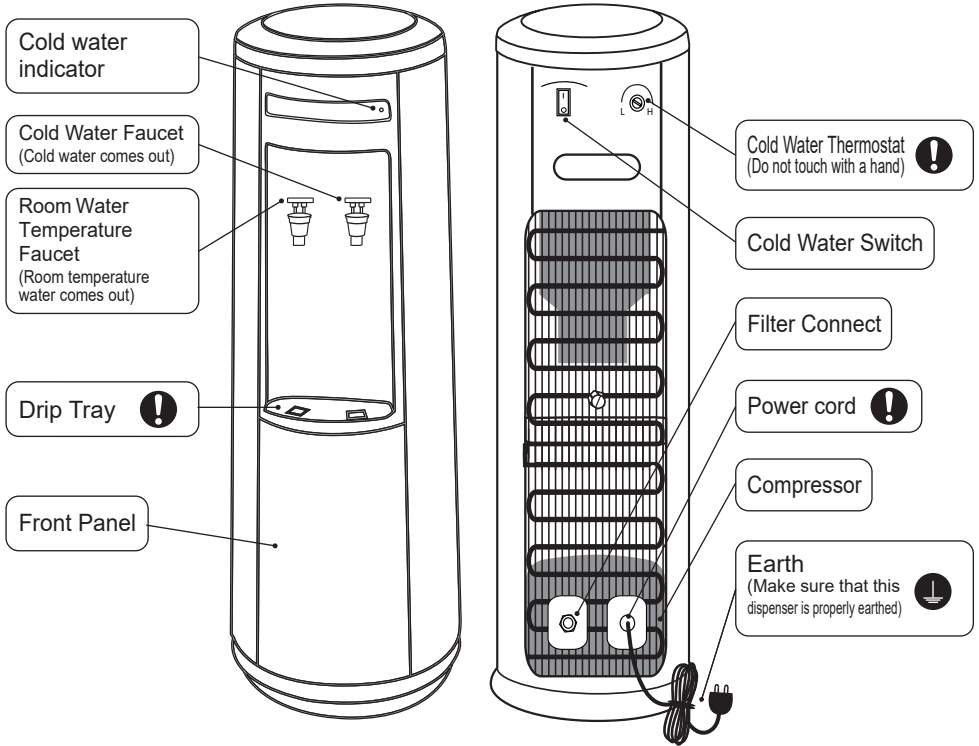

SPECIFICATIONS

Name		Room Temperature and Cold Water Dispenser			
Model Number		CL805			
Size(mm)		12.5"(W) x 13.5"(D) x 40.7"(H)			
Weight		45 LBS			
Power		220-240V 50Hz	220V 60Hz	100V 50/60Hz	115V 60Hz
Consumption Power		425W/Heating, 85W/cooling			
Cool Water	Continuous Discharging Capacity	1.4ℓ			
	Temperature	5°C ~ 10°C			
	Tank Capacity	About 3ℓ (Stainless Steel Tank)			

* For the improvement of product Brio reserves the right to change specifications without notice.

* You must confirm the correct voltage(V) and frequency(Hz) and then plug to the outlet. Check the proper voltage in the back of dispenser.

Manufactured by: Brio Water Technology, inc.