Congratulations!

You are now the proud owner of a Na Hoku watch, manufactured to the highest standards of Swiss technology and precision.

By insisting on only the finest component parts, and through the meticulous and constant control of all phases of the assembly process, we are able to assure you of a product of impeccable quality and value. If you handle this timepiece carefully, and give it the respect due any delicate instrument, it will provide you with many years of fine service, and will become a source of great pride and satisfaction.

KOA

The Koa wood inlay featured in many Na Hoku jewelry pieces is truly unique. Native to the Hawaiian Islands, Koa has been treasured since ancient times and embodies great spiritual significance in Island culture. Na Hoku uses only certified Koa wood responsibly sourced in Hawaii.

The strength and resilience of Koa encompasses many meanings, including brave, bold and fearless.



Table of Contents

mportant Precautions		. 04
Settings & Operation		. 06
Models without Second Hands		. 06
Models with Second Hands		. 06
Models with Calendar		. 07
Models with Moonphase		. 08
Models with Chronograph		. 11

Servicing Your Timepiece .			14
Battery Replacement			14
actory Service			14
Out of Warranty Service			15
hree-Year Limited Warranty			16

Since we offer a variety of models, you may need to refer to the additional instruction sheets inserted into this booklet for your particular model.

Important Precautions

- Please be sure not to expose your watch to water, unless it is marked with WATER RESISTANT on the case back.
- Always keep the crown fully pushed in, as in the outer position the watch will not run.
- If your watch has a screw down crown (usually featured on professional diving models), be sure to keep it in the locked position, except when setting the time or date. Failure to do so can result in water damage to the watch movement, and the voiding of your warranty. To lock the crown, press it inward (towards case) and turn it several times in a clockwise direction, until it stops. To unlock the crown (to set date or time), simply turn several times in a counterclockwise direction.
- Do not attempt to open the watch to replace the battery yourself, or for any reason, as
 this operation must be performed by a qualified jeweler under very controlled dust
 free conditions.
- Do not attempt to wind your watch manually as it is battery operated, and does not require winding.
- Always have crown, crystal, or case back replaced at once, when damaged, to prevent exposure to dust or humidity.






Settings & Operation

MODELS WITHOUT SECOND HANDS

(Refer to Drawing A)

To set the time:

- Pull out the crown to position (2).
- Turn the crown in either direction to set the correct time.
- Return the crown to position (1).

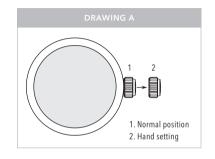

MODELS WITH SECOND HANDS

(Refer to Drawing A)

To set the time:


- Pull the crown out to position (2), causing the second hand to stop. We recommend that
 you start the procedure with the second hand at 12 o'clock.
- Turn the crown in either direction to set the correct time.
- Set the watch one minute ahead and when the exact time is reached, press the crown all the way in to position (1). Your watch will now be set to the second.

MODELS WITH CALENDAR

(Refer to Drawing B)

To set the time:

- Pull the crown out to position (3), causing the second hand to stop. We recommend that you start the procedure with the second hand at 12 o'clock.
- Turn the crown clockwise until the calendar changes. This will indicate that the watch is now in AM time mode.
- Proceed to set the watch to the correct time by turning the crown clockwise (if correct time is PM then you must advance the hour hand one turn past 12 o'clock).
- Set the watch one minute ahead and when the exact time is reached, press the crown all the way in to position (1). Your watch will now be set to the second.

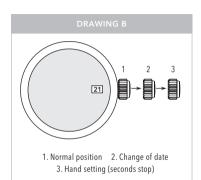

To set the date:


- Pull out crown to position (2).
- Turn the crown clockwise to set date.
- Return the crown to position (1).

MODELS WITH MOONPHASE

(Refer to Drawing D)

Precautions

- Pushbuttons A & B and crown should never be operated under water.
- Calendar functions should not be applied between 11:30pm and 5:30am, as the automatic switching mechanisms are in progress at this period. Pressing the pushers during this time span may damage the watch movement.

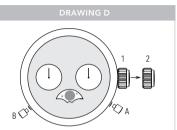


Normal position 2. Hand Setting (seconds stop)
 A. Date corrector B. Weekday corrector

FULL MOON DATES (GMT)												
	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sep	Oct	Nov	Dec
2014	16	15	16	15	14	13	12	10	09	08	06	06
2015	05	04	05	04	04	02	02, 31	29	28	27	25	25
2016	24	22	23	22	21	20	19	18	16	16	14	14
2017	12	11	12	11	10	9	9	7	6	5	4	3

To set the Moonphase:

- Pull the crown out to position (2).
- Rotate hour and minute hands clockwise past midnight until the moon is positioned in the center of the moon phase indicator. Continue rotating hands until 7:00am, so that it is safely past the time during which calendar functions should not be changed.
- Use the quick change to correct the date (pusher A) and weekday (pusher B) to that of the last full moon (see table on previous page).
- Rotate hour and minute hands clockwise until the current date is reached. Then set the
 exact time.
- Press the crown all the way in to position (1).

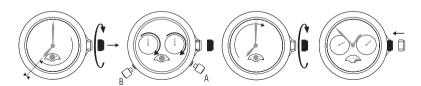

To set the time:

- Pull the crown out to position (2), causing the second hand to stop. We recommend that you start the procedure with the second hand at 12 o'clock.
- Turn the crown clockwise until the calendar changes. This will indicate that the watch is now in AM time mode
- Proceed to set the watch to the correct time by turning the crown clockwise (if correct time is PM then you must advance the hour hand one turn past 12 o'clock).
- Set the watch one minute ahead and when the exact time is reached, press the crown all the way in to position (1). Your watch will now be set to the second.

To quick change the Date:

- Never set/correct the date between 11:30pm and 5:30am.
- Pull the crown out to position (2).
- Press pusher (A) until the correct date is reached.
- Press the crown all the way in to position (1).

To quick change the Weekday

- Never set/correct the date between 11:30pm and 5:30am.
- Pull the crown out to position (2).
- Press pusher (B) until the correct date is reached.
- Press the crown all the way in to position (1).

AUTOMATIC CALENDAR CHANGES

Day: TUE-SUN 12:00am MON 12:15am

Date: 2:15am


Moon phase: 8:00pm

MODELS WITH CHRONOGRAPH

(Refer to Drawing E)

To set the time:

- Pull the crown out to position (3), causing the second hand to stop. We recommend that you start the procedure with the second hand at 12 o'clock.
- Turn the crown clockwise until the calendar changes. This will indicate that the watch is now in AM time mode.
- Proceed to set the watch to the correct time by turning the crown clockwise (if correct time is PM then you must advance the hour hand one turn past 12 o'clock).
- Set the watch one minute ahead. When the exact time is reached, press the crown all the way in to position (1). Your watch will now be set to the second.

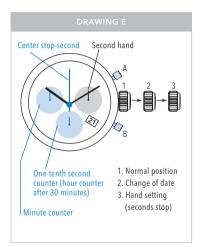

To set the date:

- If you change the date between 9:00pm and 12:00am, please note that the date must be set to that of the following day as the automatic date change will not occur at midnight.
- Pull out crown to position (2).
- Turn the crown clockwise to set date
- Return the crown to position (1).

Chronograph basic function (start/stop/reset):

- To start timing press pusher (A).
- To stop timing press pusher (A).
- To reset the counters, press pusher (B). The three chronograph hands will be reset to their zero positions.

Chronograph accumulated timing:

- Press pusher (A) to start timing.
- Press pusher (A) to stop timing.
- To keep accumulating time, continue to press pusher (A) to restart and stop time.
- Press pusher (B) to reset counters.

Chronograph interval timing:

- Press pusher (A) to start timing.
- Press pusher (B) to display interval. Timing continues in the background.
- Press pusher (B) again, the 3 chronograph hands are quickly advanced to the new interval time.
- · To continue to record intervals, continue to press pusher (B).
- Press pusher (A) to stop timing. The final time is displayed.
- Press pusher (B) to reset counters.

Adjusting the chronograph hands to zero position:

If one or several chronograph hands are not in their correct zero positions and have to be adjusted, for example, after a battery change.

- Pull out crown to position (3).
- Press pusher (A) and pusher (B) simultaneously and keep depressed for at least 2 seconds. The center stopsecond will rotate 360° indicating that corrective mode is activated.
- If needed, adjust the center stop-second by pressing pusher (A). Step adjust with a quick press, or hold down the pusher to continuously advance.
- Move to the next hand by pressing pusher (B).

- If needed, adjust the one-tenth second counter by pressing pusher (A). Step adjust with a quick press, or hold down the pusher to continuously advance.
- Move to the next hand by pressing pusher (B).
- If needed, adjust the minute counter by pressing pusher (A). Step adjust with a quick press, or hold down the pusher to continuously advance.
- Return the crown to position (1).

Servicing Your Timepiece

BATTERY REPLACEMENT

Your watch is powered by a 1.5 volt silver oxide battery or a 3 volt lithium battery, and will run for one year or more without winding or battery change. When the battery is exhausted your watch will stop, or on models with the early warning EOL (End-Of-Life) feature, the second hand will start skipping. Be sure to replace the battery immediately with a qualified jeweler or through our factory service option, as a dead battery may eventually leak and damage your watch. Under no circumstances attempt to replace the battery yourself!

FACTORY SERVICE / IN-STORE

Most NaHoku watches can be sized (shortened or lengthened) by either a certified watchmaker or trained NaHoku store personnel. Should your watch require servicing during the warranty period or thereafter, you can bring it into a Na Hoku store.

- Visit www.nahoku.com to find a store location near you.
- Make sure to bring a copy of your sales slip with you.

FACTORY SERVICE / BY MAIL

If you would like to send your watch to us for repair or refurbishment please be sure that it is packaged securely with instructions containing the following information:

- Your name.
- Ship-To address (to avoid delay, please be sure that someone will be available at

your Ship-To address to sign for your delivery when we return your watch to you).

- Telephone number(s).
- E-mail address (please be sure to provide your e-mail address to enable us to contact you).
- A copy of the receipt or receipt information (required for warranty repairs).
- A description of the repair/refurbishment needed.
- Please insure your package as necessary and send it to NHI Customer Service (see address below).

Our Customer Service department will contact you to let you know how long it will take to complete your repair, what the repair charges will be (for non-warranty repairs), and the cost of return shipping. Please be sure to provide your e-mail address to enable us to contact you.

NHI Customer Service 3049 Ualena Street, 12th Floor Honolulu, HI 96819-1942

Contact us by phone: 1-800-260-3912

Contact us on the web: www.nahoku.com

THREE-YEAR LIMITED WARRANTY

Your timepiece is warranted for three years from the date of purchase, against failures due to defective materials or workmanship, under normal use. During this three year period, we will repair such defects, free of charge (except the fee for mailing and handling), provided that the timepiece has been used and operated in accordance with the instructions in this booklet.

This warranty does not cover the free repair or replacement of cases, batteries, watchbands, straps, dials, crowns, clasps, or crystals, etc., since such items are subject to the wear and tear of daily use. The warranty is void if the watch has been tampered with, abused, exposed to moisture (for watches which are not marked water-resistant) or subjected to extreme conditions for which it was not designed, or if other than factory genuine parts have been used.

Please be sure to retain a copy of your original sales slip.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH VARY FROM STATE TO STATE.