

标记	更改内容	区域	更改文件编号	日期	登记	审核
△						

普通尺寸公差	公差等级	>0.5~6	>6~30	>30~120	>120~315	>315~1000	>1000~2000
	A级	±0.05	±0.1	±0.15	±0.2	±0.3	±0.5
	B级	±0.1	±0.2	±0.3	±0.5	±0.8	±1.2
	C级	±0.2	±0.5	±0.8	±1.2	±2.0	±3.0
	D级	±0.5	±1.0	±1.0	±1.5	±3.0	±4.0

143 mm
143 mm

全部 6.3

# SNDOAS

INSTALLATION AND USER'S MANUAL


**SNDOAS**  
 GLOBAL ELECTRICAL HK TRADING LIMITED  
 ROOMS 1318-19 HOLLYWOOD PLAZA  
 610 NATHAN ROAD  
 MONGKOK KL HONG KONG  
 999077

Customer Service: E-mail: [sndoas.service@outlook.com](mailto:sndoas.service@outlook.com)

210 mm

说明书框住内容有变

技术要求：  
 1.字体要求印刷清晰，不能出现错印，漏印现象。  
 2.尺寸按规格要求。  
 3.印刷版面参照电子档。

项目	批准	校核	设计	重要零件	材质	80克双胶纸	订单编号	PI-0150-23-06	
签字				服务零件	规格	143*210	料号	B53-TF40-2048-02-XX	
日期				安规零件	表面处理		图号	C	
<b>中山市甜美电器有限公司</b> ZhongShan Tianmei Electrical Appliances Co.,Ltd				比例		数量	重量	零件名称	2048说明书 1/1
				 第一角法	单位	mm	图幅		



## **CONTENT**

<i>INTRODUCTION</i> .....	2-3
<i>SAFETY PRECAUTION</i> .....	2-3
<i>INSTALLATION INSTRUCTIONS</i> .....	4
<i>AIR OUTLET INSTALLATION METHOD</i> .....	4
<i>SLIM MODEL INSTALLATION</i> .....	4-7
<i>OPERATION</i> .....	7-8
<i>MAINTENANCE</i> .....	9 -10
<i>TROUBLESHOOTING</i> .....	11
<i>ENVIRONMENTAL PROTECTION</i> .....	11

## **INTRODUCTION**

### **INTRODUCTION**

***Thank you for choosing this cooker hood.***

*This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.*

*In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and usage.*

### **SAFETY PRECAUTION**

- *Never let the children operate the machine.*
- *The cooker hood is for home use only, not suitable for barbecue, roast shop and other commercial purpose.*
- *Clean the cooker hood after the specified time (suggestion: every 2 months) according to the instruction manual and keep the unit from danger of burning. There is a fire risk if cleaning is not carried out in accordance with the instructions.*
- *Please keep the kitchen room with good convection before connecting this appliance; please check that the power supply cord is undamaged. A damaged supply cord must be replaced by qualified service personnel only.*
- *Regulations concerning the discharge of air have to be fulfilled.*
- *This appliance can be used by children aged from 8 years and above and also the persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.*
- *If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.*
- *There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels; the range hood is only intended to be installed over a hob with no more than four hob elements; The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels*



#### **CAUTION:**

***Accessible parts may become hot when used with cooking appliance.***

#### ***Electrical Shock Hazard***

*Only plug this unit into a properly earthed outlet.*

*If you have doubts, seek advice from a suitably qualified engineer.*

Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases.

These gases can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.



**CAUTION:**

Accessible parts may become hot when used with cooking appliance.


**Electrical Shock Hazard**


Only plug this unit into a properly earthed outlet.


If you have doubts, seek advice from a suitably qualified engineer.


- Lamp type: L09 / L11;
- Shape description: round / rectangle;
- Rated wattage of the intended lamp: 1.5W;
- Max wattage of a potential replacement lamp: 1.5W;
- Rated voltage or voltage range of lamp or for pre-heat starting fluorescent lamp starter replacement detail: 110-240V;
- Nominal dimension of lamp: 68mm / 34.5 \* 120mm.

**Hardware Included**

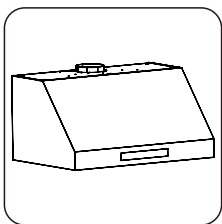

 × 8  
St4 × 30

 × 8  
φ 8 × φ 35

 × 4  
1 × φ 5.2 × φ 15


**Tools Required**



Pencil



Measuring tape

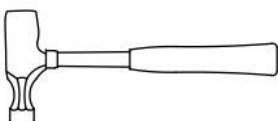

Hammer



Screwdriver



Level




Electric drill or powered screwdriver

## **INSTALLATION INSTRUCTION**

### **Prepare for installation:**


**Warning:** Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

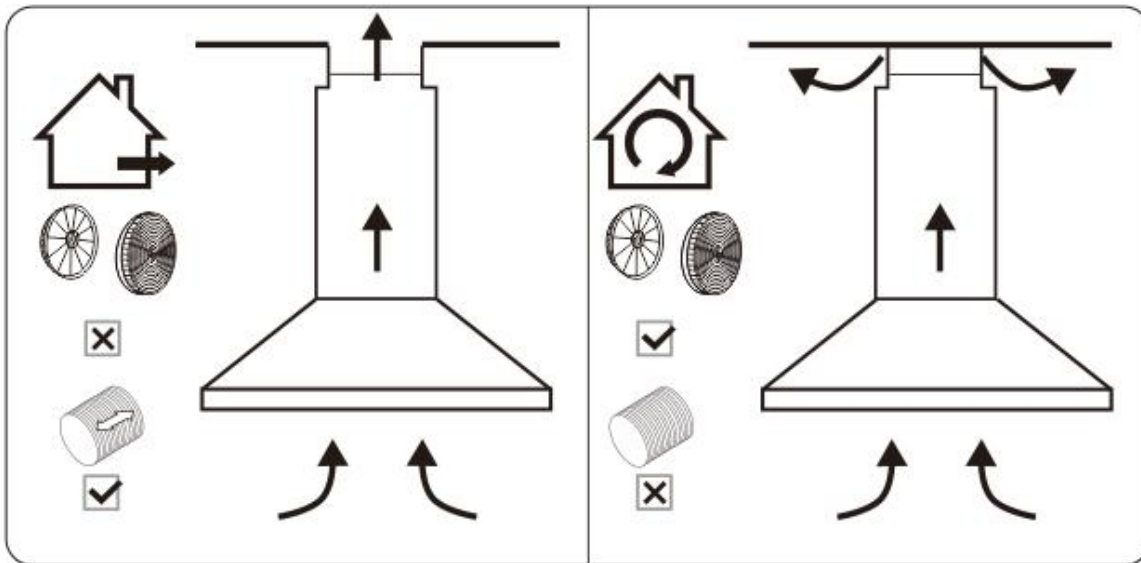


***DUCTED OPTION***

***RECIRCULATION OPTION***

a. If you have an outlet to the outside, your cooker hood can be connected as above picture by means of a pipe (with an interior diameter of 150mm). If you don't have an outlet to the outside, you can go with recirculation mode by using carbon filter.

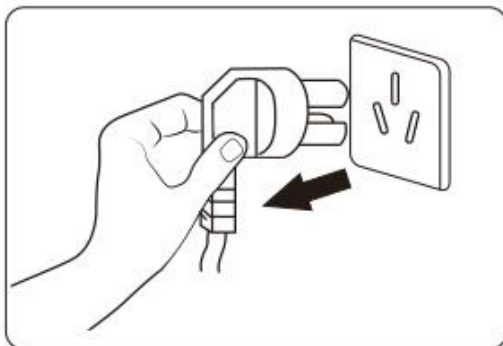

b. Before installation, turn the unit off and unplug it from the outlet.

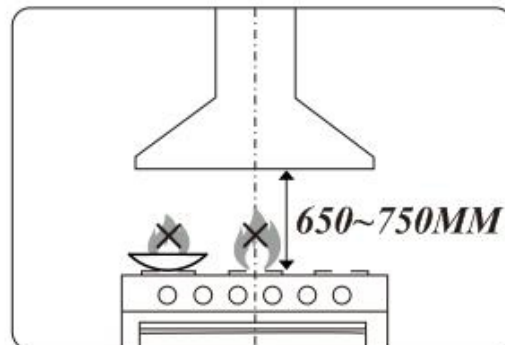


c. The cooker hood should be placed at a distance of 650~750 mm above the cooktop for the best effect.



***Do not flame under the range hood.***


## **SLIM MODEL INSTALLATION**

### ***Air Flow Flapper Installation***

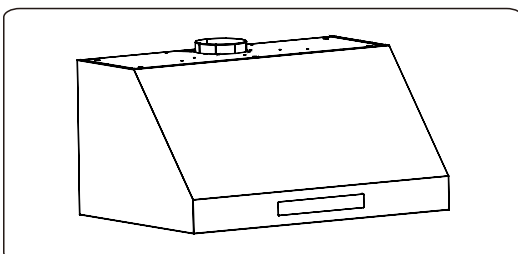


Install the non-return air flap on top of hood with 4xST 4x6 screws


## Two methods for installation(A&B)

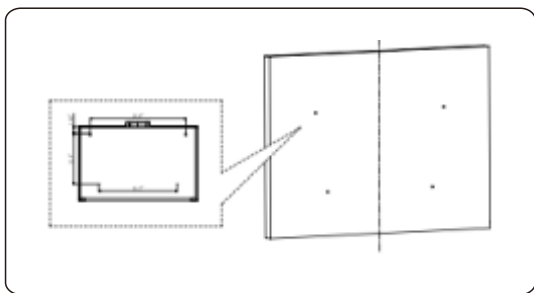


The distance between the stove surface and the underside of the range hood must be in the range of 25.6"-29.5". Users choose the installation height according to their own needs, draw the installation center line on the wall, and then mark the position of the 4 holes on the wall according to the installation size shown in the assembly template.

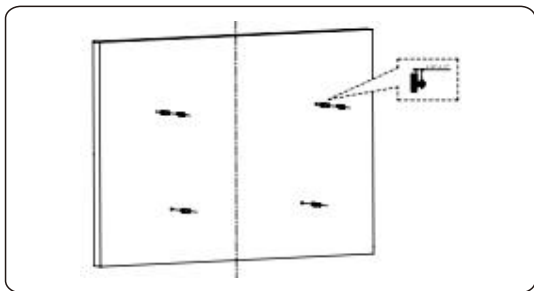

Drill 4pcs Ø8mm holes on the wall, Then take out 4pcs plastic wall anchors and two ST4\*30 screws. Put the 4pcs plastic wall anchors into the 4 holes respectively, and tighten 2pcs ST4×30 screws to the upper 2 holes. into the plastic wall anchors (screws should not be completely attached to the wall, to reserve 0.08"-0.12" distance).

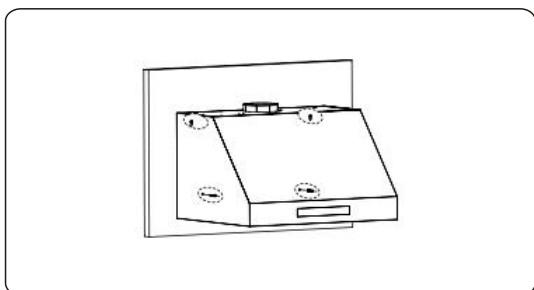

Place the hood onto the tighten screws, and tighten 2pcs ST4×30 screws to the bottom 2 holes.

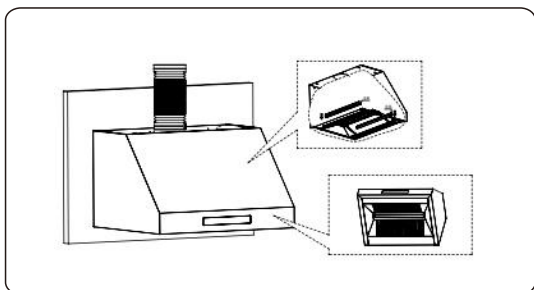

Take out the long oil cup (2PCS), baffle filter (4PCS) and pipe (1PCS) from the carton and install them on the range hood to complete the installation.

### **i** Note

- 1. The extensible pipe are optional accessory, not supplied.**
- 2. Take off protection film before installation.**
- 3. There are 2 methods for ventilation, including horizontal ventilation and vertical ventilation. Please pay attention to the ventilation method when installation.**

**Methods B (Cabinet only):**

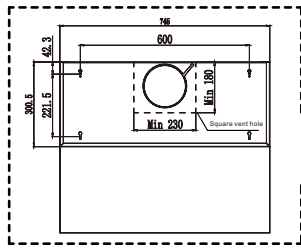


Figure 1



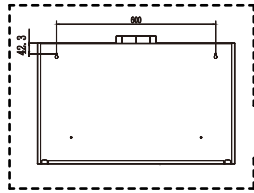



Figure 2

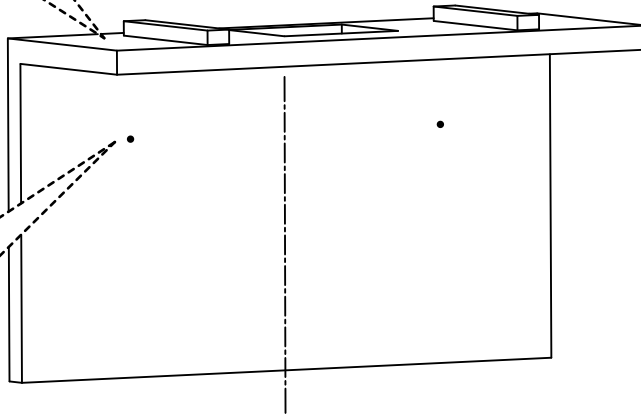


The distance between the stove surface and the underside of the range hood must be in the range of 25.6"-29.5", Users choose the installation height according to their own needs, draw the installation center line on the back board, and then mark the position of the 2 holes according to the assembly template as Figure 1, Add batten roll (needn't if the cabinet itself is thick enough) to the cabinet as shown in Figure 2, and cut the square vent hole in bottom cabinet.

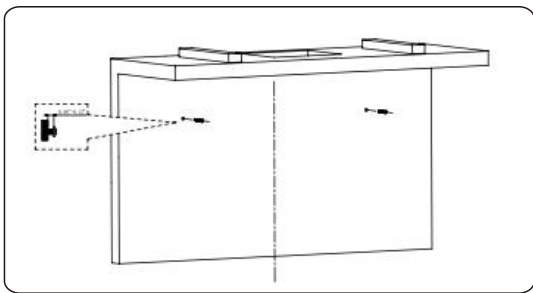


Take out 2pcs ST4\*30, and put them on the marked position (the screws should not be completely close to the wall, 0.08"-0.12" distance should be reserved).

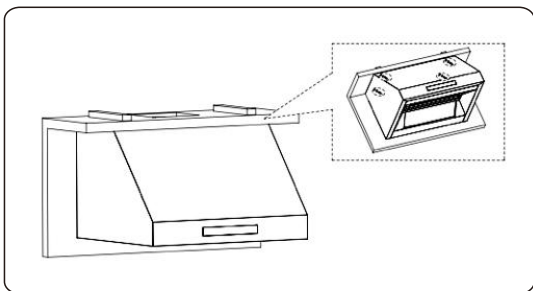

Place the hood onto the tighten screws, take out 4pcs ST4\*30 screws and 4pcs gaskets, and then push the hood close to the board until it is close fitting to the upper cabinet, and then punch the gaskets and screws in the corresponding positions of 4 holes according to the above figure.

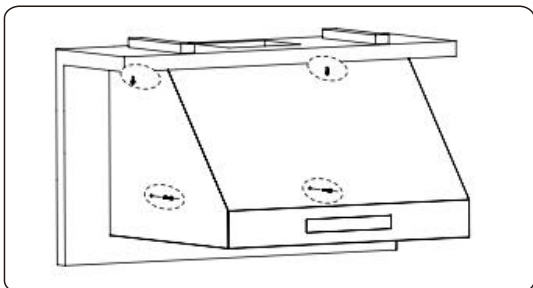


Place the hood onto the tighten screws, and tighten 2pcs ST4×30 screws to the bottom 2 holes.

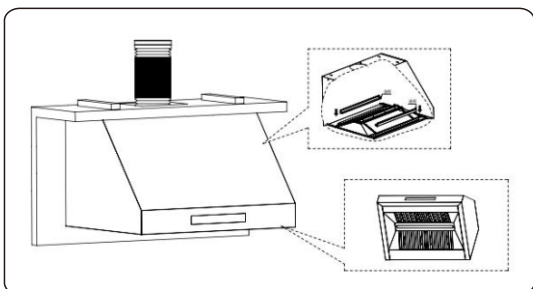

Take out the long oil cup (2PCS), baffle filter (4PCS) and pipe (1PCS) from the carton and install them on the range hood to complete the installation.



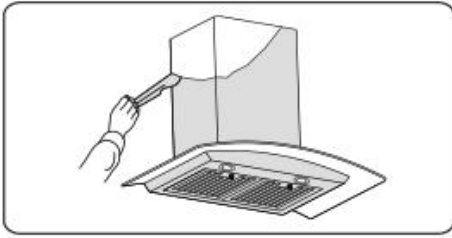

**BEFORE USE**  
 Please remove the white/blue protective film on the range hood, chimney covers and baffle filters. (Only for stainless steel finish)

此处有变

**OPERATION**

**HOW TO USE YOUR RANGE HOOD**

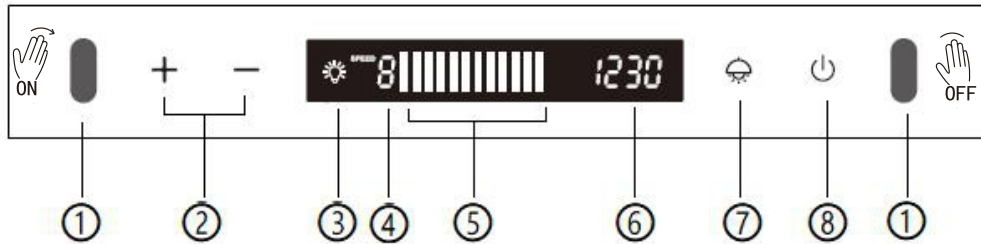







Figure 6


- ① Sensors of gesture switch.
- ② Press “+” or “-” to increase or decrease fan speed level to your desired setting. The fan speed level is 1~3.
- ③ Indicator light on.
- ④ The running fan speed levels.
- ⑤ Indicator of running status. The LED lights turn on one by one from left to right, and then turn off one by one from left to right, and so on. The speed of LED lights on increases with the increase of fan speed level.
- ⑥ timer

**Set the time:** When range hood is in the off state, press  for 3 seconds, the light indicator will be on, the “+” and “-” buttons will flash, and the "hour" on the display screen will flash. Touch “+” and “-” to set the "hour" (12 hours system). Touch  to confirm and enter the "Minute" setting. Touch “+” and “-” to set the "Minute" (press for a long time to quickly adjust). After setting is completed, touch the  to confirm, or while no operating system will automatically confirm within 10 seconds.



- ⑦ Touch this button once to turn on the light and again to turn off the light
- ⑧ On/Off button: When range hood is off, touch this button, the range hood will enter the standby mode and screen display "0". In the standby mode, touch this button turn off the range hood and the display screen will display time.

**Delay off function:** This range hood has delayed off function.

Touch  in the power-on state, the indicators will flash, the delay time will be displayed (5 minutes by default), and the countdown will start. At this time touch  again to shut down the range hood directly. Range hood will be off after the countdown end.

Touch  for 3 seconds to end the delayed off process.

**How to set delayed off time:**

In the off state, touch  for 3 seconds, and the screen will display "5:00" and flash. At this time, touch the "+" and "-" button to set the delayed off time (1-60 minutes). Then touch  to confirm the setting or automatically save setting after 10 seconds of no operation.

**How to control the range hood by gesture:** You can change the fan speed levels or turn on/off range hood with gestures without touching it.

In the off mode, move use your hand from the left to the right to change the speed level from 1-3 in circularly. (Hand should be at a distance of 11 to 15cm from the front of the control panel)

In the running state, move your hand from the right to the left, and the unit starts to turn off after a delay of 3 minutes, and the display screen flashes with 3:00. The unit will turn off when the countdown time end. In the process of delayed off, move your hand from the right to the left again to directly turn off the unit.

**CAUTION:** To complete an effective control action, the hand must completely brush two gesture sensors at one time.

## **MAINTENANCE**

*Before cleaning switch the unit off and pull out the plug.*

### **I. Regular Cleaning**


*Use a soft cloth moistened with hand-warm mildly soapy water or household cleaning detergent. Never use metal pads, chemical, abrasive material or stiff brush to clean the unit.*

### **II. LED Light Replacement**

*Turn the unit off and unplug the appliance.*

**CAUTION: LAMP UNIT MAY BE HOT!**


*WAIT UNTIL THE UNIT IS COOL. BEFORE attempting to replacethe LED lamps make sure the unit is powered off and UNPLUGGED.*

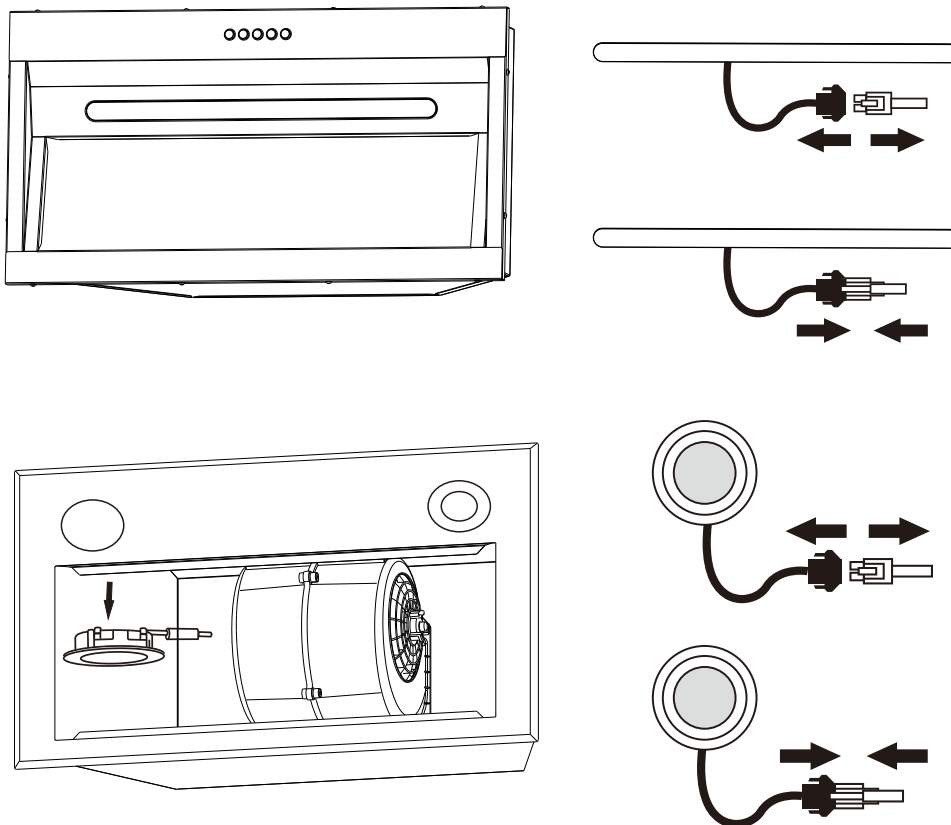


### **III. Aluminium and carbon filters replacement**

*In order to install the carbon filter, the grease filter should be detached first. Press the lock and pull it downward.*

**Aluminium filters:** *To avoid fires, clean thoroughly once a month or whenever the display pilot lights up (if fitted). To do so, remove the filters and soak in hot water and detergent for an hour. If using a dishwasher, position the filters vertically to improve the cleaning process.*

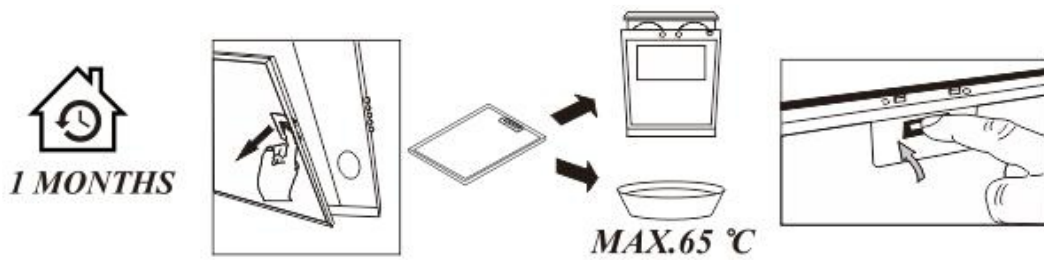

***Installation:*** Fix carbon filter into the unit and turn it in clockwise direction. Repeat the same on the other side.

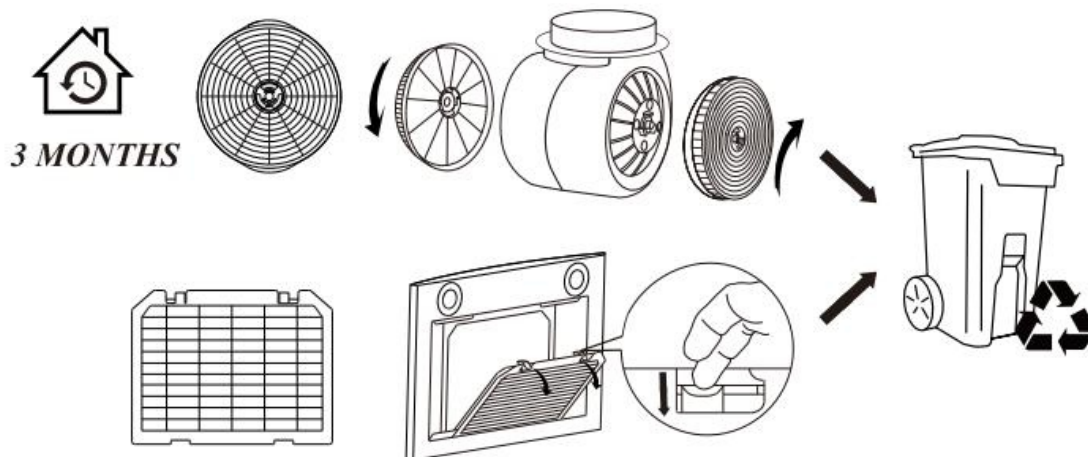

***Important Notice:***

1. Make sure the filter is securely locked. Otherwise, it would loosen and cause abnormal noise and danger.
2. Using carbon filter would reduce the air flow of the range hood.

***VI. Carbon filter life time:*** Suggest changing to new one every 3 months (According to different kitchen condition, the life time of carbon filter might be longer or shorter than 3 months).

## **TROUBLE-SHOOTING**

<b><i>Problem</i></b>	<b><i>Posible cause</i></b>	<b><i>Solution</i></b>
<i>Light on, but fan does not work</i>	<i>The fan blade is jammed.</i>	<i>Switch off the unit and repair by qualified service personnel only.</i>
	<i>The motor is damaged.</i>	
<i>Both light and fan do not work</i>	<i>Light bulb burn.</i>	<i>Replace the LED light with correct rating.</i>
	<i>Power cord is loose.</i>	<i>Plug into the power supply again.</i>
<i>Serious Vibration of the unit</i>	<i>The fan blade is damaged.</i>	<i>Switch off the unit and repair by qualified service personnel only.</i>
	<i>The fan motor is not fixed tightly.</i>	
	<i>The unit is not hung properly on the bracket.</i>	<i>Take down the unit and check whether the bracket is in proper location.</i>
<i>Suction performance not good</i>	<i>Too far distance between the unit and the cooktop.</i>	<i>Readjust the distance between 650-750mm.</i>

## **ENVIRONMENTAL PROTECTION**

*Waste electrical products should not be disposed of with household waste.  
Please recycle where facilities exist.  
Check with your Local Authority or retailer for recycling advice.*

