

Axus AXP2L Light Up Portable
Electronic Keyboard

Owner's Manual



NOTICE

Please read over the NOTICE before use!

⚠ NOTICE

- Dedicated power adapter shall be used, and in case of adaptor damage, replace it immediately
- The keyboard can only be disassembled by professionals, and no change can be made to the internal structure. In case of any functional abnormality during performance, stop performing immediately and send the keyboard to professionals for maintenance.
- When connecting the keyboard to other device, ensure both the keyboard and the device to be connected are powered off before connection.
- Do not turn and keep the volume to the maximum or to an uncomfortable degree for a long time when performing
- Keep the keyboard away from heat source to protect its parts from damage.
- Prevent liquid, dust, small particle and other foreign matters from entering the case of the keyboard, for which may result in element short circuit.
- Pull out the plug before cleaning the keyboard, and do not pull out the plug with wet hand.
- Please use dry and soft cloth to clean the keyboard. Paint, alcohol or other chemical solvents shall not be used for cleaning, for which may damage the keyboard surface.
- Please pull out the plug after performing or when the keyboard is left unused for a long time.
- **WARNING:** The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.



 
- Correct disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

	DC voltage
	Polarity of d.c. power connector
	Caution: Please refer for further information to the user manual


I. Panel Control and External Ports

● Top panel control

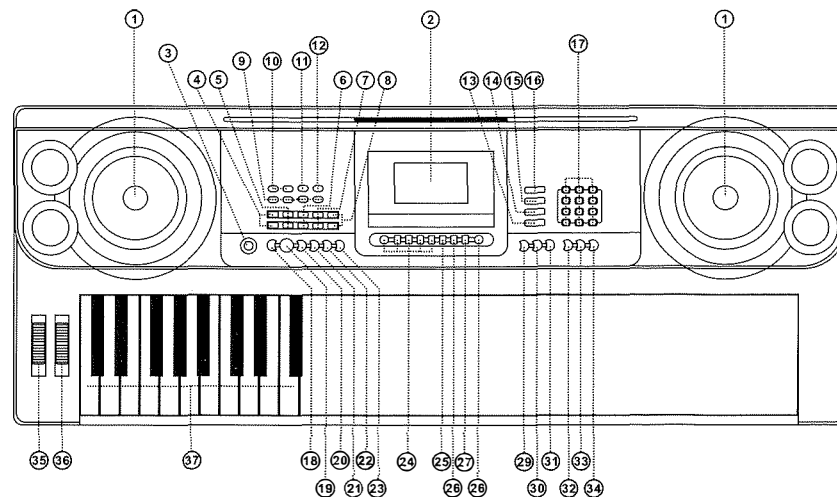

- | | | | | |
|-----------------|-----------------------|--------------|-------------|--------------|
| ① Loudspeaker | ⑨ Chord mat | ⑰ Numbers | ⑳ Program | ㉓ Follow |
| ② LCD display | ⑩ Tempo | ⑱ Sync | ㉔ Play | ㉖ Ensemble |
| ③ Power | ⑪ Key light | ⑲ Start/Stop | ㉕ Recording | ㉗ Pitch bend |
| ④ Master Volume | ⑫ Touch | ⑳ Fill-in | ㉘ Metronome | ㉙ Vibrato |
| ⑤ Chord Volume | ⑬ Keyboard Percussion | ㉑ Single | ㉚ Sustain | ㉜ Chord Zone |
| ⑥ Rhythm Volume | ⑭ Demo Song | ㉒ Fingered | ㉛ Dual | |
| ⑦ Transpose | ⑮ Rhythm | ㉓ Chord OFF | ㉜ SPLIT | |
| ⑧ Tuning | ⑯ Timbre | ㉔ Memory | ㉕ One Key | |

 ● Rear panel port

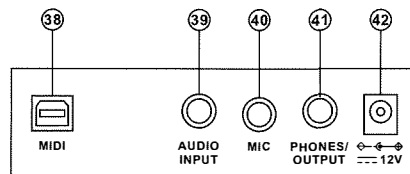

- ⑳ MIDI: USB-MIDI
- ㉑ AUDIO INPUT
- ㉒ MIC
- ㉓ PHONES/OUTPUT
- ㉔ DC 12V

II. Preparation before Playing

● AC/DC Power Adaptor

A dedicated AC/DC power adaptor shall be used. Connect the output end of the adaptor to the power port on the rear panel of the keyboard, and then the other end to the power socket. (Note: The input voltage of the adaptor shall be compatible with the power supply voltage)

● Audio Output / External Headphone

◆ Audio output: firstly, turn off the keyboard and the external audio devices, secondly, connect one end of the audio cable to the PHONES/OUTPUT port on the rear panel of the keyboard, and then connect the other end to the audio input port of the audio device.

◆ Headphone connection: When connecting a headphone to the PHONES/OUTPUT port on the rear panel of the keyboard, the loudspeaker will be disabled automatically. In this way, you can play the keyboard without disturbing others.

※ Note! When using headphone, do not turn up and keep the volume to the maximum for a long time, for which may cause hearing loss.

● Mic Input and Audio Input

◆ Mic input: connect a microphone to the MIC port, and then you can sing while playing the keyboard.

◆ With the stereo input function, sound signals from mobile phone, MP3 player, computer and other audio devices can be input into the keyboard system for playing. Firstly turn off the Keyboard, then, connect one end of audio cable to the output port of an audio device, and the other end to the AUDIO INPUT port on the rear panel of the Keyboard, finally, turn on the keyboard.

● MIDI Interface

The keyboard is provided with USB-MIDI interface, which can be used for connection with mobile phone and laptop. Firstly, download APP training software, and connect the keyboard with the intelligent equipment, which may facilitate training and learning.

Connection method:

The USB-MIDI interface on the keyboard can also be used for connection with music equipment and computer with MIDI. Melody played with this keyboard can be output to the computer, and further recording, composing and editing can be realized through computer and software. In addition, MIDI music stored in the computer can be input to the keyboard for playing.

Connection Method:

(1) Connect the keyboard and computer with common USB cable, and press the power ON/OFF button.

(2) Install the music editing software (such as CAKEWALK) in the computer, and launch the software, and then select MIDI input and output interface in the software.

III. Basic Playing Method

Press [Power ON/OFF], LCD screen will turn on and show the current tone, tempo, volume and other status. The luminous function is enabled by default.

● Key Light

With the luminous keyboard, when under the modes of playing, luminous keyboard three-step training, demo song playing and USB-MIDI music input, the keyboard will light on for instruction. The luminous function is defaulted to be enabled, press [KEY LIGHT] to enable or disable the luminous function.

● Master Volume Adjustment

Press [Master Vol ▲] or [Master Vol ▼] to turn up or turn down the master volume. Press [Master Vol ▼] and [Master Vol ▲] simultaneously to reset your keyboard to the default values.

The master volume can also control the rhythm volume and the chord volume.

● Timbre Selection

The keyboard provides 512 timbres, from "000" to "511" for your selection. When starting the keyboard, the timbre selection function will be activated automatically, and "Tone" will show on the screen. In the absence of "Tone", Press [TIMBRE] to enable to tone selection function. The timbre is defaulted to be "000", and it can be adjusted by pressing the corresponding number buttons or pressing the "+" / "-" buttons.

● Keyboard Percussion

Press [Keyboard Percussion] to activate the percussion function. Under this mode, users can play the keyboard to produce corresponding percussions. Press this button again to disable the keyboard percussion function.

● Playing Demos

65 demos are stored in the keyboard, from "000" to "064" for your selection. Press [Demo Song], and the demo song will play in order, and you can press the "+" / "-" buttons to select other demo.

When playing the songs, you can press the number buttons to select the corresponding demos, and the selected demos will play in a loop.

IV. Auto Rhythm

● Rhythm Selection

This Keyboard provides 260 rhythms, from "000" to "259" for your selection, and the default rhythm is "000". Press [Rhythm] to enable the rhythm selection function, and "RHYM" will show on the screen. Then press the number buttons or the "+" / "-" buttons to select other rhythms:

● Rhythm Control

1. Rhythm Enabling

- ◆ Press [start/stop] to start accompaniment.
- ◆ When the rhythm function is inactivated, press [Sync], metronome will flash on the screen. Then play any key in the chord key zone (the 1st-19th key, from left), the accompaniment rhythm will be activated.

2. Interlude

After the rhythm is activated, press [Fill-in] and an interlude will be automatically inserted into the rhythm.

3. Stop Rhythm

During the accompaniment rhythm, press [Start/Stop] to stop the accompaniment rhythm.

● Metronome

The metronome contains four tempos, 1/4, 2/4, 3/4 and 4/4, respectively. Press [Metronome] continuously to select four tempos one by one. Press [Metronome] again to stop the tempo.

● Tempo Adjustment

Press [Tempo +] or [Tempo -] to increase or decrease the rhythm speed, and press the two buttons at the same time to reset to the default.

● Rhythm Volume Adjustment

Press [Rhythm Vol ▲] or [Rhythm Vol ▼] to turn up or turn down the rhythm volume. Press [Rhythm Vol ▲] and [Rhythm Vol ▼] at the same time to reset to the default.

V. Auto Bass Chord

● Fingered Chord

Press [Fingered] to enable the chord function, and "Finger" will show on the screen. Under the rhythm activated mode, you can play in the chord key zone (the 1st-19th key, from left) with fingered chord fingering to obtain automatic chord accompaniment; while under the

rhythm disable mode, you can play chord accompaniment manually.

Press [Fingered] or [Chord OFF] to disable the chord function, and "Finger" will disappear from the screen.

 
● Single Chord

Press [Single] to enable the chord function, and "Single" will show on the screen. Under the rhythm activated mode, you can play in the chord key zone (the 1st-19th key, from left) with single chord fingering to obtain automatic chord accompaniment; while under the rhythm disable mode, you can play chord accompaniment manually.

Press [Single] or [Chord OFF] to disable the chord function, and "Single" will disappear from the screen.

Fingered Chord Fingering (C Key)

(The C key fingered chord fingering is as shown in the following figure, and the rest can be obtained by analogy)

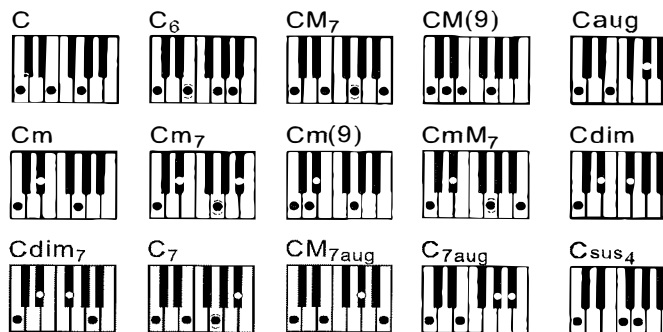

● Chord Volume Adjustment

Press [Chord Vol ▲] or [Chord Vol ▼] to turn up or turn down the chord volume. Press [Rhythm Vol ▼] and [Rhythm Vol ▲] at the same time to reset to the default.

● Chord Mat

During playing, you can press any of the Chord Mat buttons (1, 2, 3, 4) to add a section of broken background chord to enhance the melody.

Single Chord Fingering

	M	m	7	m7
C				
D ^b				
D				
E ^b				
E				
F				
F [#]				
G				
G [#]				
A				
B ^b				
B				

VI. Effect Control

● Transposing

With the transposing function, you can play music of other tunes with C-tune fingering method. Press [Transpose ▼] to decrease the tone by half (minor second), and the tune in C-tune keyboard zone will change to B-tune. Press [Transpose ▲] to increase the tone by half (minor second), and the tune in C-tune keyboard zone will change to #C tune or bD tune. By pressing [Transpose ▼] twice, C-tune will shift to bB-tune; by pressing [Transpose ▲] five times, C-tune will shift to F-tune. Press [Transpose ▲] and [Transpose ▼] at the same time to reset to C-tune "0". Press [Transpose ▲] and [Transpose ▼] to adjust the level from "-6" to "6".

● Tuning

You can press [TUNING ▲] / [TUNING ▼] to conduct fine pitch correction by adjusting the fine adjustment level from "-99" to "99". Press the two buttons at the same time to reset to the default "00", and the it will back to the normal standard keyboard. This function is quite useful for tune correction during band ensemble.

● Sustain

Press [Sustain], "SUS" will show on the screen, and the sustain effect will be activated. Press [Sustain] again to disenable the sustain function, and "SUS" will disappear from the screen.

● Pitch Bend

The pitch bend can realize tonal variation. You can increase the pitch by turning up the pitch bend and decrease the pitch by turning down the same. When released, the pitch bend will go back to the center position, and the pitch will return to the standard state.

● Vibrato

When [Vibrato] is in the low position, the Vibrato function is disenabled. You can enable this function by turning up the bar, and 'VIB' will show on the screen. The Vibrato function can add vibrato effect for the instruments. You can increase or reduce the vibrator effect by tuning up or turning down [Vibrato].

● Dual

When the dual function is enabled, "Double" will show on the screen. Under this mode, you can obtain an overlaid tone effect. Press [Timbre] to shift between Timbre 1 and Timbre 2 as needed, and the corresponding "TONE 1" and "TONE 2" will show on the screen.

● Keyboard Splitting

When enabling the Split function, "Split" will show on the screen. 24 keys on the left will split from the keyboard, while the left keyboard zone will increase by one octave and maintain the original tone.

● Touch

Press [Touch] to enable or disable the touch function. This function is defaulted to be enabled, and "Touch" shows on the screen. With this function, you may enhance the expression of the melody. It may accurately reflect the force you need to apply on each note. The larger the force is, the louder the sound will be. When this function is enabled, the sound will be equal regardless of what the force you apply.

VII. Recording

● Recording

Press [REC] to enable the recording function, and "Record" will show on the screen. Under this mode all notes played will be recorded.

※ The recorded notes will be cleaned upon recording or shutdown of the keyboard.

● Stop Recording

- ◆ When the storage is full, "Full" will show on the screen, and recording will stop automatically.
- ◆ During the recording process, you can press [PLAY] to stop recording and play the recorded notes.
- ◆ Press [REC] to disable the recording function, and all recorded notes will be cleaned.

● Records Playback

- ◆ When the recording function is enabled, press the [PLAY] to playback the record.
- ◆ During playback process, you can press [PLAY] again to stop playback.

VIII. Rhythm Programming

● Rhythm Programming

Press [PROG] to enable the rhythm programming function. "Program" will show on the screen, and the keyboard percussion will be activated. Under this mode, you can create custom rhythms by playing the corresponding percussion keys.

※ The programmed rhythm will be cleaned upon reprogramming or shutdown of the keyboard.

● Stop Programming

- ◆ When the maximum of 32 pieces of percussion music are recorded, "Full" will show on the screen, and programming will stop automatically.
- ◆ During the programming process, you can press [PLAY] to stop programming and playback the programmed rhythm.
- ◆ Press [PROG] to disable the rhythm programming function and clean all programmed data.

● Programmed Rhythm Playback

- ◆ When the programming function is enabled, press [PLAY] to playback programmed rhythm.
- ◆ During playback process, you can press [PLAY] again to stop playback.

IX. Status Memory

With the status memory function, you can save the tone, tempo, speed and other parameters set during playing. This keyboard is equipped with 4 status memories, which can be flexibly called at any time during playing.

● Storage of Status Memory

Set the tone, rhythm and tempo as required, and then press [Memory] and one of [M1] to [M4] to save the current status.

● Calling of Status Memory

Press any one of [M1] to [M4] to call the parameters saved under this memory to replace the current status.

※ No power failure protection is provided for the saved contents, so the saved contents will loss after the electronic keyboard is restarted after power cut.

X. Intelligent Three-step Luminous Key Training

The intelligent training function consists of three steps, which can guide the learner to play the keyboard step by step. Firstly, the learner can practice by following the guidance of step one "One Key" to get familiar with the melody and beat, and then move to the step two "Follow". After being able to play the melody with the keyboard, the learner may forward the

step three “Ensemble”, and through practice, the leaner may finally be able to ensemble with others.

● Training 1: One Key

Press [One Key] to enable the one key training function, and “Step 1” will show on the screen. You can press the “+”/“-” buttons to select the song to be learned.

Single Key training aims at duration learning, and there is no requirement for pitch or correctness. This mode allows mistakes when playing the keys, but the keyboards still plays correct notes, and the luminous keys will light on according to the correct notes of the melody, indicating the correct note to be played, and you can play by following the guidance of the luminous key. In a meanwhile, the key zone in the screen will also show the correct notes.

Press [One Key] to disenable the training function.

● Training 2: Follow

Press [Follow] to enable the Follow training function, and “Step 2” will show on the screen.

You can press the number buttons or the “+”/“-” button to select the song to be learned. The luminous keys will light on according to the correct notes of the melody, indicating the correct note to be played, and you can play by following the guidance of the luminous key.

You can also learn how to play by following the indicators in the key zone of the screen. In case of misplay, the melody will stop until you play the correct notes.

Press [Follow] again to disenable the follow training function.

● Training 3: Ensemble

Press [Ensemble] to enable the Ensemble training function, and “Step 3” will show on the screen. You can press the number buttons or the “+”/“-” buttons to select the song to be learned.

The ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble, and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. The luminous keyboard will light on according to the main melody notes, indicating the note to be played, and you can play by following the guidance of the luminous key. The keyboard zone in the screen will show the correct note and tempo.

Press [Ensemble] again to disenable the Ensemble training function.

I. Timbre Table

Piano	070 Bassoon	139 China Percussion 1	213 High Trombone
000 Acoustic Grand Piano	071 Clarinet	140 China Percussion 2	214 Baritone Trombone
001 Bright Acoustic Piano	Flute	Rhythm	215 Synth Trombone
002 Electric Grand Piano	072 Piccolo	141 Rock Grand Piano	216 Violin French Horn
003 Honky-tonk Piano	073 Flute	142 Electronic Organ	217 French Horn Ensemble
004 Rhodes Piano	074 Recorder	143 Psychedelic Electronic	218 Electronic French Horn
005 Chorused Piano	075 Pan Flute	144 Water Jean	219 Synth French Horn
006 Harpsichord	076 Bottle Blow	145 Bright Guitar	220 Psychedelic Synth Brass
007 Clavichord Colorpercussion	077 Shakuhachi	146 Orchestra Piccolo	221 Distortion Synth Brass
008 Celesta	078 Whistle	147 Heavy Metal Guitar	222 Vibraphone Synth Brass
009 Glockenspiel	079 Ocarina	148 Crystal Guitar	223 Rock Synth Brass
010 Music Box	Lead	149 Queer Electric Piano	224 Synth Muted Trumpet
011 Vibraphone	080 Lead 1 (square)	150 Bright Bass	225 Soprano Sax ensemble
012 Marimba	081 Lead 2 (sawtooth)	151 Rock Electric Bass	226 Hit Soprano Sax
013 Xylophone	082 Lead 3 (callopo lead)	152 Psychedelic Bass	227 Synth Soprano Sax
014 Tubular Bells	083 Lead 4 (chiff lead)	153 Rhythm Electric Bass	228 National Sax
015 Dulcimer	084 Lead 5 (charang)	154 Heavy Metal Bass	229 Metal Sax
Organ	085 Lead 6 (voice)	155 Magic Electronic	230 Baritone Sax Ensemble
016 Hammond Organ	086 Lead 7 (fifths)	156 Bright Violin	231 Crystal Sax
017 Percussive Organ	087 Lead 8 (bass lead)	157 Atonic Violin	232 Soft Baritone Sax
018 Rock Organ	Pad	158 Heavy Bass Orchestra	233 Synth Baritone Sax
019 Church Organ	088 Pad 1 (new age)	159 Synth Clarinet	234 Heavy metal Sax
020 Reed Organ	089 Pad 2 (warm)	160 Interactive Lead	235 Church Oboe
021 Accordion	090 Pad 3 (polysynth)	161 Orchestral Keyboard	236 Oboe ensemble
022 Harmonica	091 Pad 4 (choir)	162 Bagpipes	237 Bass Oboe
023 Tango Accordion	092 Pad 5 (bowed)	163 Synth Banjo	238 Bright Oboe
Guitar	093 Pad 6 (metallic)	164 Japan Synth	239 Distortio Oboe
024 Acoustic Guitar (nylon)	094 Pad 7 (halo)	165 Church Piano	240 English Horn Ensemble
025 Acoustic Guitar (steel)	095 Pad 8 (sweep)	166 Church Electric Piano	241 Pizzicato English Horn
026 Electric Guitar (jazz)	FX Effect	167 Synth Piano	242 Diplophonia English Horn
027 Electric Guitar (clear)	096 FX 1 (rain)	168 Baritone Piano	243 Bright English Horn
028 Electric Guitar (muted)	097 FX 2 (soundtrack)	169 Piano PAD	244 Synth English Horn
029 Overdriven Guitar	098 FX 3 (crystal)	170 String Piano	245 Synth Electronic
030 Distortion Guitar	099 FX 4 (atmosphere)	171 Metal Piano	245 Psychedelic Synth Lead
031 Guitar Harmonics	100 FX 5 (brightness)	172 Light Rhythm Piano	246 Vibraphone Synth Lead
Bass	101 FX 6 (goblins)	173 Electric Piano Pad	247 Marimba Synth Lead
032 Acoustic Bass	102 FX 7 (echoes)	174 Classical Piano	248 Metal FX
033 Electric Bass(finger)	103 FX 8 (sci-fi)	Effect Class Guitar	249 Electronic FX
034 Electric Bass (pick)	104 Sitar	175 Organ Guitar	250 Electronic String Ensemble
035 Fretless Bass	105 Banjo	176 Electric Guitar	251 Wind FX
036 Slap Bass 1	106 Shamisen	177 Synthesis Nylon Guitar	252 Clarinet FX
037 Slap Bass 2	107 Koto	178 Synth Electronic Guitar	253 Organ FX
038 Synth Bass 1	108 Kalimba	179 Bright Clean Guitar	254 Crystal FX
039 Synth Bass 2	109 Bagpipe	180 Orchestra Guitar	255 Synth Shamisen
String	110 Fiddle	181 Psychedelic Guitar	256 Electronic Shamisen
040 Violin	111 Shanai	182 Bright Organ	257 Bright Sitar
041 Viola	Percussion	183 Pick Organ	258 Whistle Accord
042 Cello	112 Tinkle Bell	Electronic Symphony	259 Rhythm Nation
043 Contrabass	113 Agogo	184 Synth Accordion	260 Bright Koto
044 Tremolo Strings	114 Steel Drums	185 Bright Violin	261 Koto Lead
045 Pizzicato Strings	115 Woodblock	186 Stringed Violin	262 Diplophonia Koto
046 Orchestral Harp	116 Taiko Drum	187 Trill Violin	263 Baritone Koto
047 Timpani	117 Melodic Tom	188 Electronic Violin	264 Synth Koto
Ensemble / Chorus	118 Synth Drum	189 Large Violin	Bed Pad
048 String Ensemble 1	119 Reverse Cymbal	190 Rhythm Orchestra	265 Environmental Lead
049 String Ensemble 2	Sound Effects	191 Pizzicato Violin	266 Metal Lead
050 Synth Strings 1	120 Guitar Fret Noise	192 Pizzicato Ensemble 1	267 Orchestra Lead
051 Synth Strings 2	121 Breath Noise	193 Pizzicato Ensemble 2	268 Glockenspiel Lead
052 Choir Aahs	122 Seahorse	194 Percussion Band	269 Bass Lead
053 Voice Oohs	123 Bird Tweet	195 BaritoneSynthContrabass	270 Fifths Lead
054 Synth Voice	124 Telephone Ring	196 Bass Flute	271 Wind Lead
055 Orchestra Hit	125 Helicopter	197 Distortion Contrabass	272 Atmosphere Lead
Brass	126 Applause	198 Contrabass Lead	273 Sharp Lead
056 Trumpet	127 Gunshot	199 Violin Lead	274 Bright Lead
057 Trombone	128 Percussion	200 Cello Lead	275 East Nation Pad
058 Tuba	Percussion instrument	201 Pizzicato Rhythm	276 Atmosphere Pad
059 Muted Trumpet	128 Percussion	202 High Harp	277 Electric Bass Pad
060 French Horn	Nation tone	203 Harp Ensemble	278 Electric Piano Pad
061 Brass Section	129 Bangdi	204 Synth Harp	279 Clean Guitar Pad
062 Synth Brass 1	130 Pipa	Electronic Music	280 Western Pad
063 Synth Brass 2	131 Erhu	205 Baritone Trumpet	281 Sci-fi Pad
Clarinet	132 Gaochu	206 Trumpet Ensemble	282 Metal Sci-fi Pad
064 Soprano Sax	133 Suona	207 Rhythm Trumpet	283 Clarinet Pad
065 Alto Sax	134 Dasuo	208 High Trumpet	284 Electronic Dance Pad
066 Tenor Sax	135 Guzheng	209 Synth Trumpet	Asian Synthetic
067 Baritone Sax	136 Sanxian	210 Bass Trombone	285 Double Kalimba
068 Oboe	137 Guqin	211 Trombone Ensemble	286 Bright Kalimba
069 English Horn	138 Xiao	212 Rhythm Trombone	287 Crystal Kalimba

Appendix

I. Timbre Table

88 Synth Kalimba	346 Heavy Metals Pad	403 Magic Timpani
89 Electronic Bagpipe	347 Bright Clarinet	404 Oriental Timpani
90 Wind Bagpipe	348 Noise Lead	405 Fantasy Strings
91 High Bagpipe	349 Classical Electronic	406 Solo Synthesizer
92 Bright Bagpipe	Digital Synthesizer	407 Distorted Ensemble
93 Orchestra Bagpipe	350 Rock Piano	408 Heavy Rock Ensemble
94 Baritone Bagpipe	351 Dynamic Piano	409 Magic Ensemble
95 Environmental Shanai	352 Rock Clavichord	410 Jump Syn String Ensemble
96 Baritone Shanai	353 Baritone Celesta	411 Electronic Chorus "ah"
97 Tenor Shanai	354 Magic Metallophone	412 Electronic Chorus "oh"
98 High Shanai	355 Heavy Metal Glockenspiels	413 Chorus Synthesizer
99 Synth Shanai	356 Digital Organ	414 Heavy Rhythm Syn Voice
00 Bright Steel Drums	357 Clear Organ	415 Digital Voice
01 Steel Drums Lead	358 Baritone Organ	416 Music Vocal Ensemble
02 Lyric Steel Drums	359 Reed Synthesizer	417 Magic Ensemble
03 Orchestra Steel Drums	360 Reed Lead	418 Vocal Percussion Ensemble
04 Synth Steel Drums	361 Metal Twelve String Guitar	419 Oriental Synthetic Voice
05 Electric	362 Magic Guitar	Western Electronic
06 Rhythm Electric Piano	363 Diplophonia Guitar	420 Dynamic Trumpet
07 Baritone Xylophone	364 Reggae Guitar	421 Heavy Rock Trumpet
08 Clean Piano	365 Hawaii Guitar	422 Traditional Trombone
09 Bright Dulcimer	366 Campus Jazz Guitar	423 Magic Trombone
10 Rhythm Grand Piano	367 Hall Electric Guitar	424 Heavy Metal Tuba
11 Marimba Harp	368 Slap Guitar	425 Digital Tuba
12 Synth Xylophone	369 Digital Synthetic Guitar	426 Clear Syn Tuba
13 Psychedelic Jazz Guitar	370 Dead Nuclear Guitar	427 Bass France
14 Rhythm Electric Guitar	371 Heavy Bass Electric Guitar	428 Fantasy France
15 Baritone Piccolo	372 Bright Jazz Guitar	429 Solo Copper Pipe
16 Pan Flute Pad	373 Modern Electric Guitar	430 Distortion Syn Tube
17 Soft Pad	374 Solo Electric Guitar	431 Heavy Rock Sax
18 Fierce Organ	375 Bar Electric Guitar	432 Sax Magic
19 Fantasy Clarinet	376 Sax Electric Guitar	433 Jump Sax
20 Bright Rhythm	377 Guitar Noise	434 Electronic Tenor Sax
21 Synth Brass Ensemble	378 Electric Guitar Reverb	435 Mechanical Sax
22 Electronic Xylophone	379 Dynamic Guitar	436 Baritone Sax synthesizer
23 Atmosphere Pizzicato	Bass Synthesizer	437 Heavy Rhythm Alto Sax
24 Rhythm Clarinet	B80 The Bass	438 Baritone Sax
25 Bright Dulcimer	381 Bright Bass	439 Solo Baritone Sax
26 Double British pipe	382 Heavy Bass	440 Distortion Oboe
27 Bright Bassoon	383 Magic Bass	441 Heavy Rock Oboe
28 Electronic Synth Bassoon	384 The Bass Band	442 Magic British Tube
29 Rock Wind	385 National Bass	443 Jump British Tube
30 Synthetic Effect Wind 1	386 The Bass Strings	444 Electronic Bar
31 Synthetic Effect Wind2	387 British Pipe Bass	445 Mechanical Bar
32 Synthetic Effect Wind3	388 East Bass	446 Dynamic Clarinet
33 Synthetic Effect Wind4	389 Traditional Bass	447 Heavy Rock Clarinet
34 Synthetic Fiddle	Science Fiction Electronic String	448 Traditional Piccolo
35 Special Echo FX	390 Fantasy Violin	449 Magic Piccolo
36 Electronic Organ Lead	391 Solo Violin	450 Heavy Metal Flute
37 Church Organ Lead	392 Distortion Violin	451 Digital Flute
38 Science Fiction Classic	393 Heavy Rock Viola	452 Synthetic Voiceless Clari
39 Electronic Bagpipe	394 Magic Cello	453 Baritone Panpipe
40 String Ensemble Pad	395 Jumping Cello	454 Dynamic Ruler Eight
41 Electronic Wind Pad	396 Electronic Hook String	455 Heavy Rock Lead
42 Organ Electric Guitar	397 Mechanical Hook	456 Magic Lead
43 Jazz Electric Piano	398 Pizzicato Synthesizer	457 Magic Voice Synthesizer
44 Rock Timpani	399 Heavy Pizzicato Rhythm	458 Synthesis Heavy Metals
45 Fantasy Atmosphere	400 Fast Harp	459 Digital Synth Lead
	401 Heavy Rock Harp	Wooden Pipe Synthesizer
	402 Large Electronic Drum	460 Wooden Marimba

II. Rhythm Table

March	065 Swing5	135 Soul Psychedelic 2	202 Pop Bequine
000 March 1	066 Swing6	136 Soul Psychedelic 3	203Pop Salsa
001 March 2	Latin	137 Soul Psychedelic 4	204Pop Merengue1
002 March 3	067 Baiao	138 Psychedelic Swing	205 Pop Merengue2
003 March 4	068 Bolero	139 Soft Rock	206 Pop Vallenato
national rhythm	069 Bossanova 1	140 Post Rock	207 Pop Plena
004 Nation 1	070 Bossanova2	Classical Beat	208 Pop Lambada
005 Nation 2	071 Bossanova3	141 Classical Beat1	209Pop Bachata 1
006 Nation 3	072 Bossanova4	142 Classical Beat2	210 Pop Bachata 2
007 Nation 4	073 Bossanova5	143 Classical Beat3	211 Pop Bachata 3
008 Nation 5	074 Calypso	144 Classical Beat4	212 Enthusiasm Samba1
009 Nation 6	075 Habanera	145 Classical Beat5	213 Enthusiasm Samba2
010 Nation 7	076 Reggae 1	146 Classical Beat6	214 Enthusiasm Samba3
011 Nation 8	077 Reggae2	147 Classical Beat7	215 Enthusiasm Samba4
012 Nation 9	078 Jorpo	Modern Pop Music	216 Enthusiasm Samba5
013 Nation 10	079 Tango 1	148 New Century 1	217 Enthusiasm Samba6
Slow Soul	080 Tango2	149 New Century 2	East March
014 Slow Soul 1	081 Tango3	150 New Century 3	218 East March 1
015 Slow Soul 2	082 Mambo 1	151 Modern Dance 1	219 East March 2
016 Slow Soul 3	083 Mambo 2	152 Modern Dance 2	220 East March 3
Funky Soul	084 Rhumba 1	153 Modern Dance 3	221 East March 4
017 Funky Soul 1	085 Rhumba 2	Brillpop	Light Polka
018 Funky Soul 2	086 Rhumba 3	154 Brillpop 1	222 Light Polka 1
019 Funky Soul 3	087 Rhumba 4	155 Brillpop 2	223 Light Polka 2
020 Funky Soul 4	088 Rhumba 5	156 Brillpop 3	224 Light Polka 3
021 Funky Soul 5	089 Bequine	Blues	World Music
022 Funky Soul 6	090 Salsa	157 Folk Blues	225 World 1
023 Funky Soul 7	091 Merengue 1	158 Country Blues	226 World 2
024 Funky Soul 8	092 Merengue 2	159 Electric Blues	227 Blue
025 West Coast	093 Vallenato	160 Soul Blues	228 Country Rock 1
026 Euro Soul	094 Plena	Ballad	229 Country Rock 2
16 Beat	095 Lambada	161 Classical Ballad 1	230 Country Rock 3
027 16 AOR 1	096 Bachata 1	162 Classical Ballad 2	231 East
028 16 AOR 2	097 Bachata 2	163 Light Ballad	232 China Pop 1
029 16 Beat 1	098 Bachata 3	164 Rhythm Ballad	233 China Pop 2
030 16 Beat 2	099 Samba 1	House	234 China Pop 3
031 16 Beat 3	100 Samba 2	165 Pop House 1	235 China Pop 4
032 16 Ballad 1	101 Pop Samba 1	166 Pop House 2	236 China Pop 5
033 16 Ballad 2	102 Pop Samba 2	167 Pop House 3	237 China Pop 6
Pop Dance	103 Pop Samba 3	168 Deep House	238 China Pop 7
034 Pop Dance 1	104 Jazz Samba	169 Acid House	239 China Pop 8
035 Pop Dance 2	Polka	170 Progressive House	240 China Pop 9
036 Pop Dance 3	105 Polka 1	171 Epic House	241 China Pop 10
037 Shuffle 1	106 Polka2	New Age Latin	242 China Pop 11
038 Shuffle 2	107 Polka3	172 New Age Latin 1	243 China Pop 12
039 S Shuffle	C & W	173 New Age Latin 2	244 China Pop 13
Rock	108 C & W 1	174 Blues Mambo	245 Thaiand Pop
040 Hard Rock	109 C & W 2	Jazz Swing	246 West Band
041 Slow Rock 1	110 Bluegrass	175 Jazz Swing 1	Class Waltz
042 Slow Rock 2	111 Country 1	176 Jazz Swing 2	247 Class Waltz 1
Classics Beat	112 Country 2	177 Jazz Swing 3	248 Class Waltz 2
043 Pop Classic	113 Country 3	178 Jazz Swing 4	249 Class Waltz 3
044 Blues	Middle East	179 Jazz Swing 5	250 Class Waltz 4
045 Twist	114 Middle East	Electronic	251 Jazz Class Waltz 1
046 Hard 3 Beat	115 China 1	180 Electro 1	252 Jazz Class Waltz 2
Love Ballad	116 China 2	181 Electro 2	253 Jazz Class Waltz 3
047 Love Ballad 1	117 China 3	182 Electro 3	254 Country Class Waltz 1
048 Love Ballad 2	118 Thailand	183 Electro 4	255 Country Class Waltz 2
049 Love Ballad 3	Waltz	184 Electro 5	Pop Rock
050 Love Ballad 4	119 Waltz 1	185 Big Beat 1	256 Pop Rock 1
Unique Classes	120 Waltz 2	186 Big Beat 2	257 Pop Rock 2
051 Euro Beat	121 Waltz 3	187 Downtempo 1	258 Pop Rock 3
052 House 1	122 Waltz 4	188 Downtempo 2	259 Pop Rock 4
053 House 2	123 Jazz Waltz 1	189 Americana Country	
054 Swing Beat	124 Jazz Waltz 2	190 Pop reggae 1	
055 B Ballad	125 Jazz Waltz 3	191 Pop reggae 2	
056 Step	126 Country Waltz 1	192 Rock Tango 1	
Band	127 Country Waltz 2	193 Rock Tango 2	
057 Big Band 1	New-Soul 1	194 Rock Tango 3	
058 Big Band 2	128 New-Soul 1	195 Western Swing 1	
059 Cobmo 1	129 New-Soul 2	196 Western Swing 2	
060 Cobmo 2	130 New-Soul 3	Pop Latin	
Swing	Psychedelic	197 Pop Rhumba 1	
061 Swing 1	131 Psychedelic 1	198 Pop Rhumba 2	
062 Swing 2	132 Psychedelic 2	199 Pop Rhumba 3	
063 Swing 3	133 Goth Psychedelic	200 Pop Rhumba 4	
064 Swing 4	134 Soul Psychedelic 1	201 Pop Rhumba 5	

Appendix