


**REDMOND**

# COFFEE GRINDER

## USER MANUAL

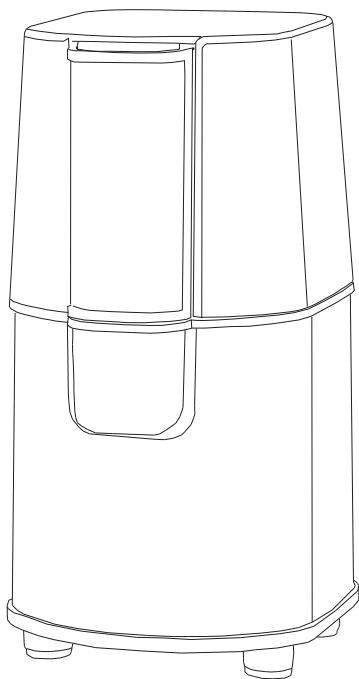

CG005 NA  
Model: NS-3020S

## **DEAR CUSTOMER!**

Before using this electrical appliance, carefully read this manual which contains important information regarding care and operation for your safety.

### **Safety measures**

Read this instruction manual carefully before using the unit and keep it in a safe place for reference. Use the unit for its intended purpose only, as specified in this manual. Mishandling of the unit may lead to its breakage and cause harm to the user or damage to his/her property. To avoid the risk of fire, electric shock and to prevent injury, observe the following safety measures:

- Read all instructions before use or cleaning.
- Before connecting the unit to the power supply, make sure that the voltage specified on the unit corresponds to your home's power supply voltage.
- Close supervision is necessary when the appliance is used near children.
- Do not immerse the cord, plug, or any part of the appliance in water or other liquids.
- Do not let the cord hang over edge of table or counter or touch hot surfaces.
- Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. If the appliance is damaged or broken, do not repair yourself.
- If the power cord or the plug is broken or damaged, do not repair or change by yourself, please send the appliance to qualified service center for repair or service.
- When unplugging the unit, pull from the plug not the cord.
- Do not touch the plug or the body of the appliance with wet hands.

- To prevent the risk of electric shock, do not use the appliance outdoors.
- Do not cover any part of the appliance with metal or cloth, it may cause overheating.
- Do not use the unit near heat sources or open flame.
- Do not use any accessories other than manufacturer recommended accessories.
- Do not immerse the unit body into water or any other liquids.
- Clean the appliance regularly.
- Close supervision is necessary when used near children or disabled persons.
- This appliance is not intended for use by persons (and also young children) with reduced physical or mental capacity, or lack of experience and knowledge, except in the immediate presence of authorized persons responsible for their safety, providing the necessary instructions for the use of the appliance.
- This appliance may be used by children aged 8 years and over and persons with limited physical, sensory or mental capabilities if supervised or given instructions on how to use the appliance in a safe way, where hazards have been explained carefully. Children should not play with the device. Cleaning and maintenance should not be performed by children without supervision.
- Keep this appliance and the power cord out of reach of children younger than 8 years of age.
- Do not leave children unattended around the appliance to prevent the use of the unit as a toy.
- Regularly check the power plug and power cord integrity for damages.

- Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and return the appliance to any authorized service center from the contact address list given in the warranty certificate for repair.
- For environmental protection do not throw out the unit with usual household waste after its service life expiration; return to any specialized service center for safe recycling.
- Keep the unit out of reach of children and disabled persons.
- Do not use this appliance for any use other than its intended use. This appliance is for household use only.
- Never leave the appliance unattended when it is operating.
- Protect the device from the effects of adverse climatic conditions, humidity and heat sources.
- Before putting the appliance away for long-time storage or before cleaning. Unplug it from the outlet and let the appliance cool down.
- Do not leave the device unattended when it is switched on.
- To avoid overloading the electrical power supply, do not switch on multiple power supplies at the same time.
- Do not use the appliance near baths, sinks or other containers filled with water.
- If the appliance falls to the water, immediately disconnect it from the power supply. In this case, do not immerse your hands in water. Before using the appliance further, it should be checked by a qualified technician.
- Do not use non-standard power supplies or other connecting devices.
- For the safety of children, do not leave plastic bags that are used as packaging around without supervision.

**Attention! Do not allow children to play with plastic bags or packaging film. There is a danger of suffocation!**

- Protect the appliance from drops and bumps.
- The temperature in the room where the appliance is used must be in the range of +5°C to +40°C.
- Do not allow children to touch the device body and the cord while the device is in operation.
- During use and breaks between uses, place the unit out of reach of children.

**ATTENTION! The coffee grinder is only for coffee beans!**

**ATTENTION! The capacity of the grinder is 80 grams. Do not fill the grain container to the brim.**


**ATTENTION! The coffee grinder can work up to 60 seconds continuously. After this, it is necessary to turn off the grinder for at least one minute, since the motor must have time to cool down.**

- Always unplug the device from the power supply if it is left unattended, as well as before assembly and disassembly or cleaning.
- The device is not intended for use by persons (including children) with reduced physical, sensory or mental abilities, or if they have no experience or knowledge, if they are not supervised or instructed to use the device by a person responsible for their safety.
- Children should be supervised to avoid playing with the device.

**ATTENTION! KEEP THE APPLIANCE DRY.**

**THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY,  
ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION  
AREAS AND WORKSPACES IS PROHIBITED.**

## Description

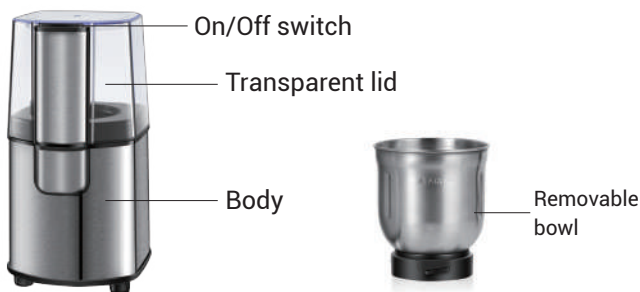

## Technical specifications

Nominal power: 160 W

Maximum power: 160 W

Power Supply: 120V, 60Hz

Capacity: 80g

Protection Class (from electric shock): II

## Unpacking

- After shipping or storage at a low temperature for extended periods of time keep the appliance at room temperature for at least three hours before switching the device on.
- Unpack the unit completely and remove any stickers that can prevent the unit from operating correctly.

## Before first use

- Check the unit for damage; do not use it in case of damage.
- Before switching the unit on, make sure that your homes power supply voltage corresponds to the unit operating voltage.

- Unwind the power cord completely.
- Remove the lid.
- Wipe the coffee bowl, blades, body with a slightly damp cloth, and then wipe them dry.

**ATTENTION! The cutting edges of the coffee grinder knives are very sharp and dangerous. Handle them very carefully!**

- Wash the lid with warm water and a neutral detergent, rinse and dry it thoroughly.
- Place coffee grinder on a firm, flat surface.

## **Operation**

- 1.Place the coffee grinder on a flat surface.
- 2.Remove the lid by unscrewing it counterclockwise.
- 3.Pour the required amount of grains into the container. The capacity of the coffee grinder is 80 grams. Do not fill the grain container above the MAX mark that is indicated inside the bowl.
- 3.Install the lid on the device body. Turn the cover clockwise until it is fixed and make sure the lid is securely locked.
- 4.Connect the coffee grinder to the power supply.
- 5.While holding the coffee grinder, press and hold the On/Off switch. The coffee mill knives will spin while the button is pressed. After the grinding, release the On/Off switch, wait for the knives to stop completely and pull out the plug from the electrical outlet.

**WARNING! The coffee grinder can only work for up to 60 seconds continuously. After that, you need to turn off the coffee grinder for at least one minute to allow the engine time to cool down.**

- 6.Remove the lid by turning it counterclockwise, and pour

the ground coffee into a suitable container.

7.Clean the appliance.

Recommendation: for the best results, we recommend using the appliance as follows: briefly press and hold On/Off switch (about 2 seconds), then release and allow the blades to stop spinning, then press and hold the On/Off switch again for 2 seconds and release. Repeat this sequence until you have achieved the desired degree of grinding.

**Cleaning ATTENTION!** The cutting edges of the coffee grinder knives are very sharp and dangerous. Handle them very carefully!

- Unplug the appliance before cleaning.
- Wipe the coffee bowl, blades, body with a slightly damp cloth, and then wipe them dry.
- Wash the lid with warm water and a neutral detergent, rinse and dry it thoroughly.
- Do not immerse the appliance, the power cord, the power plug into water or other liquids.
- Do not place the appliance in the dishwasher.

**DO NOT IMMERSE THE UNIT INTO ANY LIQUIDS,  
DO NOT WASH IT UNDER A WATER JET OR IN  
A DISHWASHING MACHINE.**

## **Storage**

- Before putting the appliance away for long term storage, you need clean it and thoroughly dry it.
- Keep the appliance in a dry cool place out of reach of children and disabled persons.